

 
 
 
 


ITEM#: 499-OT9001



DESCRIPTION : UPH CONSOLE STOOL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List Below.




Parts List

①  Chair Seat :1PC	②  Right Front Leg (With 2 holes) 1PC	③  Left Front Leg (With 2 holes) 1PC	④  Right Back Leg (With 1 hole) 1PC	⑤  Left Back Leg (With 1 hole) 1PC	⑥  Side Stretcher 2PCS	⑦  Front Stretcher 1PC
---	--	---	--	--	--	--

  Hardware List

A  Bolt Ø1/4" -20 x 2-5/32" :8PCS	B  Spring Washer Ø1/4" :8PCS	C  Flat Washer (Ø1/4" x 19m):8PCS	D  Allen Key M4 :1PC	E  Screw M4 x 45mm : 6PCS
---	--	--	--	---

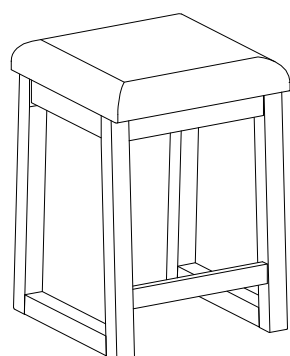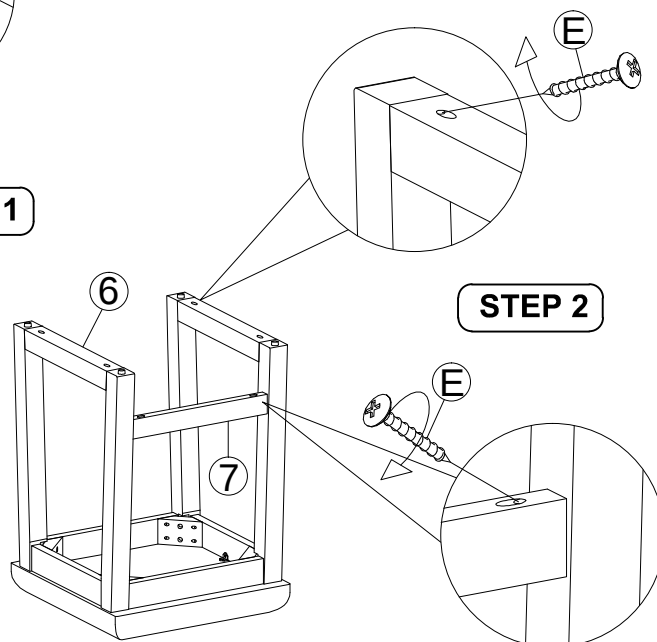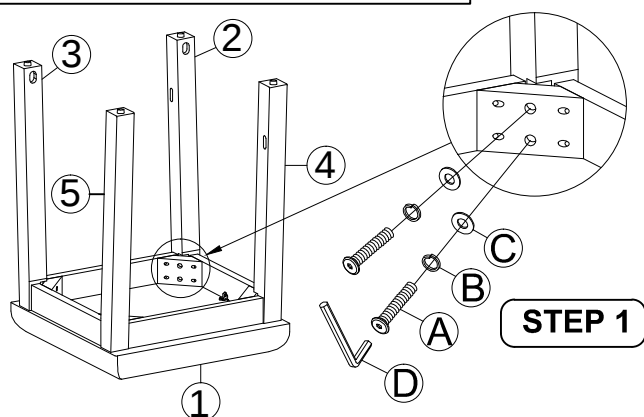NOTE: Do not fully tighten Bolts until the assembly is completed.



Chair Assembly Tips

Having some trouble putting together your new furniture? we can help! The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:

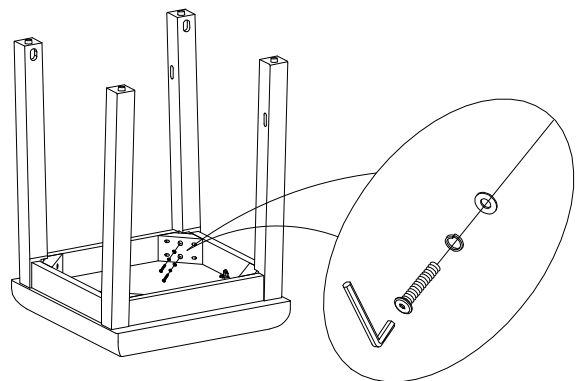
ISSUE: CHAIR IS UNLEVELED

Cause:

. Chairs can be wobbly or unlevel if one or more bolts are fully tightened before all bolts are attached and/or tightened.

Solution:

. Loosen each bolt in the seat box (front legs, back corner- blocks, and back apron) until they're finger tight. Place the chair upright on the floor. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.



Loosen Bolts until adjustable by hand

Cause:

.Chair can be wobbly or unlevel if assembly is completed in a different room or surface than where the product is intended to primarily reside.

Solution:

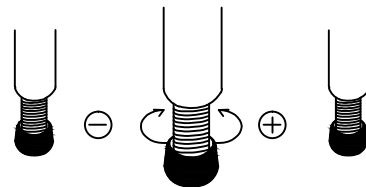
When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

Cause:

.Chair can be uneven in height if built-in levelers or glides are not adjusted properly.

Solution:

.Place your chair in the desired location so that when you adjust the leg heights, they will match your floor terrain. If your chair has threaded levelers, rotate clockwise to increase the leg height and Adjust each chair leg one by one until the chair sits evenly on the floor.



ISSUE: HOLES ARE MISALIGNED

Cause:

.This issue can occur when some bolts are tightened fully before all the bolts are tightened or attached.

Solution:

.Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.