

 







ASSEMBLY INSTRUCTION


ITEM # : 581 - TV47

DESCRIPTION : 47" TV CONSOLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below:


Component List			
NO.	Descriptions		Qty.
1	Legs		4
2	Center Support Leg		1

3				
Assembly Hardware Pack				
NO.	Descriptions			Qty.
A	JCBC Bolt	M6 x 40MM (Blk)		8
B	Spring Washer	M6 (Blk)		8
C	Flat Washer	M6 (Blk)		8
D	Allen Wrench	M4		1

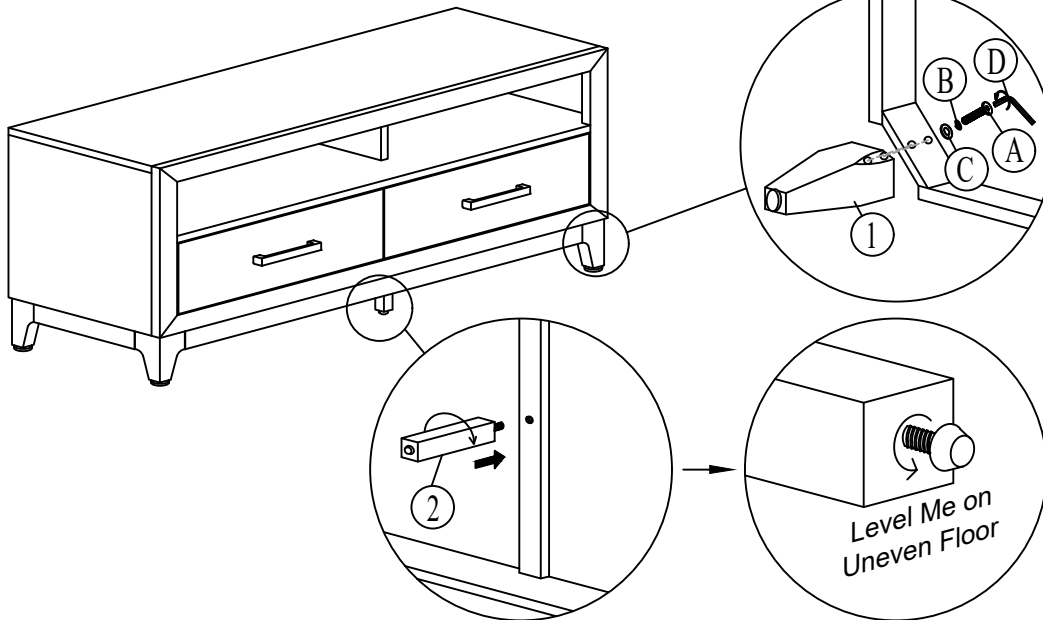


TO REMOVE THE DRAWER:

TO INSTALL THE DRAWER:

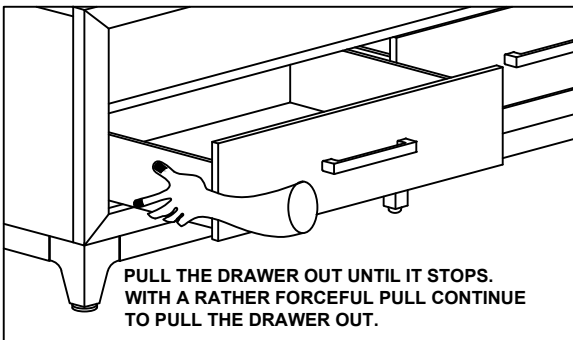

PULL THE DRAWER OUT UNTIL IT STOPS. WITH A RATHER FORCEFUL PULL CONTINUE TO PULL THE DRAWER OUT.

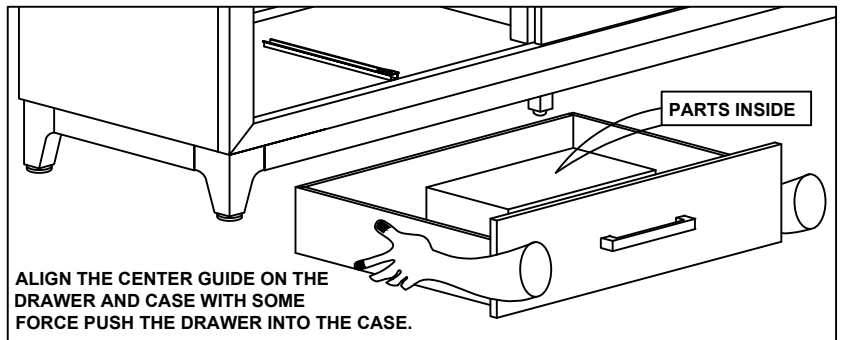

ALIGN THE CENTER GUIDE ON THE DRAWER AND CASE WITH SOME FORCE PUSH THE DRAWER INTO THE CASE.

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.