

Summit[®]




GAS BARBECUE

LPG Gas Barbecue Owner's Guide

420

#56231

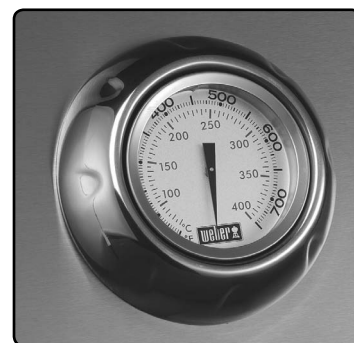

**YOU MUST READ THIS OWNERS GUIDE
BEFORE OPERATING YOUR GAS BARBECUE.**

⚠ DANGER

If you smell gas:

- 1. Shut off gas to the appliance.**
- 2. Extinguish any open flames.**
- 3. Open lid.**
- 4. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.**

Leaking gas may cause a fire or explosion which can cause serious bodily injury or death, or damage to property.

⚠ WARNING:

- 1. Do not store spare LPG cylinder within 10 feet (3m) of this appliance.**
- 2. Do not store or use petrol or other flammable liquids or vapors within 25 feet (8m) of this appliance.**

⚠ WARNING: Follow all leak-check procedures carefully in this manual prior to barbecue operation. Do this even if the barbecue was dealer-assembled.

NOTICE TO INSTALLER: These instructions must be left with the owner and the owner should keep them for future use.

**THIS GAS APPLIANCE IS DESIGNED FOR
OUTDOOR USE ONLY.**

⚠ WARNING: Do not try to light this appliance without reading the Ignition Instructions section of this manual.

WARNINGS

⚠ DANGER

Failure to follow the Dangers, Warnings and Cautions contained in this Owner's Manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

⚠ WARNINGS


- ⚠ Follow regulator connection instructions for your type of gas barbecue.
 - ⚠ Do not store a spare or disconnected LPG cylinder under or near this barbecue.
 - ⚠ Do not put a barbecue cover or anything flammable on or in the storage area under the barbecue.
 - ⚠ Improper assembly may be dangerous. Please follow the assembly instructions carefully.
 - ⚠ After a period of storage, and/or nonuse, the Weber® gas barbecue should be checked for gas leaks and burner obstructions before use. See instructions in this manual for correct procedures.
 - ⚠ Do not operate the Weber® gas barbecue if there is a gas leak present.
 - ⚠ Do not use a flame to check for gas leaks.
 - ⚠ Combustible materials should never be within 24 inches (61 cm) of the back or sides of your Weber® gas barbecue.
 - ⚠ Do not put a barbecue cover or anything flammable on, or in the storage area under the barbecue.
 - ⚠ Your Weber® gas barbecue should never be used by children. Accessible parts of the barbecue may be very hot. Keep young children away while it is in use.
 - ⚠ You should exercise reasonable care when operating your Weber® gas barbecue. It will be hot during cooking or cleaning and should never be left unattended, or moved while in operation.
 - ⚠ Should the burners go out while in operation, turn all gas valves off. Open the lid and wait five minutes before attempting to relight, using the lighting instructions.
 - ⚠ Do not use charcoal or lava rock in your Weber® gas barbecue.
 - ⚠ Never lean over open barbecue or place hands or fingers on the front edge of the cooking box.
 - ⚠ Should a grease fire occur, turn off all burners and leave lid closed until fire is out.
 - ⚠ Do not enlarge valve orifices or burner ports when cleaning the valves or burners.
 - ⚠ The Weber® gas barbecue should be thoroughly cleaned on a regular basis.
 - ⚠ LPG gas is not natural gas. The conversion or attempted use of natural gas in a LPG unit or LPG gas in a natural gas unit is dangerous and will void your warranty.
 - ⚠ Do not attempt to disconnect any gas fitting while your barbecue is in operation.
 - ⚠ Use heat-resistant barbecue mitts or gloves when operating barbecue.
 - ⚠ Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.
 - ⚠ Do not use this barbecue unless all parts are in place. The unit must be properly assembled according to the assembly instructions.
 - ⚠ Do not put a fuel tank inside the cabinet.
 - ⚠ Do not build this model of barbecue in any built-in or slide in construction. Ignoring this Warning could cause a fire or an explosion that can damage property and cause serious bodily injury or death.
- LPG GAS UNITS ONLY:**
- ⚠ Use the pressure regulator and hose assembly that is supplied with your Weber® gas barbecue.
 - ⚠ Do not attempt to disconnect the gas regulator and hose assembly or any gas fitting while your barbecue is in operation.
 - ⚠ A dented or rusty LPG cylinder may be hazardous and should be checked by your LPG supplier. Do not use a LPG cylinder with a damaged valve.
 - ⚠ Although your LPG cylinder may appear to be empty, gas may still be present, and the LPG cylinder should be transported and stored accordingly.
 - ⚠ If you see, smell or hear the hiss of escaping gas from the LPG cylinder:
 1. Move away from LPG cylinder.
 2. Do not attempt to correct the problem yourself.
 3. Call your fire department.

TABLE OF CONTENTS

WARNINGS	2	SIDE BURNER IGNITION & USAGE	20
TABLE OF CONTENTS	3	SIDE BURNER IGNITION	20
EXPLODED VIEW	4	TO EXTINGUISH	20
EXPLODED VIEW LIST	5	SIDE BURNER MANUAL IGNITION	21
WARRANTY	6	TO EXTINGUISH	21
GENERAL INSTRUCTIONS	6	TROUBLESHOOTING	22
STORAGE AND/OR NON-USE	6	SIDE BURNER TROUBLESHOOTING	22
OPERATING.....	6	GRILL OUT™ HANDLE LIGHT TROUBLESHOOTING	22
CONSIDERATIONS FOR LOCATING YOUR GRILL	7	MAINTENANCE	23
GAS INSTRUCTIONS	8	CLEANING.....	23
INSTALL THE FUEL SCALE ASSEMBLY.....	9	WEBER® SPIDER/INSECT SCREENS	23
PURCHASE A FULL CYLINDER OF GAS FROM YOUR GAS DEALER	9	BURNER TUBE CLEANING	23
CONNECTING THE LPG CYLINDER	10	REPLACING MAIN BURNERS	24
LEAK CHECK PREPARATION	11	SIDE BURNER MAINTENANCE	26
CHECK FOR GAS LEAKS	11	ANNUAL MAINTENANCE	26
REFILLING THE LPG CYLINDER	13		
LIGHT FEATURES	13		
WEBER® GRILL OUT™ HANDLE LIGHT	13		
BEFORE USING THE BARBECUE	14		
FUEL LEVEL	14		
SLIDE-OUT GREASE TRAY AND DISPOSABLE DRIP PAN	14		
HOSE INSPECTION	14		
SNAP IGNITION OPERATION	15		
MAIN BURNER IGNITION & USAGE	16		
MAIN BURNER IGNITION	16		
TO EXTINGUISH	16		
MAIN BURNER MANUAL IGNITION	17		
TO EXTINGUISH	17		
GRILLING TIPS & HELPFUL HINTS	18		
PREHEATING	18		
COVERED COOKING	18		
DRIPPINGS AND GREASE	18		
FLAVORIZER® SYSTEM	18		
COOKING METHODS	19		
DIRECT COOKING	19		
INDIRECT COOKING	19		

EXPLODED VIEW

SUMMIT 420_LP_AU_051112

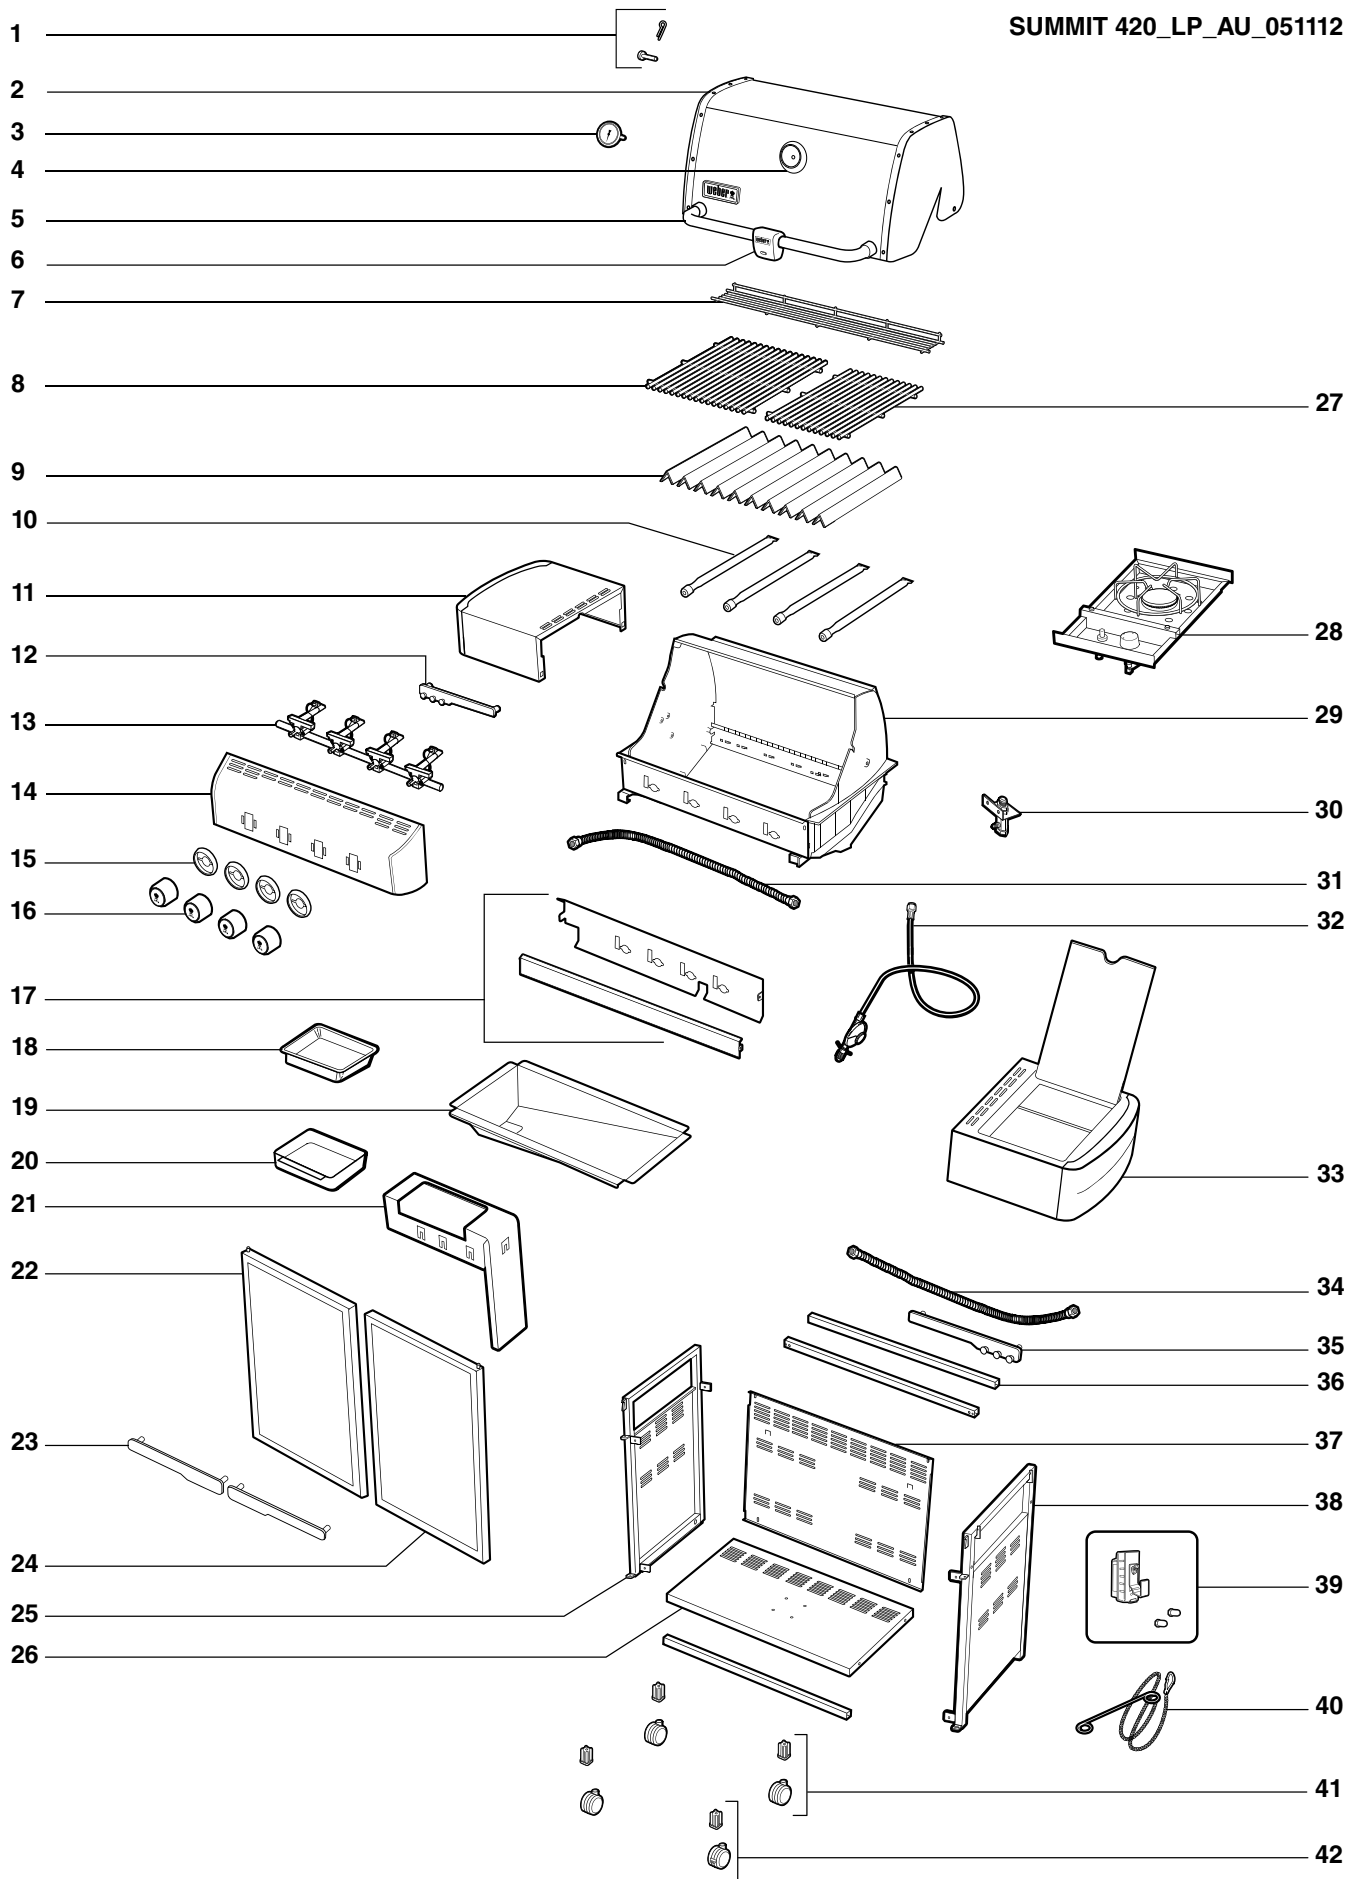

EXPLODED VIEW LIST

1. Shroud Hardware	15. Knob Bezel	29. Cookbox
2. Shroud	16. Knob	30. Bulkhead
3. Thermometer	17. Water Baffle / Heat Shield	31. Manifold Hose
4. Thermometer Bezel	18. Disposable Drip Pan	32. Hose / Regulator
5. Handle	19. Slide Out Grease Tray	33. Side Burner Assembly
6. Grill Out™ Handle Light	20. Catch Pan	34. Side Burner Gas Line
7. Warming Rack	21. Catch Pan Holder	35. Right Tool Holder
8. Cooking Grate	22. Left Door	36. Frame Support
9. Flavorizer® Bars	23. Door Handles	37. Back Panel
10. Burner Tubes	24. Right Door	38. Right Frame Panel
11. Left Side Table Assembly	25. Left Frame Panel	39. Fuel Scale Assembly
12. Left Tool Holder	26. Bottom Panel	40. Matchstick Holder
13. Manifold	27. Cooking Grate	41. Caster
14. Control Panel	28. Side Burner	42. Locking Caster

WARRANTY

Weber-Stephen Products LLC (Weber) hereby warrants to the ORIGINAL PURCHASER of this Weber® gas barbecue that it will be free of defects in material and workmanship from the date of purchase as follows:

Aluminum castings:	25-years (2-years on paint; excludes fading)
Stainless steel Shroud:	25-years
Porcelain-enamelled shroud:	25-years
Stainless steel burners tubes:	10-years
Stainless steel cooking grates:	5-years no rust through or burn through
Stainless steel Flavorizer® bars:	5-years no rust through or burn through
Porcelain-enamelled cast-iron cooking grates:	5-year no rust through or burn through
Porcelain-enamelled cooking grates:	3-years no rust through or burn through
Porcelain-enamelled Flavorizer® bars:	2-years no rust through or burn through
Infrared Rotisserie Burner:	2-years
All remaining parts:	2-years

when assembled and operated in accordance with the printed instructions accompanying it. Weber may require reasonable proof of your date of purchase. THEREFORE, YOU SHOULD RETAIN YOUR SALES SLIP OR INVOICE.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits given under this Limited Warranty are in addition to other rights and remedies you have under the Australian Consumer Law in relation to this Weber® gas barbecue.

This Limited Warranty shall be limited to the repair or replacement of parts that prove defective under normal use and service and which on examination shall indicate, to Weber's satisfaction, they are defective. Before returning any parts, contact the Customer Service Representative in your area using the contact information on our website. If Weber confirms the defect and approves the claim, Weber will elect to replace such parts without charge. If you are required to return defective parts, transportation charges must be prepaid. Weber will return parts to the purchaser, freight or postage prepaid.

This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, vandalism, improper installation or improper maintenance or service, or failure to perform normal and routine maintenance, including but not limited to damage caused by insects within the burner tubes, as set out in this owner's manual.

Deterioration or damage due to severe weather conditions such as hail, hurricanes, earthquakes or tornadoes, discoloration due to exposure to chemicals either directly or in the atmosphere, is not covered by this Limited Warranty.

There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness are limited in duration to the period of coverage of this express written Limited Warranty. Some regions do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you.

Weber is not liable for any special, indirect or consequential damages. Some regions do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

Weber does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment; and no such representations are binding on Weber.

This Limited Warranty applies only to products sold at retail.

WEBER-STEPHEN PRODUCTS LLC
R. McDonald Co. PTY.LTD.
A.C.N., 007 905 384
104 South Terrace
Adelaide, SA 5000
61.8.8221.6111

WEBER-STEPHEN PRODUCTS LLC
6 Maurice Road
Penrose
Auckland, 1061
New Zealand

Visit www.weber.com®, select your country of origin, and register your barbecue today. ♦

GENERAL INSTRUCTIONS

Your Weber® gas barbecue is a portable outdoor cooking appliance. With the Weber® gas barbecue you can grill, barbecue, roast and bake with results that are difficult to duplicate with indoor kitchen appliances. The closed lid and Flavorizer® bars produce that "outdoor" flavor in the food.

The Weber® gas barbecue is portable so you can easily change its location in your yard or on your patio. Portability means you can take your Weber® gas barbecue with, if you move.

LPG gas is easy to use and gives you more cooking control than charcoal fuel.

- These instructions will give you the minimum requirements for assembling your Weber® gas barbecue. Please read the instructions carefully before using your Weber® gas barbecue. Improper assembly can be dangerous.
- Not for use by children.
- This Weber® gas barbecue is designed for use with LPG gas only. Do not use with natural (piped in city) gas. The valves, orifices, hose and regulator are for LPG gas only.
- Do not use with charcoal fuel.
- Check that the area under the control panel and the bottom tray are free from debris that might obstruct the flow of combustion or ventilation air.
- The areas around the LPG cylinder must be free and clear from debris.
- This appliance shall only be used in an above ground, open-air situation with natural ventilation, without stagnant areas, where gas leakage and other products of combustion are rapidly dispersed by wind and natural convection.
- Refer to data plate on barbecue for gas type, consumption, pressures and injector sizing details.
- The pressure regulator supplied with the Weber® gas barbecue must be used. This regulator is set for 2.75 kPa.
- Use only AGA approved hose assemblies.
- The length of hose must not exceed 1.5 meters.
- We recommend that you replace the gas hose on your Weber gas barbecue every 5 years. Some countries may have requirements that the gas hose be replaced in less than 5 years, thus that country's requirement would take precedent.
- Any parts sealed by the manufacturer must not be altered by the user.
- Any modification of the appliance may be dangerous.
- Only a nationally approved low-pressure hose and regulator must be used. ♦

OPERATING

- ⚠ **WARNING: Only use this barbecue outdoors in a well-ventilated area. Do not use in a garage, building, breezeway or any other enclosed area.**

- ⚠ **WARNING: Never use your Weber® gas barbecue under an overhead combustible surface.**
- ⚠ **WARNING: Your Weber® gas barbecue is not intended to be installed in or on recreational vehicles and/or boats.**
- ⚠ **WARNING: Do not use the barbecue within 61cm (24 inches) of combustible materials. This includes the top, bottom, back or sides of the grill.**
- ⚠ **WARNING: The entire cooking box gets hot when in use. Do not leave unattended.**
- ⚠ **WARNING: Keep any electrical supply cord and the fuel supply hose away from any heated surface.**
- ⚠ **WARNING: Keep the cooking area clear of flammable vapors and liquids such as gasoline, alcohol, etc., and combustible materials.**
- ⚠ **WARNING: Never store an extra (spare) LPG cylinder under or near the Weber® gas barbecue. Refer to AS5601.1, local authority, gas, electricity, and other relevant statutory regulations for installation and use. ♦**

STORAGE AND/OR NON-USE

- The gas must be turned off at the liquid propane gas cylinder when the Weber® gas barbecue is not in use.
- When the Weber® gas barbecue is stored indoors, the gas supply must be DISCONNECTED and the LPG cylinder stored outdoors in a well-ventilated space.
- LPG cylinder must be stored outdoors in a well-ventilated area out of reach of children. Disconnected LPG cylinder must not be stored in a building, garage or any other enclosed area.
- When the LPG cylinder is not disconnected from the Weber® gas barbecue, the appliance and LPG tank must be kept outdoors in a well-ventilated space.
- The Weber® gas barbecue should be checked for gas leaks and any obstructions in the burner tubes before using. (Refer to: MAINTENANCE/ANNUAL MAINTENANCE.)
- Check that the areas under the control panel and the slide out bottom tray are free from debris that might obstruct the flow of combustion or ventilation air.
- The Spider/Insect screens should also be checked for any obstructions. (Refer to: MAINTENANCE/ANNUAL MAINTENANCE.) ♦

 

GENERAL INSTRUCTIONS

CONSIDERATIONS FOR LOCATING YOUR GRILL



Any enclosure in which the appliance is used shall comply with one of the following:

- An enclosure with walls on all sides, but at least one permanent opening at ground level and no overhead cover **(1)**.
- Within a partial enclosure that includes an overhead cover and no more than two walls **(2)**.
- Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply **(3)**:
 - (a) at least 25% of the total wall area is completely open; and
 - (b) at least 30% of the remaining wall area is open and unrestricted.
- In the case of balconies, at least 20% of the total of the side, back and front wall areas shall be and remain open and unrestricted.



1

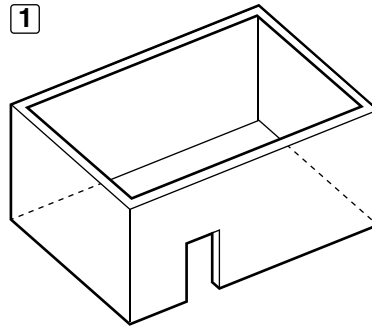



2

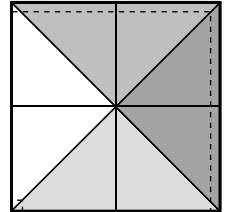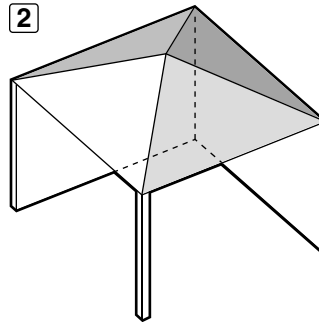



Both ends open

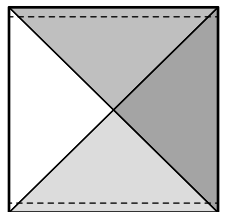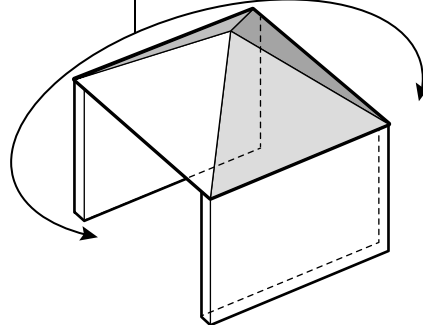

3

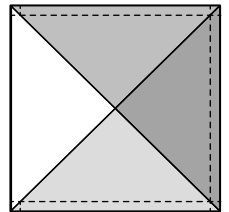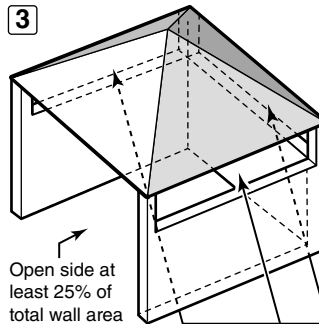

30% or more in total of the remaining wall area is open and unrestricted

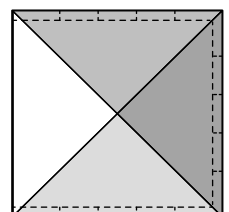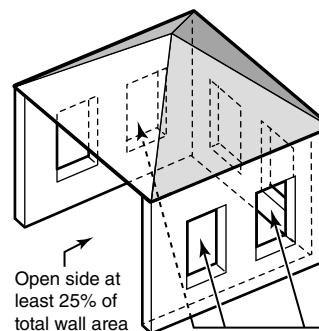

30% or more in total of the remaining wall area is open and unrestricted


GAS INSTRUCTIONS

REPLACEMENT HOSE, REGULATOR AND VALVE ASSEMBLY

⚠ **IMPORTANT NOTICE:** We recommend that you replace the gas hose assembly on your Weber gas barbecue every 5 years. Some countries may have requirements that the gas hose be replaced within less than 5 years, in which case that country's requirement would take precedence.

For replacement hose, regulator, and valve assemblies, contact the Customer Service Representative in your area using the contact information on our web site. Log on to www.weber.com®.

420 DIMENSIONS

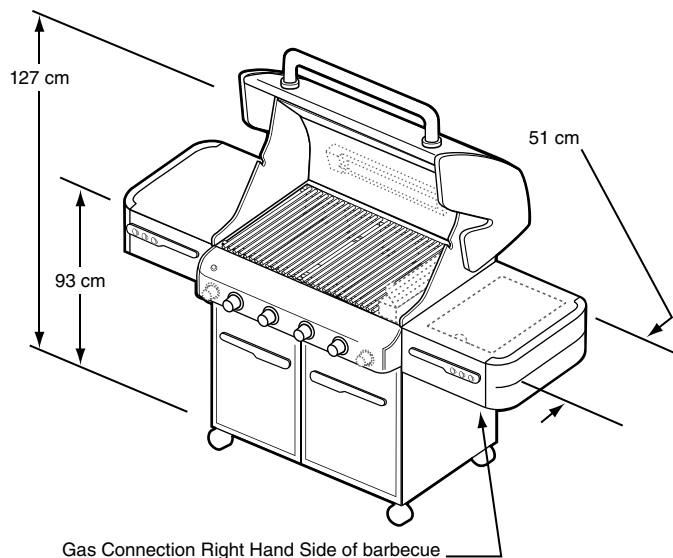

The minimum cylinder capacity for this barbecue is 9 Kg

GAS INSTRUCTIONS



INSTALL THE FUEL SCALE ASSEMBLY

- A) Position the fuel scale on the right outside panel of the barbecue (1). Fasten with washers and nuts.
- B) Install the cylinder glides into the two holes below the fuel scale (2). Fasten with screws, washers and nuts. ♦

PURCHASE A FULL CYLINDER OF GAS FROM YOUR GAS DEALER

The cylinder must always be installed, transported and stored in an upright position. Never allow the cylinder to drop or be handled carelessly. Never store cylinder where temperatures can exceed 51° C (too hot to hold by hand). For example, do not leave the cylinder in your car on hot days. ♦

FUEL SCALE ASSEMBLY & HARDWARE

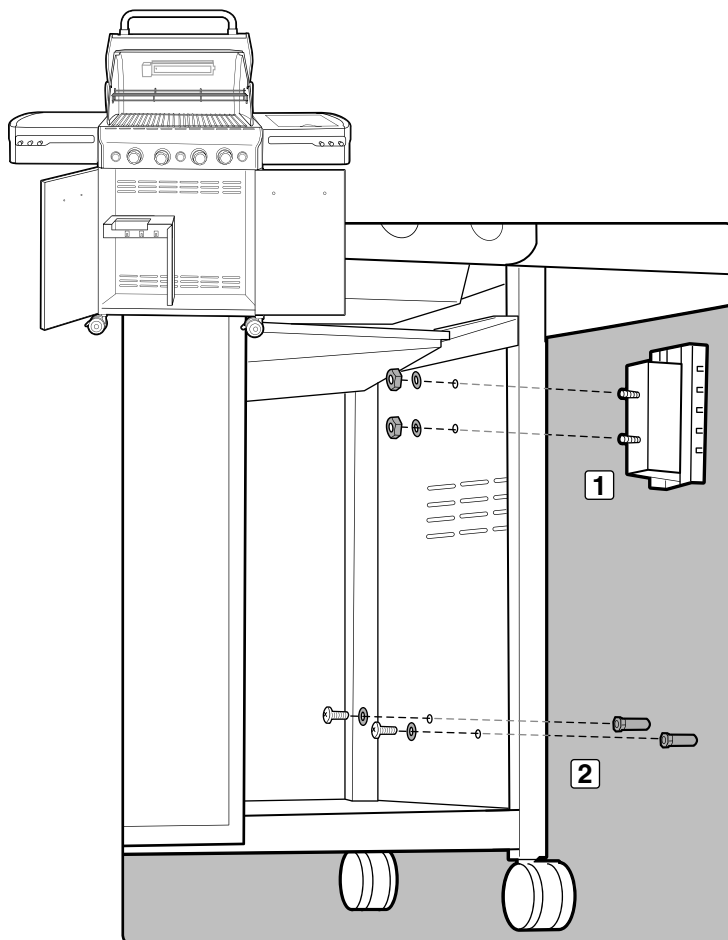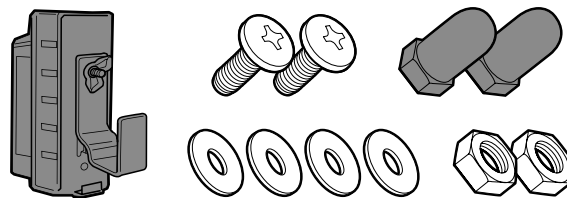

GAS INSTRUCTIONS

CONNECTING THE LPG CYLINDER

⚠ WARNING: Make sure that the LPG cylinder valve is closed. Close by turning valve clockwise (1).

Check That All Burner Valves Are Off

Valves are shipped in the OFF position, but you should check to be sure that they are turned off. Check by pushing down and turning clockwise. If they do not turn, they are off. If they do turn, continue turning them clockwise until they stop, then they are off.

Your Weber® gas barbecue uses liquid propane gas. The regulator that the barbecue is equipped with uses a POL fitting. This will require a liquid propane gas cylinder that is similarly equipped with a POL connection in the tank valve.

The regulator illustrations shown in this manual, may be different to the one you are using for your barbecue, due to different country or region regulations. Follow specific regulator connection instruction.

Connect The Hose To The Cylinder

The regulator must be connected to the LPG cylinder on the outside of the base cabinet, on the right side of the barbecue.

⚠ WARNING: Never store an extra (spare) LPG cylinder under or near the Weber® gas barbecue.




- Turn the LPG cylinder so the opening of the valve is to the front of the Weber® gas barbecue.
- Lift and hook the cylinder onto the AU adapter bracket on the fuel scale (6).
- Remove the plastic dust cover from the valve.
- Connect the hose (2) and the regulator (3) to the cylinder.

⚠ WARNING: The regulator has left hand screw threads. It tightens by turning counterclockwise.

⚠ WARNING: No sealant is required on the POL fitting. Do not use pipe dope, tape or any other sealant on the POL fitting or LPG cylinder.

- Use your fingers to start the POL fitting (4) in the LPG cylinder valve. Turn nut counterclockwise until tight (7). Position the regulator so that the vent hole (5) faces down.

⚠ WARNING: Do not use a wrench to tighten the connection. Using a wrench could damage the regulator coupling and could cause a leak. ♦

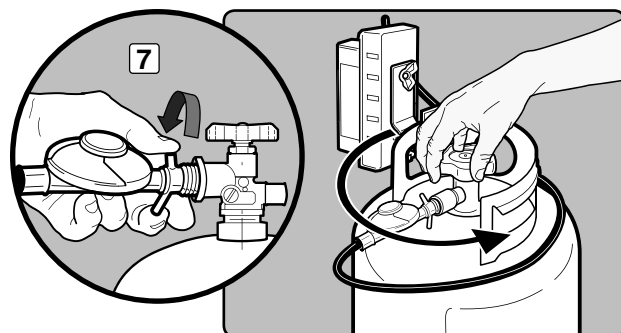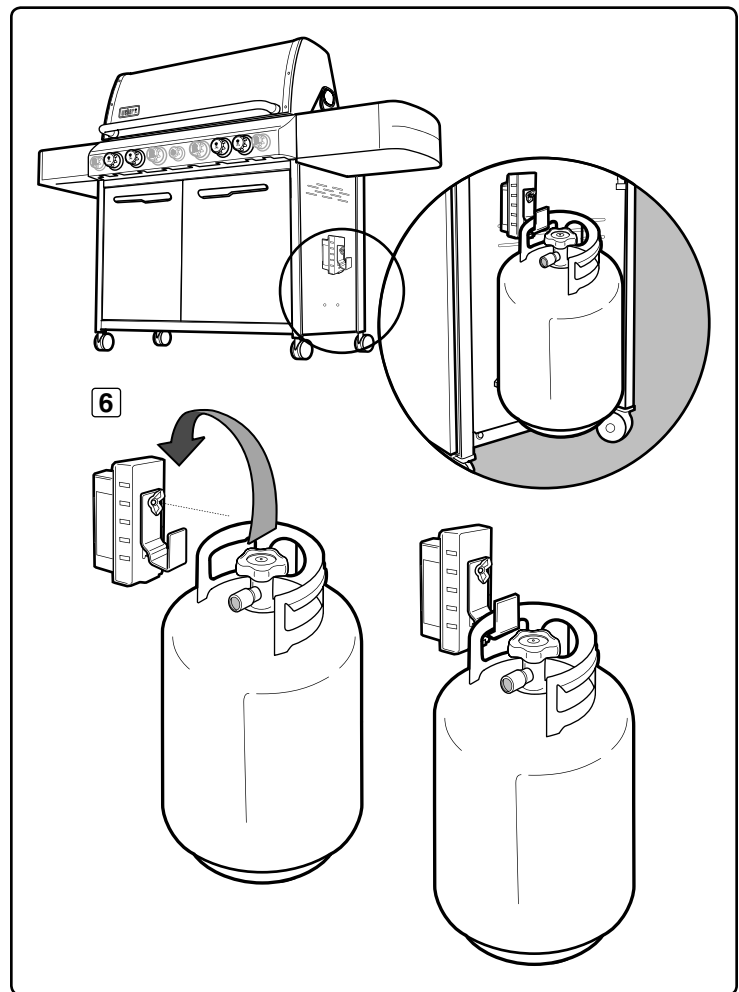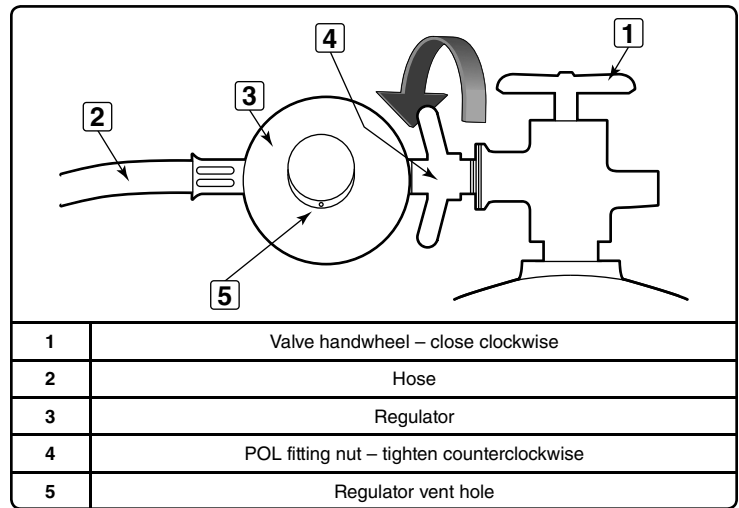

LEAK CHECK PREPARATION

⚠ WARNING: The gas connections of your Summit® gas barbecue have been factory tested. We do however recommend that you leak check all gas connections before operating your Summit® gas barbecue.

Remove Control Panel

Tool required: Phillips Screwdriver.

- Remove the burner control knobs (1).
- Remove the two screws that secure the control panel to the frame (2).
- Remove the control panel. Tilt panel forward and lift up and away from barbecue (3). Completely remove the control panel from the cooking box assembly exposing the valves, burners, igniter, and manifold. ♦

CHECK FOR GAS LEAKS

⚠ DANGER

Do not use an open flame to check for gas leaks. Be sure there are no sparks or open flames in the area while you check for leaks. Sparks or open flames will result in a fire or explosion, which can cause serious bodily injury or death and damage to property.

⚠ WARNING: You should check for gas leaks every time you disconnect and reconnect a gas fitting.

Note: All factory-made connections have been thoroughly checked for gas leaks. The burners have been flame-tested. As a safety precaution however, you should recheck all fittings for leaks before using your Weber® gas barbecue. Shipping and handling may loosen or damage a gas fitting.

⚠ WARNING: Perform these leak checks even if your barbecue was dealer or shop assembled.

Note: Since some leak test solutions, including soap and water, may be slightly corrosive, all connections should be rinsed with water after checking for leaks.



If your barbecue has a side burner make sure the side burner is off.

To perform leak checks: open cylinder valve by turning the cylinder valve hand-wheel counterclockwise.


You will need: LPG cylinder, a soap and water solution and a rag or brush to apply it.

- Mix soap and water.
- Turn on the cylinder valve by turning cylinder valve handwheel counterclockwise.
- Check for leaks by wetting the fitting with the soap and water solution and watching for bubbles. If bubbles form, or if a bubble grows, there is a leak. If there is a leak, turn off the gas and tighten the fitting. Turn the gas back on and recheck with the soap and water solution. If leak does not stop do not use the barbecue. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.
- When leak checking is complete, turn gas supply off at the source and rinse connections with water.

⚠ WARNING: Do not ignite burners when leak checking.

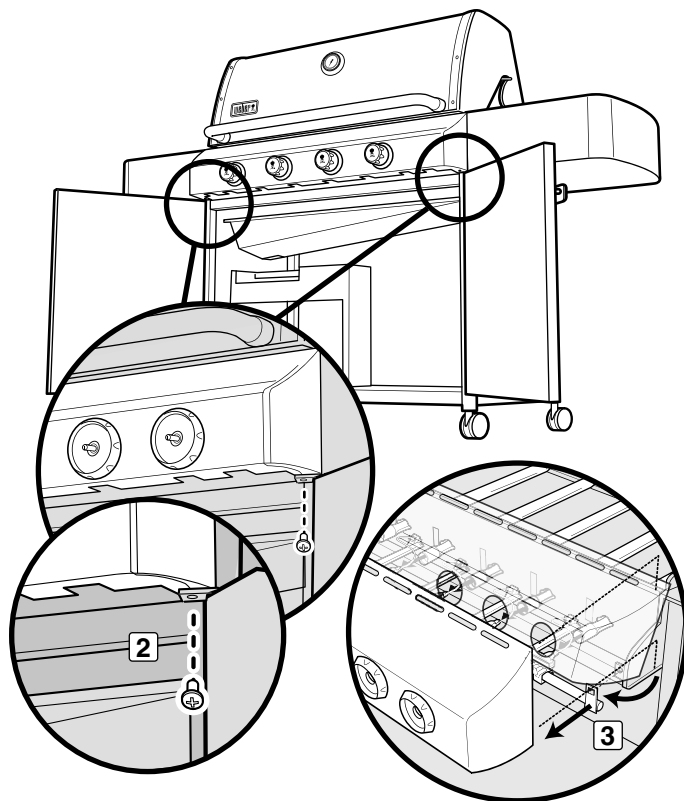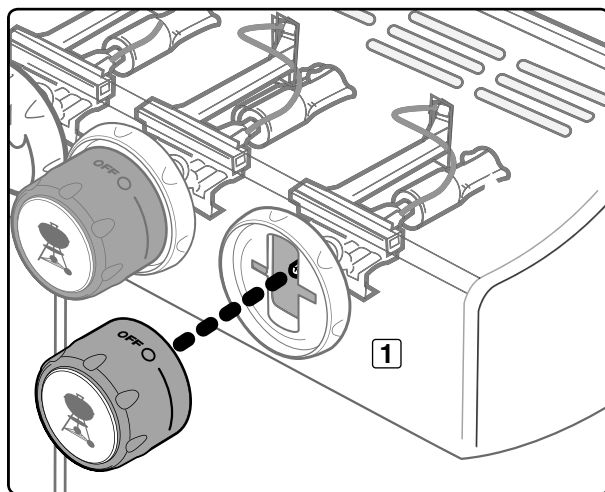

The barbecue illustrated may have slight differences to the model purchased.

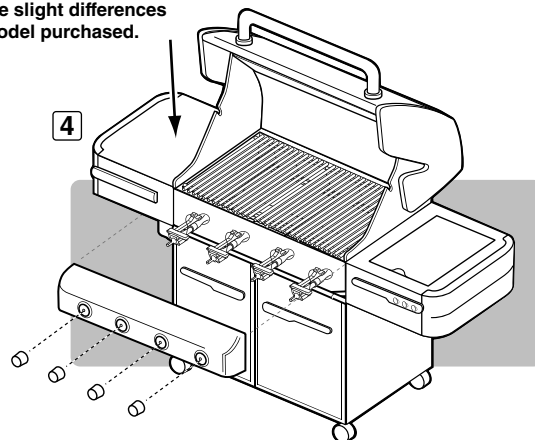

GAS INSTRUCTIONS

Check

- A) Bulkhead and gas supply hose connection (1).
- B) Main gas line to manifold connection (2).

⚠ WARNING: If there is a leak at connection (1, or 2), retighten the fitting with a spanner and recheck for leaks with soap-and-water solution. If a leak persists after re-tightening the fitting, turn off the gas. DO NOT OPERATE THE GRILL. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

- C) Side burner hose to bulkhead (3).
- D) Side burner hose to quick disconnect, side burner valve and orifice connections (4).
- E) Hose to regulator connection (5).
- F) Regulator to cylinder connection (6).
- G) Valves to manifold connections (7).


⚠ WARNING: If there is a leak at connections (3, 4, 5, 6, or 7), turn off the gas. DO NOT OPERATE THE GRILL. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

When leak checks are complete, turn gas supply off at the source and rinse connections with water.

Reinstall Control Panel

Parts required: control panel, screws and burner control knobs.

- H) Hook the top edge of the control panel onto the control panel brackets on either side of the front of the cooking box.
- I) Line up screws with screw holes on both the control panel bracket and the frame.
- J) Tighten screws.
- K) Place corresponding control knobs onto the valve stems. ♦

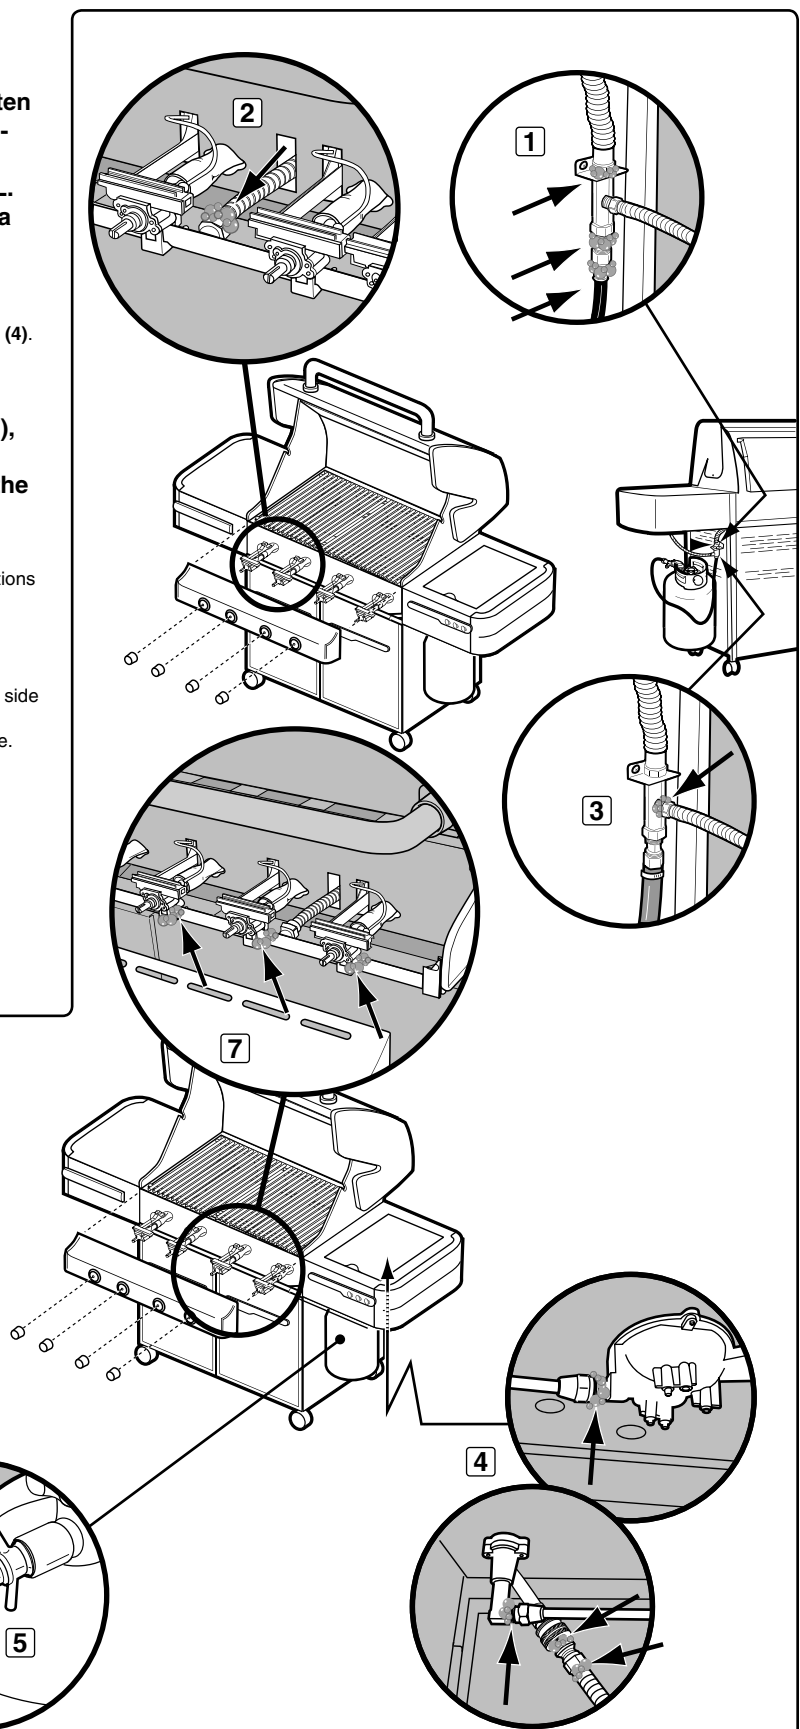

The barbecue illustrated may have slight differences to the model purchased.

GAS INSTRUCTIONS


REFILLING THE LPG CYLINDER

We recommend that you refill the LPG cylinder before it is completely empty. To refill, take LPG cylinder to a "Gas LPG" dealer.

Removal of the gas supply cylinder:

- A) Close cylinder valve (turn clockwise) (1).
- B) Unscrew regulator by turning POL fitting nut clockwise, by hand only (2).
- C) Lift cylinder off.


⚠ IMPORTANT NOTE: Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of LPG. ♦

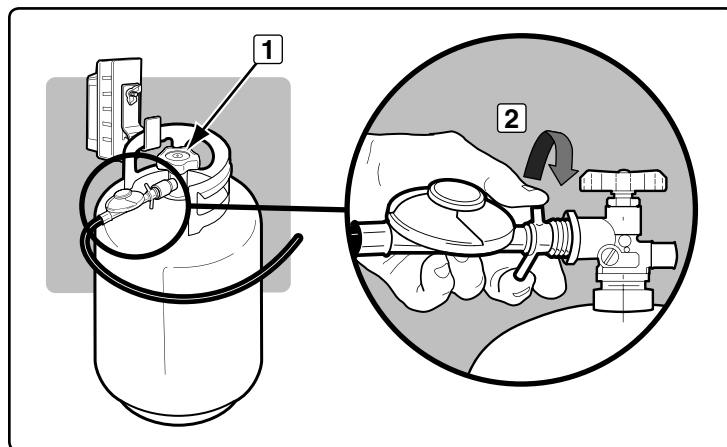

LIGHT FEATURES

WEBER® GRILL OUT™ HANDLE LIGHT

The Weber Grill Out™ Handle Light has a built-in "Tilt Sensor." With the power button (1) activated, the light will come on when the barbecue lid is open. The light will turn off when the lid is closed. For daytime use, deactivate the sensor by pressing power button (1). ♦

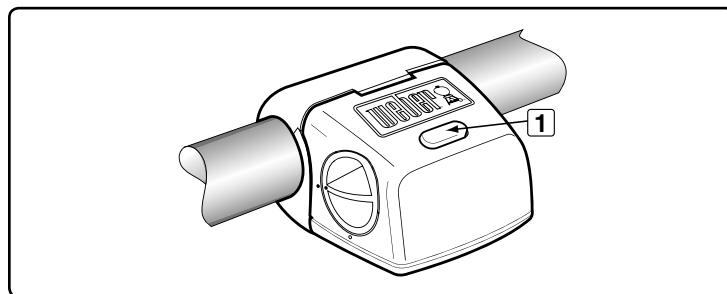


BEFORE USING THE BARBECUE

FUEL LEVEL

Check the fuel level by viewing the color indicator level line on the side of the tank scale.

- A) Empty (1)
- B) Medium (2)
- C) Full (3) ♦

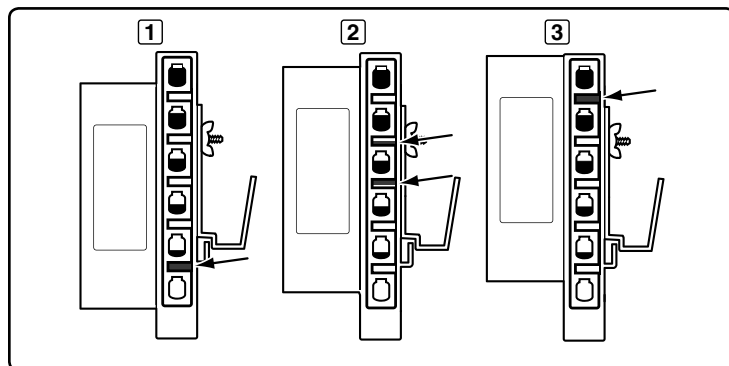


SLIDE-OUT GREASE TRAY AND DISPOSABLE DRIP PAN

Your barbecue was built with a grease collection system. Check the slide-out grease tray and disposable drip pan for grease build-up each time you use your barbecue.

Remove excess grease with a plastic spatula; see illustration. When necessary, wash the grease tray and drip pan with a soap and water solution, then rinse with clean water. Replace the disposable drip pan as needed.

⚠ **WARNING:** Check the slide-out grease tray and disposable drip pan for grease build-up before each use. Remove excess grease to avoid a grease fire. A grease fire can cause serious bodily injury or damage to property.


⚠ **CAUTION:** Do not line the slide-out grease tray with aluminum foil. ♦

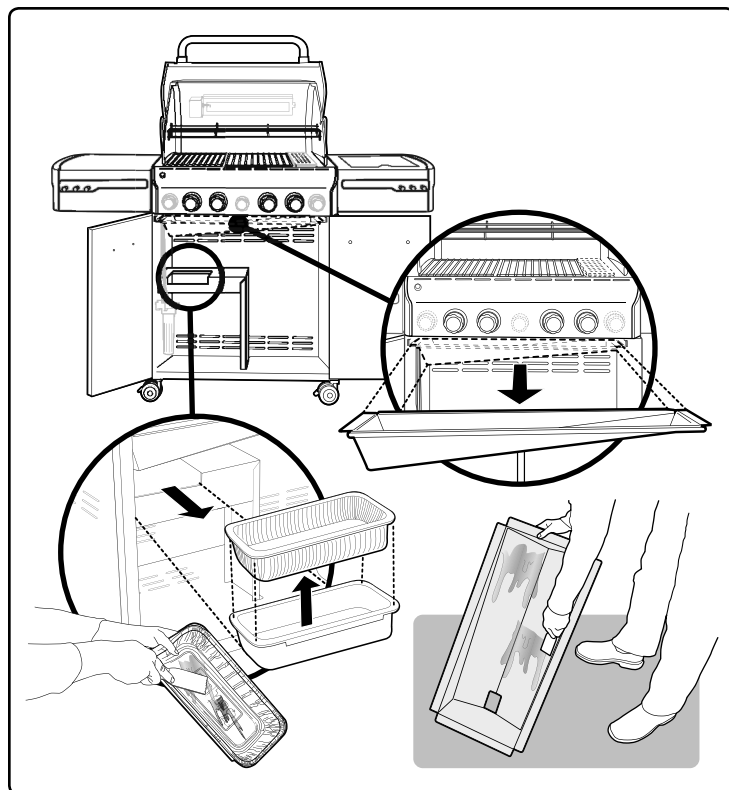

HOSE INSPECTION

The hose should be inspected for any signs of cracking.

⚠ **WARNING:** Check hose before each use of barbecue for nicks, cracking, abrasions or cuts. If the hose is found to be damaged in any way, do not use the barbecue. Replace using only Weber® authorized replacement hose. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com®. ♦


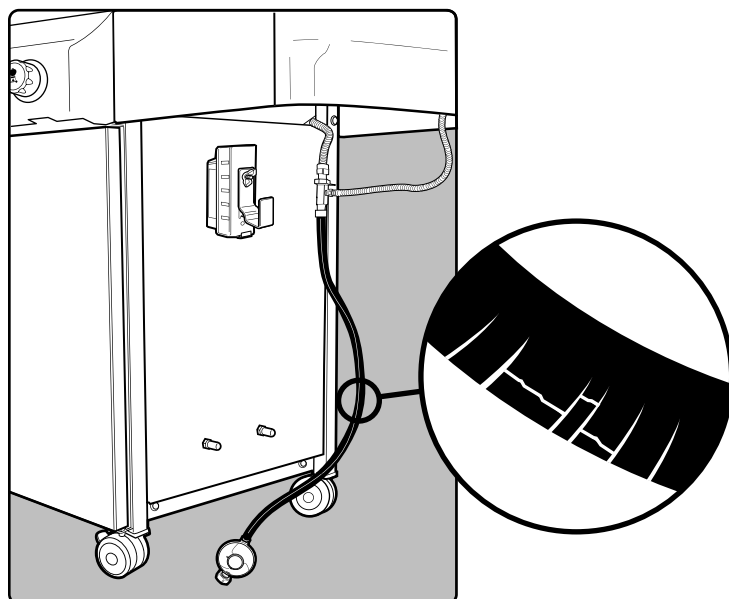


SNAP IGNITION OPERATION

⚠ **Always open the lid before igniting the burners.**

- A) Each control knob has its own igniter electrode built in. To create a spark you must push the control knob in (1) and turn to START/High (2).
- B) This action will generate gas flow and a spark to the burner lighting tube (3). You will hear a "snap" from the igniter. You will also see a 3" (7 mm) - 5" (12 mm) orange flame coming from the burner lighting tube at the left side of the burner (4).
- C) **Continue to hold the burner control knob in for two seconds after the "snap".** This will allow gas to flow completely down the burner tube (5) and ensure ignition.
- D) Check that the burner is lit by looking through the cooking grates. You should see a flame. If burner does not light on first try, push control knob in and turn to OFF. Repeat lighting procedure a second time.

⚠ **WARNING: If the burner still does not light, turn the burner control knob to OFF and wait five minutes to let the gas clear before you try again or try to light with a match. ♦**

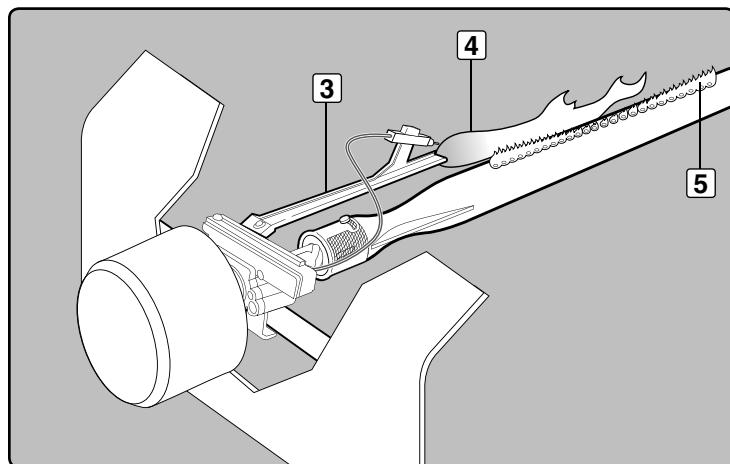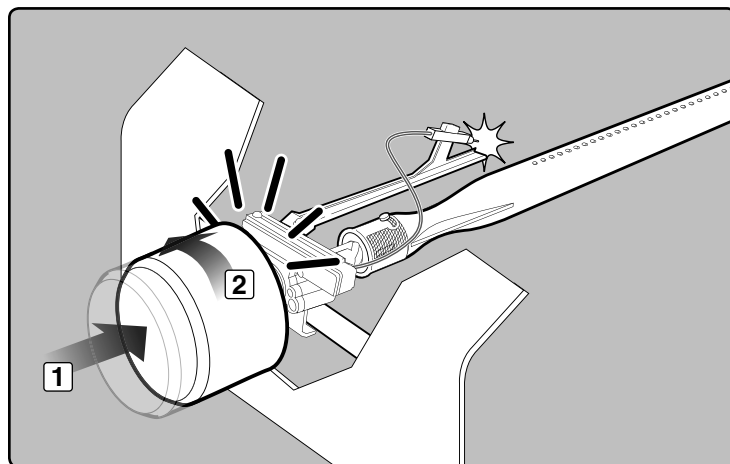

MAIN BURNER IGNITION & USAGE

MAIN BURNER IGNITION

Summary lighting instructions are inside the left-hand cabinet door.

⚠ DANGER

Failure to open the lid while igniting the barbecue's burners, or not waiting five minutes to allow the gas to clear if the barbecue does not light, may result in an explosive flare-up, which can cause serious bodily injury or death.

Main Burner Snap Ignition

Note: Each control knob snap igniter creates a spark from the igniter electrode to the burner lighting tube. You generate the energy for the spark by pushing in the control knob and turning to START/HI. This will ignite each individual burner.

- Open the lid (1).
- Make sure all burner control knobs are turned off (2). (Push control knob in and turn clockwise to ensure that it is in the OFF position.)

⚠ **WARNING: The burner control knobs must be in the OFF position before turning on the LPG cylinder tank valve.**

- Turn the cylinder on by turning the cylinder valve counterclockwise (3).


⚠ **WARNING: Do not lean over the open barbecue.**

- Push the control knob in and turn to START/HI until you hear the igniter snap, continue to hold control knob in for two seconds. This action will spark the igniter, the burner lighting tube and then main burner (4).
- Check that the burner is lit by looking through the cooking grates. You should see a flame (5). If burner does not light on first try, push control knob in and turn to OFF. Repeat lighting procedure a second time.



⚠ **WARNING: If the burner still does not light, turn the burner control knob to OFF and wait five minutes to let the gas clear before you try again or try to light with a match. ♦**

TO EXTINGUISH

Push in and turn each burner control knob clockwise to OFF position. Turn gas supply off at the source. ♦

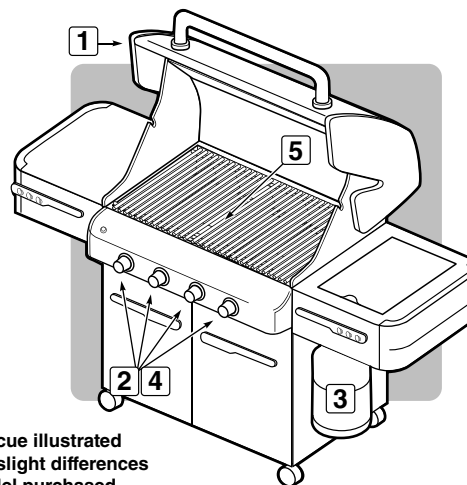

The barbecue illustrated may have slight differences to the model purchased.

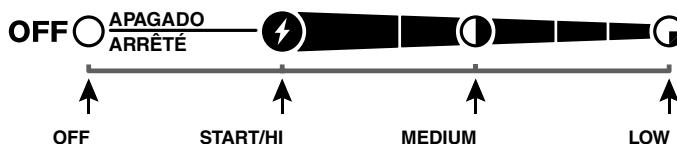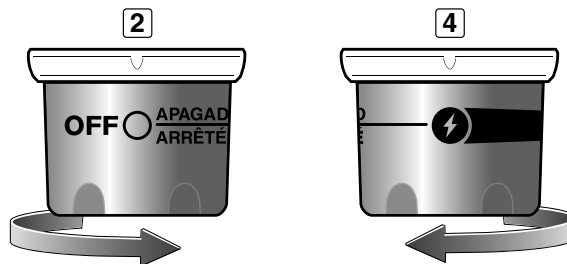

MAIN BURNER IGNITION & USAGE

MAIN BURNER MANUAL IGNITION


⚠ DANGER

Failure to open the lid while igniting the barbecue's burners, or not waiting five minutes to allow the gas to clear if the barbecue does not light, may result in an explosive flare-up, which can cause serious bodily injury or death.


- A) Open the lid (1).
- B) Make sure all burner control knobs are turned off (2). (Push each knob in and turn clockwise to ensure they are in the OFF position.)
- ⚠ **WARNING: The burner control knobs must be in the OFF position before turning on the LPG cylinder valve.**
- C) Turn the cylinder on by turning the cylinder valve counterclockwise (3).
- D) Put match in the match holder and strike match.
- ⚠ **WARNING: Do not lean over open barbecue.**
- E) Insert match holder and lit match down through cooking grates and Flavorizer® bars to ignite the selected burner (4).
- F) Push the control knob in and turn to START/HI (5).
- G) Check that the burner is lit by looking through the cooking grates (6). You should see a flame.
- ⚠ **WARNING: If the burner does not light, turn the burner control knob to OFF and wait five minutes to let the gas clear before you try again. ♦**

TO EXTINGUISH

Push in and turn each burner control knob clockwise to OFF position. Turn gas supply off at the source. ♦

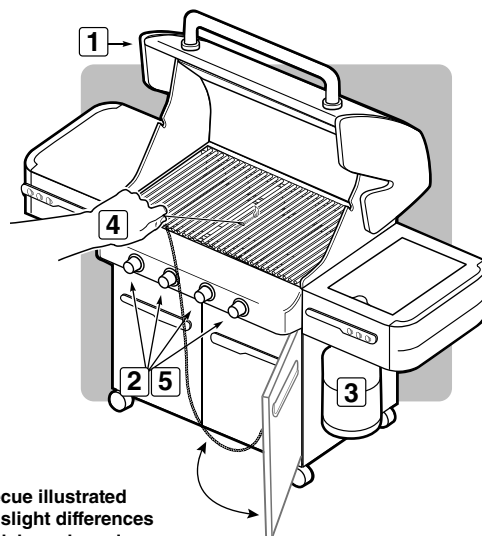

The barbecue illustrated may have slight differences to the model purchased.

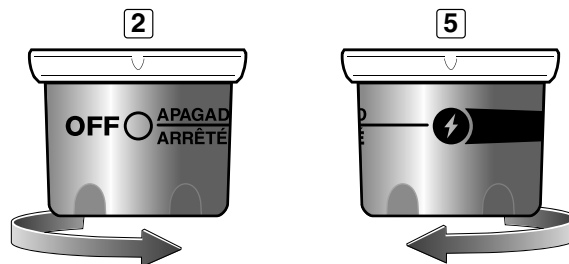


GRILLING TIPS & HELPFUL HINTS

- Always preheat the barbecue before cooking. Set all burners on HI heat and close lid; heat for 10 minutes, or until thermometer registers 500°-550°F (260°-288°C).
- Sear meats and cook with the lid down for perfectly grilled food every time.
- Grilling times in recipes are based on 70°F (20°C) weather and little or no wind. Allow more cooking time on cold or windy days, or at higher altitudes. Allow less cooking time in extremely hot weather.
- Grilling times can vary because of the weather, or the amount, size and shape of the food being grilled.
- The temperature of your gas barbecue may run hotter than normal for the first few uses.
- Grilling conditions may require the adjustment of the burner controls to attain the correct cooking temperatures.
- In general, large cuts of meat will require more cooking time per pound than small cuts of meat. Foods on a crowded cooking grate will require more cooking time than just a few foods. Foods grilled in containers, such as baked beans, will require more time if grilled in a deep casserole rather than a shallow baking pan.
- Trim excess fat from steaks, chops and roasts, leaving no more than a scant ¼ inch (6.4mm) of fat. Less fat makes cleanup easier, and is a virtual guarantee against unwanted flare-ups.
- Foods placed on the cooking grate directly above burners may require turning or moving to a less hot area.
- Use tongs rather than a fork for turning and handling meats to avoid losing natural juices. Use two spatulas for handling large whole fish.
- If an unwanted flare-up should occur, turn all burners off and move food to another area of the cooking grate. Any flames will quickly subside. After flames subside, relight the barbecue. NEVER USE WATER TO EXTINGUISH FLAMES ON A GAS BARBECUE.
- Some foods, such as a casserole or thin fish fillets, will require a container for grilling. Disposable foil pans are very convenient, but any metal pan with ovenproof handles can also be used.
- Always be sure the slide-out grease tray and catch pan are clean and free from debris.
- Do not line the slide-out grease tray with foil. This could prevent the grease from flowing into the catch pan.
- Using a timer will help to alert you when “well done” is about to become “overdone.” ♦

PREHEATING

Your Weber® gas barbecue is an energy-efficient appliance. It operates at an economical low BTU rate. Preheating the barbecue before grilling is important. Light your barbecue according to the instructions in this Owner's Manual. To preheat: after lighting turn all burners to START/HI, close the lid, and heat until the temperature reaches between 500°F and 550°F (260° and 288° C), the recommended broiling temperature. This will take 10 to 15 minutes depending on conditions such as air temperature and wind.

You can adjust the individual burners as desired. The control settings are OFF, START/HI, MEDIUM, or LOW.

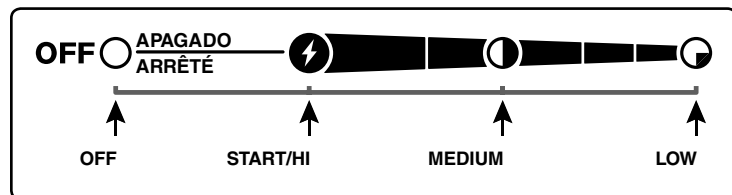

Note: Cooking conditions, such as wind and weather, may require adjustment of burner controls to obtain the correct cooking temperatures.

Note: If barbecue loses heat while cooking refer to the troubleshooting section of this manual.

⚠ WARNING: Do not move the Weber® gas barbecue when operating or while barbecue is hot.

If burners go out during cooking, turn all burner knobs off and wait five minutes before relighting. ♦

COVERED COOKING

All grilling is done with the lid down to provide uniform, evenly circulated heat. With the lid closed, the gas barbecue cooks much like a convection oven. The thermometer in the lid indicates the cooking temperature inside the barbecue. All preheating and grilling is done with the lid down. No peeking — heat is lost every time you lift the lid. ♦

DRIPPINGS AND GREASE

The Flavorizer® bars are designed to “smoke” the correct amount of drippings for flavoursome cooking. Excess drippings and grease will accumulate in the catch pan under the slide-out grease tray. Disposable foil drip pans are available that fit the catch pan.

⚠ WARNING: Check the slide-out grease tray and catch pan for grease build-up before each use. Remove excess grease to avoid a grease fire in the slide-out grease tray. ♦

FLAVORIZER® SYSTEM

When meat juices drip from the food onto the specially angled Flavorizer® bars, they create smoke that gives foods an irresistible barbecued flavour. Thanks to the unique design of the burners, Flavorizer® bars and the flexible temperature controls, uncontrolled flare-ups are virtually eliminated, because YOU control the flames. Because of the special design of the Flavorizer® bars and burners, excess fats are directed through the slide-out grease tray into the grease catch pan. ♦

COOKING METHODS

The most important thing to know about grilling is which cooking method to use for a specific food, Direct or Indirect. The difference is simple: place the food directly over the fire, or arrange the fire on either side of it. Using the right method is the shortest route to great results—and the best way to ensure food is safely cooked through. ♦

DIRECT COOKING

The Direct Method, similar to grilling, means the food is cooked directly over the heat source. For even cooking, food should be turned once halfway through the grilling time.

Use the Direct method for foods that take less than 25 minutes to cook: steaks, chops, kebabs, sausages, vegetables, and more.

Direct cooking is also necessary to sear meats. Searing creates that wonderful crisp, caramelized texture where the food hits the grate. It also adds great colour and flavour to the entire surface. Steaks, chops, chicken breasts, and larger cuts of meat all benefit from searing.

To sear meats, place them over Direct High heat for 2 to 5 minutes per side. Smaller pieces require less searing time. Usually after searing you finish cooking the food at a lower temperature. You can finish cooking fast-cooking foods by the Direct method; use the Indirect method for longer-cooking foods.

To set up your gas barbecue for Direct cooking, preheat the barbecue with all burners on HI. Place food on the cooking grate, and then adjust all burners to the temperature noted in the recipe. Close the lid of the barbecue and lift it only to turn food or to test for doneness at the end of the recommended cooking time. ♦


INDIRECT COOKING

The Indirect Method is similar to roasting, but with the added benefits of that grilled texture, flavour, and appearance you can't get from an oven. To set up for Indirect cooking, gas burners are lit on either side of the food but not directly beneath it. Heat rises, reflects off the lid and inside surfaces of the barbecue, and circulates to slowly cook the food evenly on all sides, much like a convection oven, so there's no need to turn the food.

Use the Indirect method for foods that require 25 minutes or more of grilling time or that are so delicate that direct exposure to the flame would dry them out or scorch them. Examples include roasts, ribs, whole chickens, turkeys, and other large cuts of meat, as well as delicate fish fillets.

To set up your gas barbecue for Indirect cooking, preheat the barbecue with all burners on HI. Then adjust the burners on each side of the food to the temperature noted in the recipe and turn off the burner(s) directly below the food. For best results, place roasts, poultry, or large cuts of meat on a roasting rack set inside a disposable heavy-gauge foil pan. For longer cooking times, add water to the foil pan to keep drippings from burning. The drippings can be used to make gravies or sauces. ♦

4 BURNER

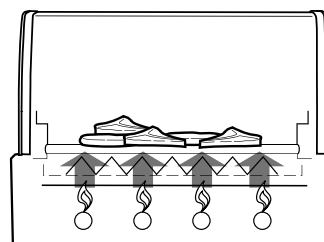


DIRECT METHOD

A

Food is placed on the area of the cooking grates directly over the lit burners

4 BURNER

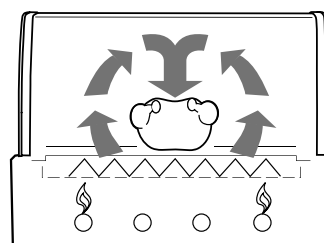

INDIRECT METHOD

B

Food is placed on the area of the cooking grates between the lit burners

SIDE BURNER IGNITION & USAGE

SIDE BURNER IGNITION

⚠ DANGER

Failure to open the lid while igniting the side burner, or not waiting five minutes to allow the gas to clear if the side burner does not light, may result in an explosive flare-up, which can cause serious bodily injury or death.

- ⚠ **WARNING:** Check hose before each use of barbecue for nicks, cracking, abrasions or cuts. If the hose is found to be damaged in any way, do not use the barbecue. Replace using only Weber® authorized replacement hose. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com®.

- A) Open the side burner lid (1).
B) Check that the side burner valve is turned off (Push control knob in and turn clockwise to ensure that it is in the OFF position), turn all burners not being used to the OFF position (push in and turn clockwise) (2).
C) Turn the gas supply valve on (3).
D) Push down and turn the side burner control valve to START/HI (4).
E) Press the igniter button several times so it clicks each time until you see a flame (5).


- ⚠ **CAUTION:** Side burner flame may be difficult to see on a bright sunny day.

- ⚠ **WARNING:** If the side burner does not light:


- Turn off the side burner control valve, main burners and gas supply at source.
- Wait five minutes to let the gas clear before you try again, or try lighting with a match (Refer to “SIDE BURNER MANUAL IGNITION”). ♦

TO EXTINGUISH

Push down and turn side burner control knob to the OFF position. Be sure the burner is off and cool before closing the side burner lid. ♦

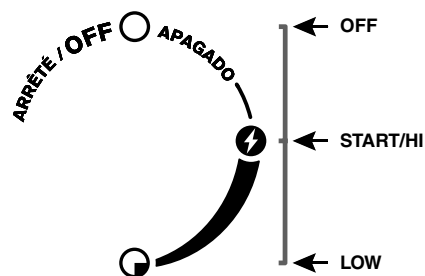

The barbecue illustrated may have slight differences to the model purchased.

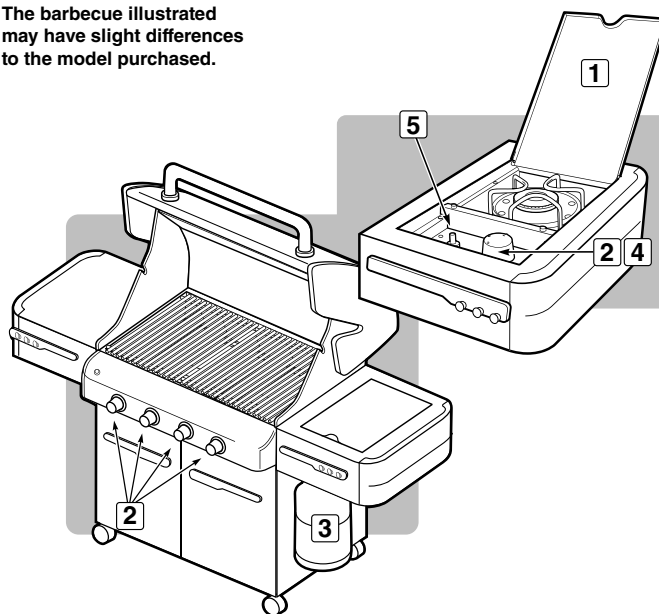

SIDE BURNER IGNITION & USAGE

SIDE BURNER MANUAL IGNITION

⚠ DANGER

Failure to open the lid while igniting the side burner, or not waiting five minutes to allow the gas to clear if the side burner does not light, may result in an explosive flare-up that can cause serious bodily injury or death.

- A) Open the side burner lid (1).
- B) Check that the side burner valve is turned off (2) (Push control knob in and turn clockwise to ensure that it is in the OFF position), turn all burners not being used to the OFF position (push in and turn clockwise).
- C) Turn the gas supply valve on (3).
- D) Put match in a match holder and strike match.
- E) Hold match holder and lit match by either side of the side burner (4).
- F) Push down and turn the side burner control valve to START/HI (5).

⚠ **CAUTION:** Side burner flame may be difficult to see on a bright sunny day.


⚠ **WARNING:** If the side burner does not light:

- a) Turn off the side burner control valve, main burners and gas supply at source.
- b) Wait five minutes to let the gas clear before you try again. ♦

TO EXTINGUISH

Push down and turn side burner control knob to the OFF position. Be sure the burner is off and cool before closing the side burner lid. ♦

The barbecue illustrated may have slight differences to the model purchased.

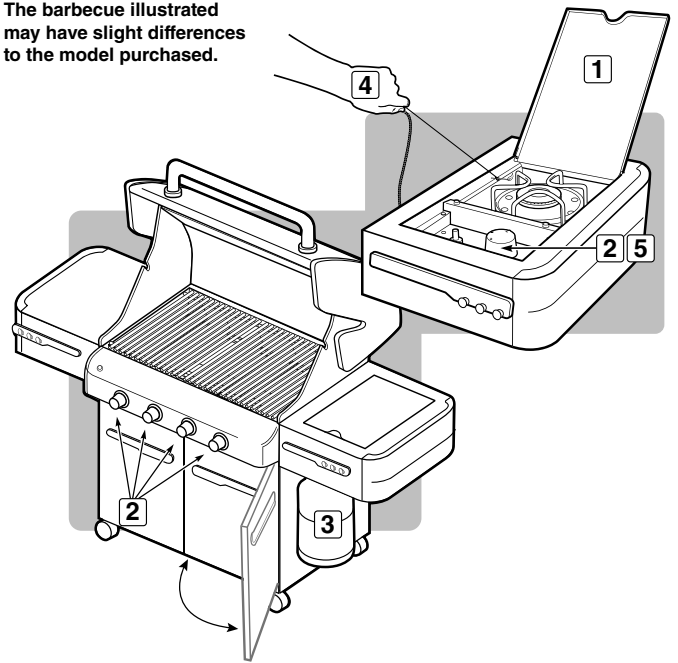

TROUBLESHOOTING

PROBLEM	CHECK	SOLUTION
Burners burn with a yellow or orange flame, in conjunction with the smell of gas (This is normal for the burner lighting tube).	Inspect Spider/Insect screens for possible obstructions (blockage of holes.)	Clean Spider/Insect screens. Refer to ANNUAL MAINTENANCE."
Burner does not light, or flame is low in the HI position.	Is LPG fuel low or empty?	Refill LPG cylinder.
	Is fuel hose bent or kinked?	Straighten fuel hose.
	Does burner light with a match?	Clean thoroughly. Refer to "MAINTENANCE."
	Did you use the snap igniter several times until the main burner lit? Refer to "MAIN BURNER IGNITION"	Make sure you hold the control knob in for two seconds after snapping the igniter and seeing the orange flame from the burner lighting tube.
	Does the igniter work? Do you see a spark when you repeatedly use the snap igniter?	Try manually lighting the burner. Refer to "MAIN BURNER MANUAL IGNITION." Call Customer Service.
Experiencing flare-ups: ⚠ CAUTION: Do not line the slide out grease tray with aluminum foil.	Are you preheating barbecue in the prescribed manner?	All burners on HI for 10 to 15 minutes for preheating.
	Are the cooking grates and Flavorizer® bars heavily coated with burned-on grease?	Clean thoroughly. Refer to "CLEANING."
	Is the bottom tray "dirty" and not allowing grease to flow into catch pan?	Clean bottom tray.
Burner flame pattern is erratic. Flame is low when burner is on HI. Flames do not run the whole length of the burner tube.	Are burners clean?	Clean burners. Refer to "MAINTENANCE."
Inside of lid appears to be "peeling." (Resembles paint peeling.)	The lid is porcelain enamel or stainless steel, not paint. It cannot "peel." What you are seeing is baked on grease that has turned to carbon and is flaking off. THIS IS NOT A DEFECT.	Clean thoroughly. Refer to "CLEANING."
Cabinet doors are not aligned.	Check the adjustment pin on the bottom of each door.	Loosen adjustment nut/s. Slide door/s until aligned. Tighten nut.
Barbecue seems to lose heat when cooking in cold weather temperatures of 50°F or colder.	Is there frost/ice on the outside of the LPG cylinder?	The liquid propane in the cylinder turns to vapor too slowly to supply the burners with gas. This is due to the air temperature cooling the LPG cylinder, which slows the vaporization process. Turn off burner control knobs and the LPG cylinder. Replace with a spare LPG cylinder and resume cooking.
If problems cannot be corrected by using these methods, please contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com ®.		

SIDE BURNER TROUBLESHOOTING

PROBLEM	CHECK	SOLUTION
Side Burner does not light.	Is gas supply off?	Turn supply on.
Flame is low in HI position.	Is the fuel hose bent or kinked?	Straighten hose.
Push button ignition does not work.	Does burner light with a match?	If match lights burner, check igniter. Refer to "SIDE BURNER MAINTENANCE."
If problems cannot be corrected by using these methods, please contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com ®.		

GRILL OUT™ HANDLE LIGHT TROUBLESHOOTING

PROBLEM	CHECK	SOLUTION
Weber Grill Out™ Handle Light does not light.	Are the batteries old?	Replace batteries.
	Are the batteries installed correctly?	See assembly illustration.
	Is the lid in the up position with the power button ON?	Light will activate when lid is open.
	Is the Weber Grill Out™ Handle Light activated?	Press the power button.
	Is the Weber Grill Out™ Handle Light positioned correctly on the handle?	Adjust position. Refer to assembly illustration.
If problems cannot be corrected by using these methods, please contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com ®.		

MAINTENANCE

CLEANING

⚠ **WARNING:** Turn your Weber® gas barbecue off and wait for it to cool before cleaning.

⚠ **CAUTION:** Do not clean your Flavorizer® bars or cooking grates in a self-cleaning oven.

Outside surfaces - Use a warm soapy water solution to clean, then rinse with water.

⚠ **CAUTION:** Do not use oven cleaner, abrasive cleansers (kitchen cleansers), cleaners that contain citrus products, or abrasive cleaning pads on barbecue or cart surfaces.

Slide-out grease tray - Remove excess grease, then wash with warm soapy water, then rinse.

⚠ **CAUTION:** Do not line the slide-out grease tray with aluminum foil.

Flavorizer® bars and cooking grates - Clean with a suitable stainless steel bristle brush. As needed, remove from barbecue and wash with warm soapy water, then rinse with water.

For availability of replacement cooking grates and Flavorizer® bars contact the Customer Service Representative in your area using the contact information on our website. Log onto www.weber.com®.

Catch pan - Disposable foil trays are available, or you can line the catch pan with aluminum foil. To clean the catch pan, wash with warm soapy water, then rinse.

Thermometer - Wipe with warm soapy water; clean with plastic scrub ball.

Inside cooking module - Brush any debris off burner tubes. DO NOT ENLARGE BURNER PORTS (OPENINGS). Wash inside of cooking box with warm soapy water and rinse with water.

Inside lid - While lid is warm, wipe inside with paper towel to prevent grease build-up. Flaking built-up grease resembles paint flakes.

Stainless steel surfaces - Wash with a soft cloth and a soap-and-water solution. Be careful to scrub with the grain direction of the stainless steel.

Do not use cleaners that contain acid, mineral spirits or xylene. Rinse well after cleaning.

WEBER® SPIDER/INSECT SCREENS

Your Weber® gas barbecue, as well as any outdoor gas appliance, is a target for spiders and other insects. They can nest in the venturi section (1) of the burner tubes. This blocks the normal gas flow, and can cause the gas to flow back out of the combustion air opening. This could result in a fire in and around the combustion air openings, under the control panel, causing serious damage to your barbecue.


The burner tube combustion air opening is fitted with a stainless steel screen (2) to prevent spiders and other insects from accessing the burner tubes through the combustion air openings.

We recommend that you inspect the Spider/Insect screens at least once a year (Refer to "ANNUAL MAINTENANCE"). Also inspect and clean the Spider/Insect screens if any of the following symptoms should ever occur:

- A) The smell of gas in conjunction with the burner flames appearing yellow and lazy.
- B) Barbecue does not reach temperature.
- C) Barbecue heats unevenly.
- D) One or more of the burners do not ignite.

⚠ DANGER

Failure to correct the above mentioned symptoms may result in a fire, which can cause serious bodily injury or death, and cause damage to property. ♦

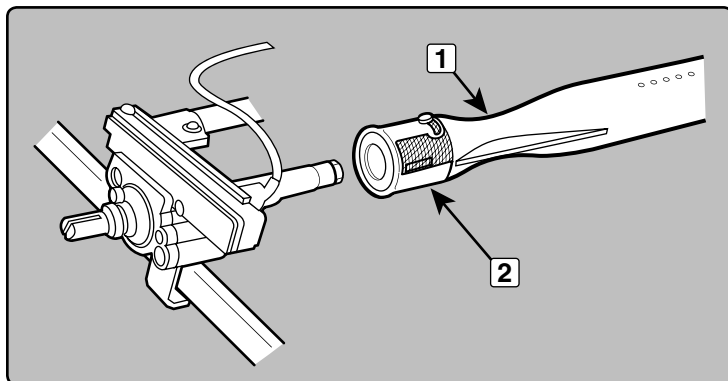

BURNER TUBE CLEANING


Turn off the gas supply.

Remove the manifold (Refer to "REPLACING MAIN BURNERS").

Look inside each burner with a torch.

Clean the inside of the burners with a wire (a straightened-out coat hanger will work). Check and clean the air shutter opening at the ends of the burners. Check and clean the valve orifices at the base of the valves. Use a steel bristle brush to clean outside of burners. This is to make sure all the burner ports are fully open.

⚠ **CAUTION:** Do not enlarge the burner ports when cleaning. ♦

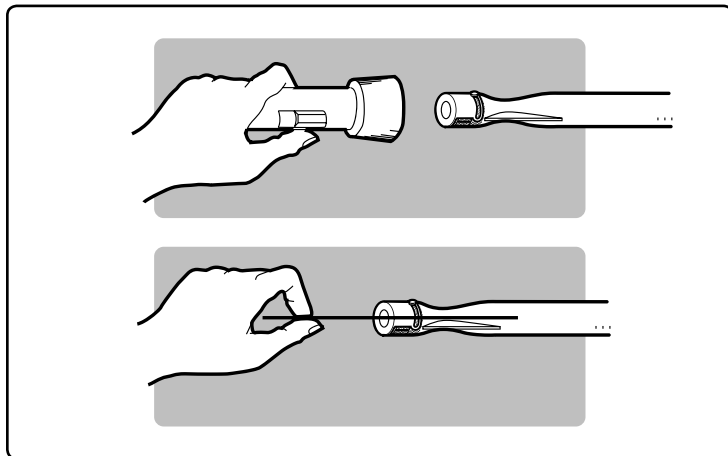

REPLACING MAIN BURNERS



Your Summit® gas grill must be off and cool.

- A) Turn gas off at source.
- B) Disconnect gas supply.
- C) Remove cooking grates.
- D) Remove smoker box (if included in your model).
- E) Remove Flavorizer® bars.


Remove Control Panel

Part required: Phillips Screwdriver.

- A) Remove the burner control knobs (1).
- B) Remove the two screws that secure the control panel to the frame (2).
- C) Remove the control panel. Tilt panel forward and lift up and away from grill (3).
- D) Completely remove the control panel from the cooking box assembly exposing the valves, burners, igniter, and manifold (4).

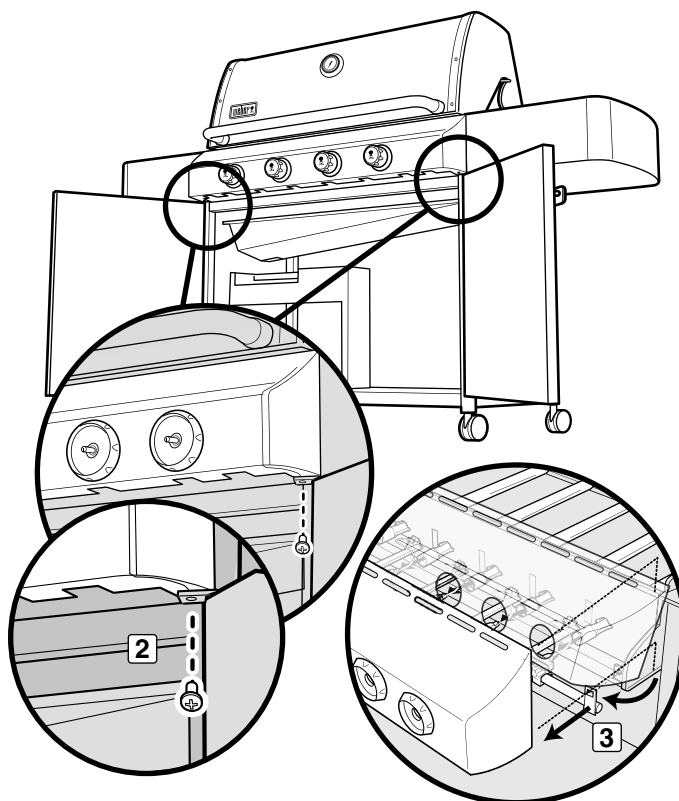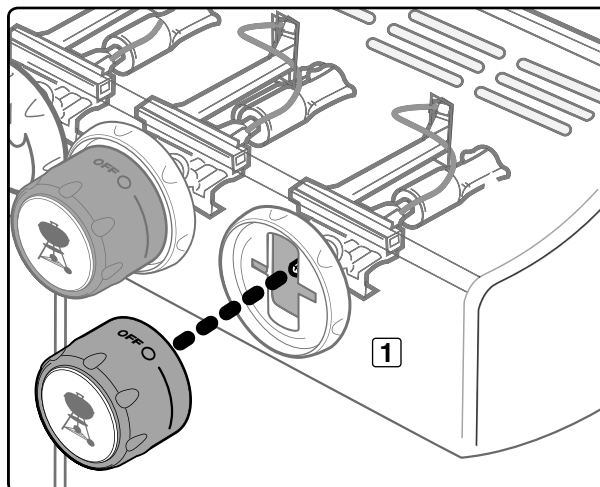

The barbecue illustrated may have slight differences to the model purchased.

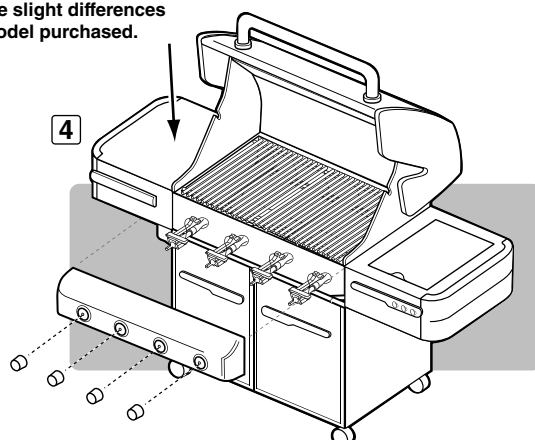



MAINTENANCE

- E) Remove the two screws that secure the manifold to the cookbox. Pull manifold assembly out from the manifold frame (5).
- F) Pull the selected burner(s) tube(s) from manifold frame and replace with a new burner tube (6).
- G) To reinstall the manifold assembly, reverse steps A through F.

⚠ **CAUTION:** The burner openings (7) must be positioned properly over the valve orifices (8).

Make sure the opposite end of the burner tubes (9) properly align into the slots on the backside of the cookbox. Check proper assembly before fastening manifold in place.

⚠ **WARNING:** After reinstalling the gas lines, they should be leak checked with a soap and water solution before using the grill. (Refer to “CHECK FOR GAS LEAKS”) ♦

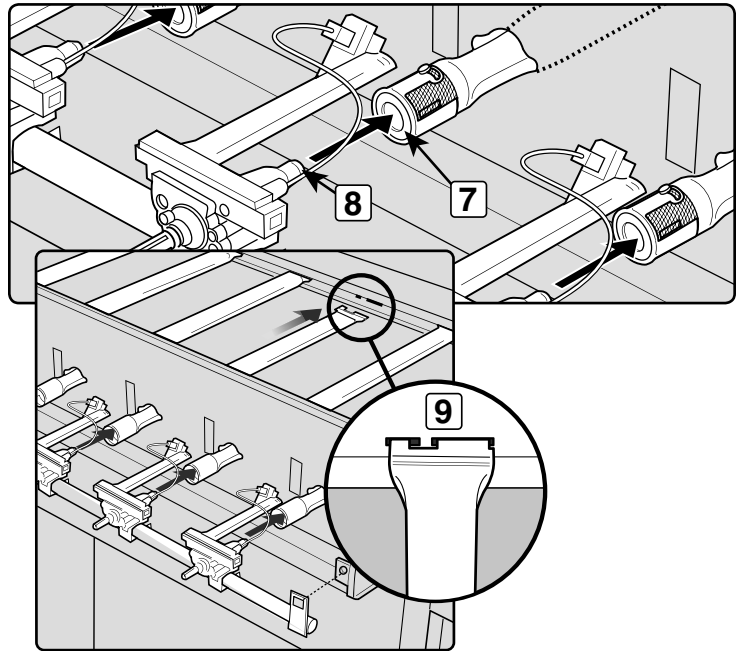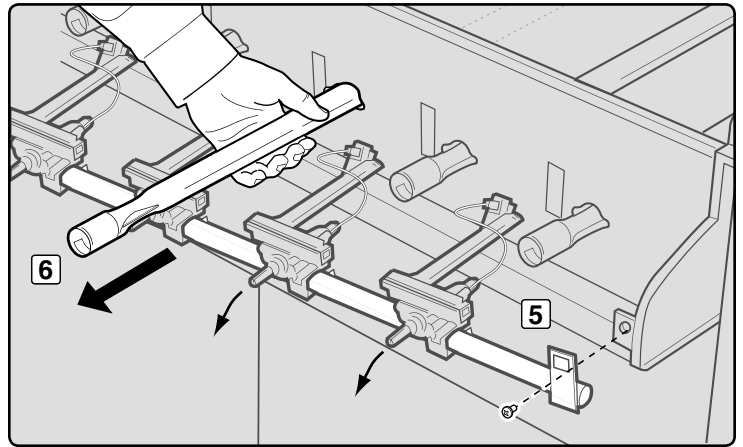

SIDE BURNER MAINTENANCE



⚠ WARNING: All gas controls and supply valves should be in the OFF position.

Make sure black wire is connected between the igniter and electrode.

Make sure white wire is connected between the igniter and grounding clip.

Spark should be a white/blue colour, not yellow.

- A) Igniter wire (1)
- B) Ground wire (2)
- C) Burner (3) ♦

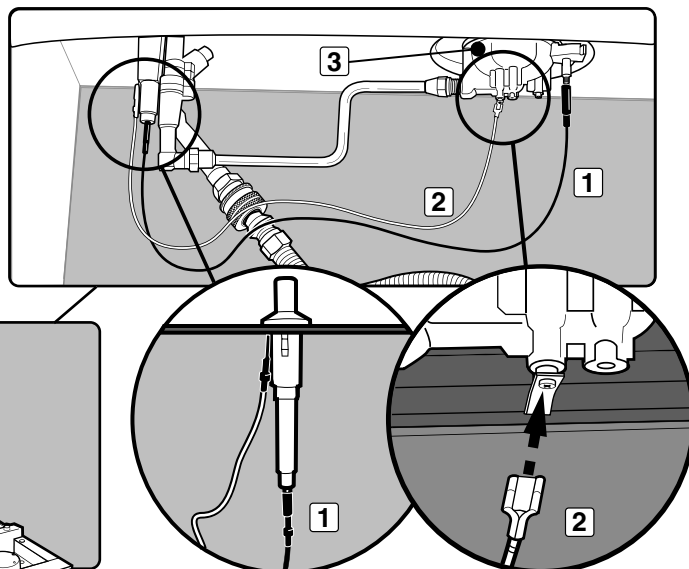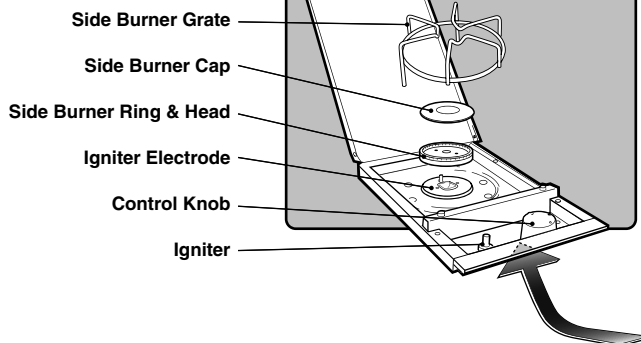

ANNUAL MAINTENANCE

Inspection and Cleaning of the Spider/Insect Screens

To inspect the Spider/Insect screens, remove the control panel. If there is dust or dirt on the screens, remove the burners for cleaning the screens.

Brush the Spider/Insect screens lightly with a soft bristle brush (i.e. an old toothbrush).

⚠ CAUTION: Do not clean the Spider/Insect screens with hard or sharp tools. Do not dislodge the Spider/Insect screens or enlarge the screen openings.

Lightly tap the burner to get debris and dirt out of the burner tube. Once the Spider/Insect screens and burners are clean, replace the burners.



If the Spider/Insect screen becomes damaged or cannot be cleaned, please contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

Burner Flame Pattern

The Weber® gas barbecue burners have been factory set for the correct air and gas mixture. The correct flame pattern is shown.

- A) Burner tube (1)
- B) Tips occasionally flicker yellow (2)
- C) Light blue (3)
- D) Dark blue (4)

If the flames do not appear to be uniform throughout the burner tube, follow the burner cleaning procedures. ♦

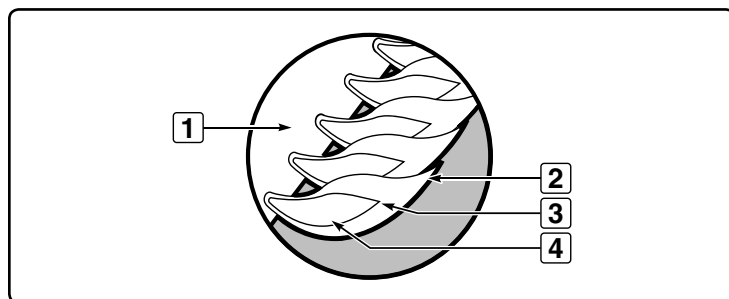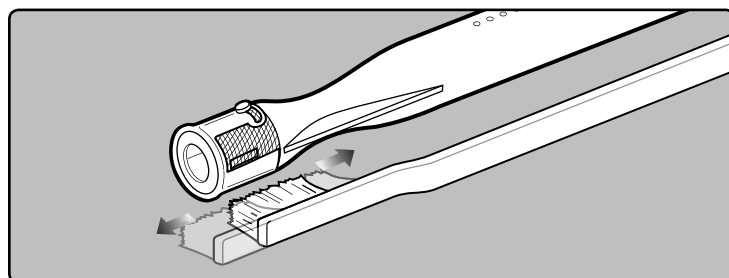

⚠ ATTENTION: This product has been safety tested and is only certified for use in a specific country. Refer to country designation located on outer carton.

These parts may be gas carrying or gas burning components. Please contact Weber-Stephen Products LLC Customer Service Department for genuine Weber-Stephen Products LLC replacement part(s) information.

⚠ WARNING: Do not attempt to make any repair to gas carrying, gas burning, igniter components or structural components without contacting Weber-Stephen Products LLC Customer Service Department. Your actions, if you fail to follow this Product Warning, may cause a fire, an explosion, or structural failure resulting in serious personal injury or death as well as damage to property.



WEBER-STEPHEN PRODUCTS LLC
www.weber.com[®]