

Galanz

Galanz

MODEL: GLKE17RDRM15

RETRO KETTLE USER MANUAL



Thank you for purchasing a Galanz product. Please read this manual carefully for correct usage and safety, and keep for future reference. For service, support and warranty information, call 800-562-0738.

CONTENTS

Important Safety Instructions	1
What's in the Box	3
Before First Use	4
Start Using Your Retro Kettle	5
How To Use	
Care & Maintenance	7
Cleaning	
Product Warranty	8

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR GALANZ RETRO KETTLE.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read and familiarize yourself with all operating instructions before using this kettle.
- Before plugging your kettle into the outlet, visually check that the kettle is intact and is not damaged.
- Check that the voltage corresponds with that of the local network before connecting the appliance into the main power supply.
- This kettle is only to be used with the stand provided.
- Close supervision is required when using this appliance near children.
- Never leave this appliance unattended with children.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.

- Do not leave the appliance unattended while on.
- Always use this appliance on a solid, level, non-flammable surface.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the cable to ensure that there is no damage. Should there be any signs of damage, the appliance should not be used.
- Do not allow the power base cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the power base cable under carpets, rugs, etc.
- Allow the unit to cool before storing.
- Never place the appliance near flammable surfaces.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- Do not immerse the appliance, power base or its cord in water or any other liquids.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area. Do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Make sure to grasp the plug, not the cord.
- Do not cover this appliance.
- Never place this appliance on an electric, gas, or any other type of stove.
- **WARNING: Do not remove lid while the water is boiling.**
- Never fill the kettle more than its capacity – ensure the water level is between the minimum and maximum marks. If the kettle is overfilled, boiling water may be ejected.
- Always make sure that the lid is fitted properly and do not remove while the water is boiling.

CAUTION: The outside surface of the kettle will get hot during use.

 
- Ensure the kettle is switched off before removing it from the base.

SPECIFICATION

Model	GLKE17RDRM15
Power Consumption	120V ~ 60Hz
Watts	1500 W
Capacity	1.7 L
Product Weight	2.65 lbs / 1.2 kgs
Dimensions (DxWxH)	8.26 x 5.98 x 10 inches

HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX

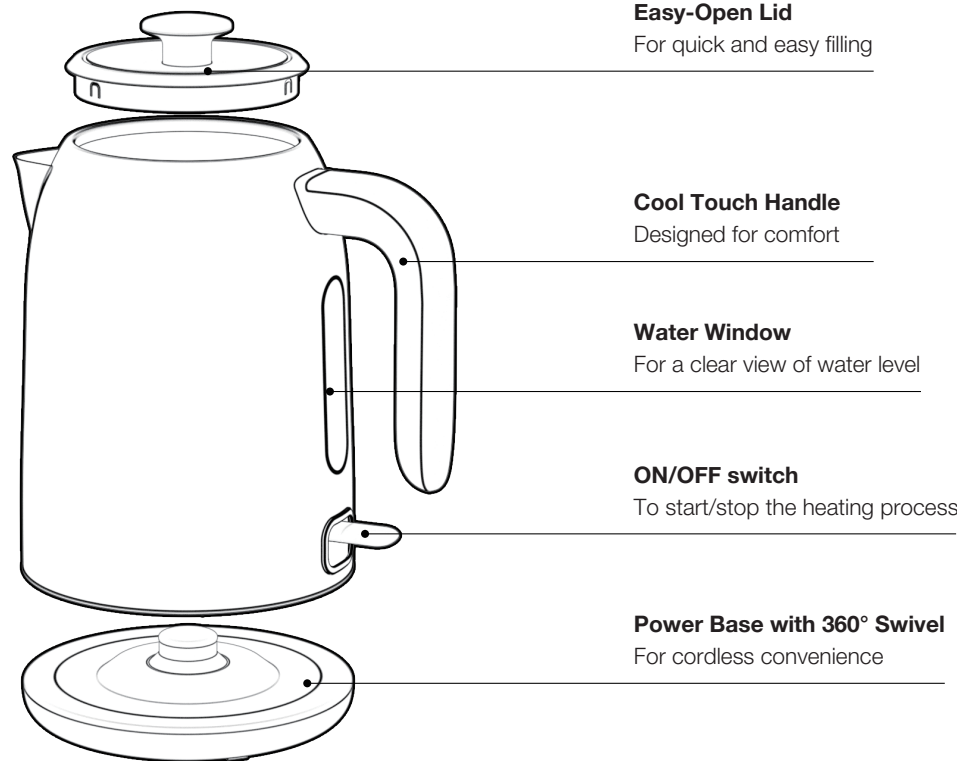

BEFORE FIRST USE

 
Before using your Retro Kettle for the first time, be sure to:

- Review all warnings in **IMPORTANT SAFETY INSTRUCTIONS**.
- Please read the operating instructions thoroughly and keep them in a safe place for future reference.
- Before using the kettle for the first time, fill to the maximum mark and allow to boil. Pour out the boiled water and then repeat the process. If a slight taste or odor remains, repeat the above process once more.

START USING YOUR RETRO KETTLE

HOW TO USE


1. Place the kettle on a flat level surface.

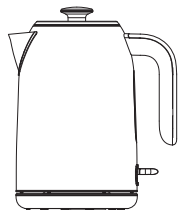


2. Fill the kettle with water to the desired level ensuring that it is above the MIN mark and below the MAX mark.



 3. Place the lid on the kettle and place it onto the base.

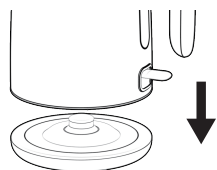

 4. Insert the power base plug (with dry hands) into the socket.

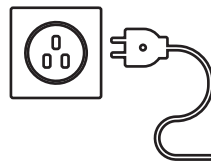

5. Push down the power on/off switch. The light on the bottom edge will illuminate and the water will begin to boil.

NOTE: Boiling a full kettle of water (1.7 liters) takes about 7 minutes.



START USING YOUR RETRO KETTLE

HOW TO USE

6. At the end of the boiling cycle, the power on/off switch will automatically switch off.

 


7. Wait until the water has finished boiling before removing it from the power bases.

NOTE: Do not take the kettle from the power base right after the power switch flips up because the boiled water may spill out from the spout. It is recommended to take the kettle 30 seconds after the water is boiled.



8. Ensure the lid is correctly fitted before pouring boiling water. Beware of scalding.

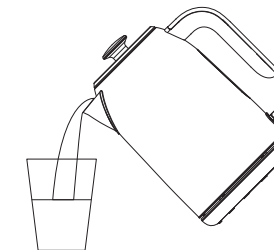

CARE & MAINTENANCE

CLEANING

- Do not clean your kettle in a dishwasher.
- Always disconnect the kettle from the main power supply before cleaning.
- Wipe the outside of the kettle with a soft damp cloth. Never clean any part of the kettle with harsh or abrasive cleaners.
- Do not submerge any part of the base, mains cable or kettle in water or any other liquids.

DECALCIFICATION OF YOUR KETTLE

- The frequency of the decalcification depends on the hardness of the water in your area and how often the appliance is used.
- If the kettle switches off before it boils or has a white deposit building up inside then it probably needs to be decalcified.
- Do not use vinegar. Only use a commercially available decalcification agent. Carefully follow the quantities recommended in the instructions of the agent.

PRODUCT WARRANTY

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warrantied for one year following purchase for defects in material and workmanship. **Please save your receipt as proof of purchase is required to make a warranty claim.** During this warranty period, we will provide the replacement cost of this product, a replacement of an equivalent product, or repair per our discretion.

The warranty cannot be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer purchaser upon purchase from an authorized retailer.

■ **This warranty does not cover and excludes damages or defects caused by:**

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product

- Use in a manner not intended and outlined in the user manual
- Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the

above exclusions will be denied. All liability is limited to the purchase price and does not include any:

- Retail offered extended warranties
- Tax
- Other charges(including postage to send required materials)
- Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.

WARRANTY REGISTRATION

WARRANTY REGISTRATION

Please mail this warranty card to address below within 30 days of purchase. Or you can register your product on line by going to [www.galanz.com\us](http://www.galanz.com/us).

Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.

PLEASE PRINT CLEARLY.

Name_____

Address_____

City_____State_____Zip_____

Phone_____Email_____

Model Number_____Serial Number_____

Purchase Location_____

You must attach a copy of your purchase receipt to validate your registration.