

Wiring Diagram

IT1200 / IT1500 / IT1900

AIR-COOLED & WATER-COOLED SELF-CONTAINED - 1 PHASE

(Includes Marine Disconnect Switch)

