


KitchenAid®

27" SLOW COOK WARMING DRAWER

MODELS:

KOWT107EBS00 (Black Stainless)


CONTROL PANEL AND DRAWER PARTS

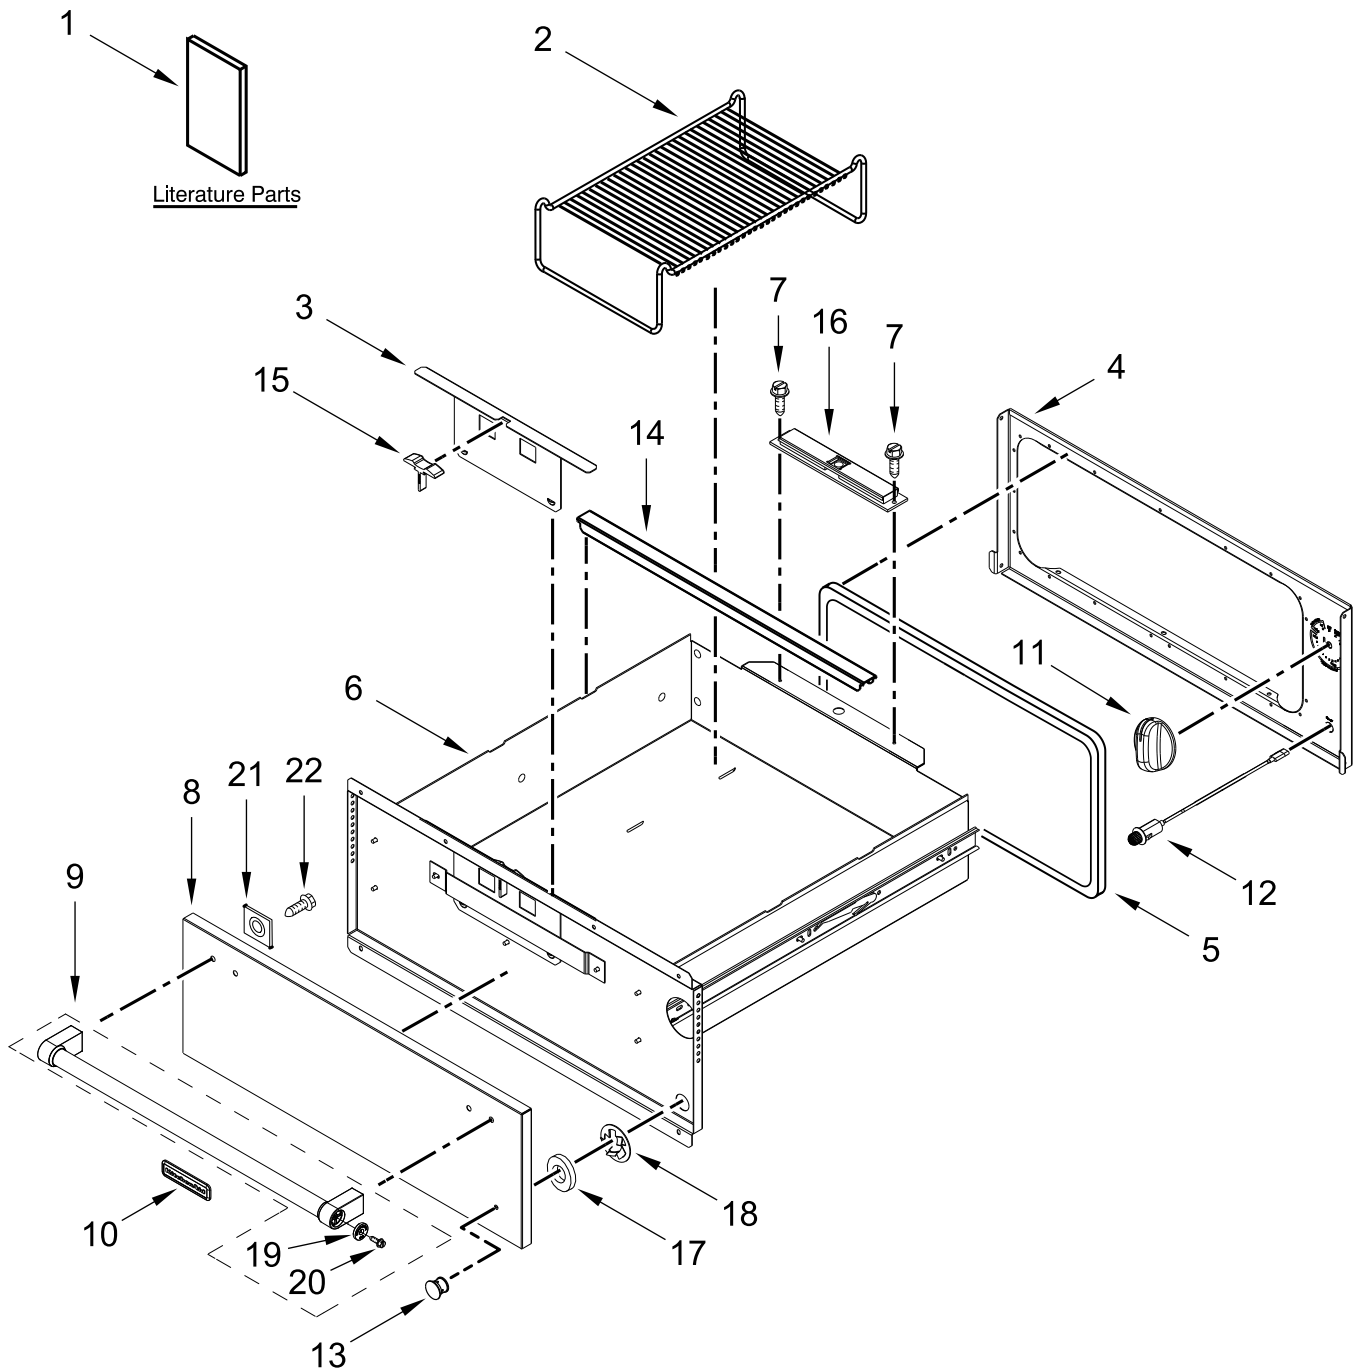

CONTROL PANEL AND DRAWER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	9763645	Assembly, Drawer	15	9763125	Grip, Vent
	W10713340	Guide, Use & Care	7	7101P376-60	Screw	16	W10035910	Magnet
	W10064720	Sheet, Tech	8	W11452854	Drawer Skin Assembly	17	4456861	Spacer, Lens
	W10845860	Installation Instructions	9		Assembly, Handle	18	4456862	Clip, Lens Retainer
				W11241574	Stainless	19	W10551026	Medallion, Handle
2	8273277	Rack, Warming Drawer	10	W10518672	Badge	20	W10656499	Screw
			11	4455984	Knob, Thermostat	21	3823F017-45	Spacer, Handle
3	W10162376	Slide, Vent	12	W10489562	Light, Indicator	22	W10480830	Screw
4	W10491701	Panel, Front	13	4456314	Lens, Indicator			
5	W10164997	Gasket, Drawer	14	W10409137	Rail, Pan			

INTERNAL WARMING DRAWER PARTS

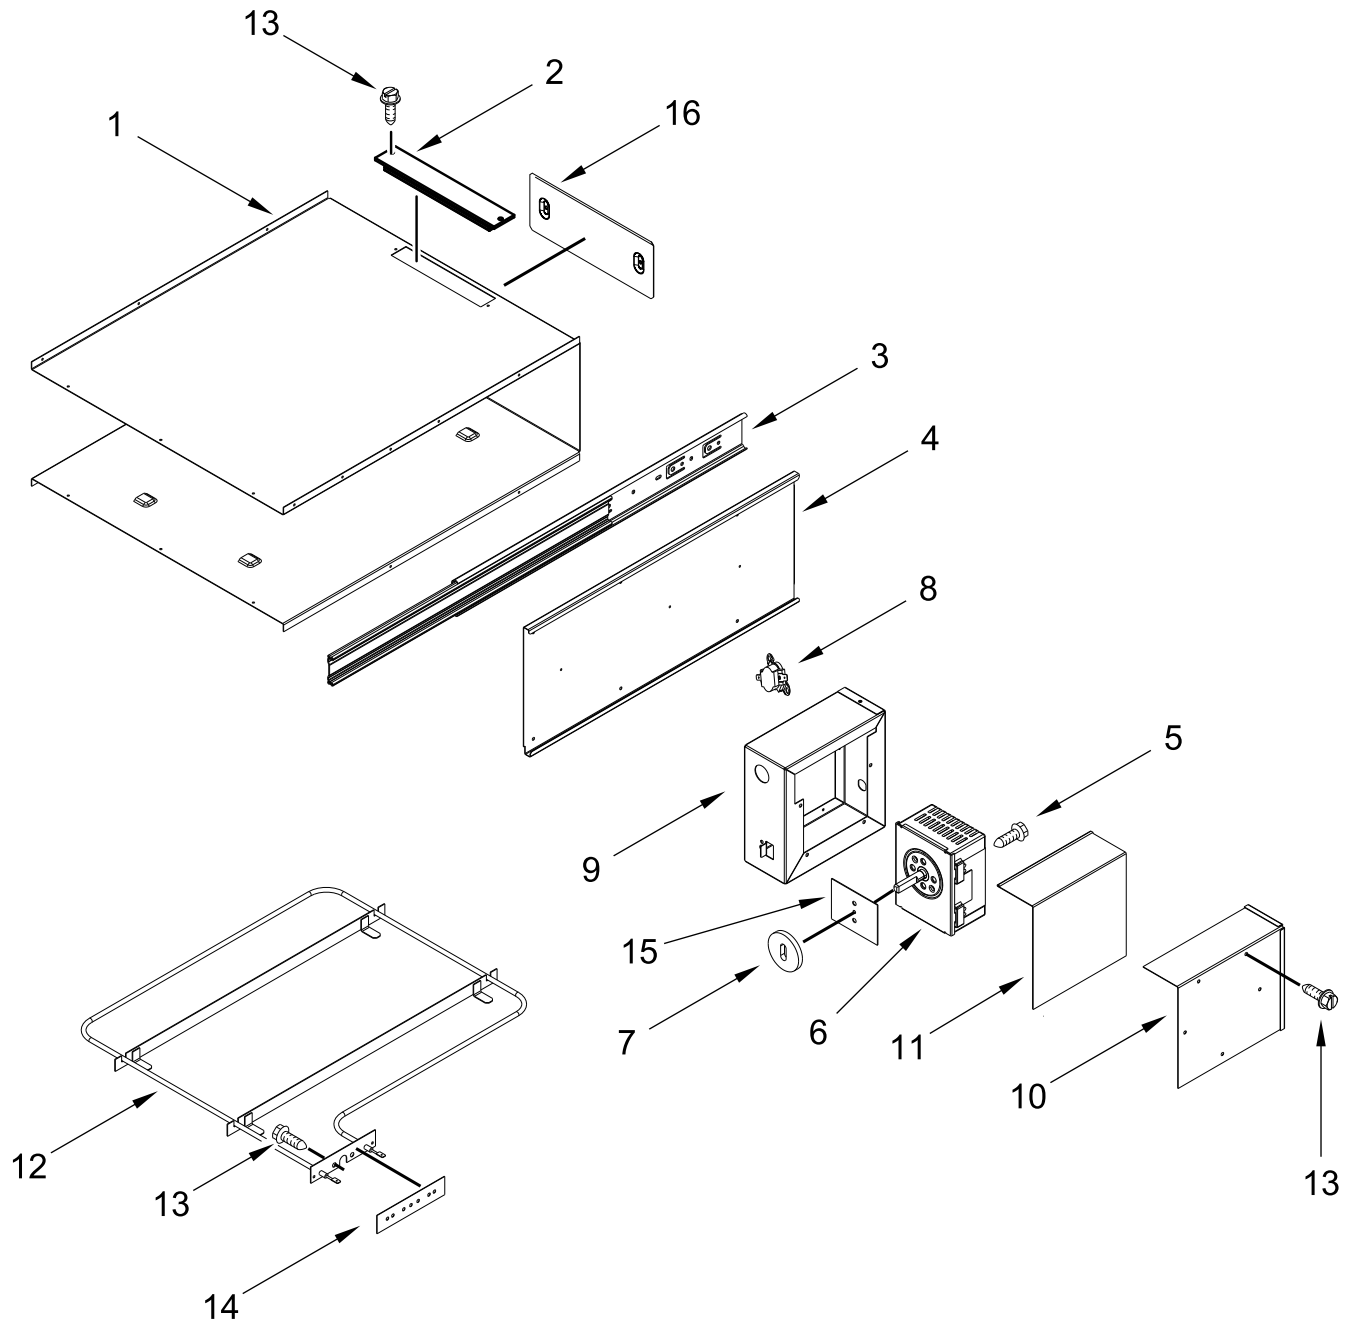

INTERNAL WARMING DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10684522	Wrapper	8	9763126	Fuse, Thermal	16	W10118073	Shield, Heat
2	W10035910	Magnet	9	9763122	Enclosure, Electric			FOLLOWING PARTS NOT ILLUSTRATED
3	W10188461	Assembly, Slide	10	9763121	Cover, Enclosure			
4	W10299387	Wall, Cavity (Left)	11	W10117363	Gasket, Enclosure		W10129043	Harness, Main
	9762307	Wall, Cavity (Right)	12	W10751754	Element, Heating		W10129023	Cord, Power
5	7101P309-60	Screw	13	3196537	Screw		W10131847	Sensor, Sealed
6	W10121337	Control	14	W10118049	Seal, Heating Element		4452601	Relief, Strain
7	W10117362	Gasket, Control	15	W10118113	Seal, Switch		3400015	Screw, Grounding