

INSTRUCTION MANUAL

KITCHEN SCALE

MANUEL D'UTILISATION

BALANCE DE CUISINE

MANUAL DE USO

BÁSCULA DE COCINA

EN

FR

ES



---

**Important information for the user**  
**Informations importantes pour l'utilisateur**  
**Información importante para el usuario**



**Instructions / Instructions / Instrucciones**



**Description / Description / Descripción**



**Use / Usage / Uso**



**Cleaning and maintenance / Nettoyage et entretien / Limpieza y mantenimiento**



**Safety instructions / Directives de sécurité / Instrucciones de seguridad**



**Information / Informations / Información**



**Advice / Conseil / Recomendaciones**



Scan the QR code for quick access to the My Smeg Assistant portal  
Scannez le code QR pour un accès rapide au portail My SMEG Assistant  
Escanee el código QR para acceder rápidamente al portal My Smeg Assistant

 
 
 
 
**MY SMEG**  
**ASSISTANT**

Dear Customer, Thank you for purchasing one of our appliances. Our products are unique because they combine iconic style with innovative technical solutions. They match perfectly with other products in our range and work equally well as a standalone design objects in your kitchen. We hope you enjoy using your new appliance! Best regards.

Cher client, merci beaucoup pour votre achat. Nos produits sont uniques car ils combinent une forte recherche esthétique avec une conception technique innovante. Ils sont coordonnés avec d'autres produits de la gamme et peuvent constituer des éléments d'ameublement et de design. En espérant que vous pourrez apprécier pleinement votre nouvel appareil électroménager, nous vous adressons nos meilleures salutations.

Estimado cliente, le damos las gracias por su compra. Nuestros productos son únicos porque combinan una notable búsqueda estética con un diseño técnico innovador. Se combinan con otros productos de la gama y se pueden utilizar como elementos de decoración y diseño. Le deseamos que pueda apreciar plenamente su nuevo electrodoméstico. Le enviamos nuestros saludos más cordiales.

**SMEG S.p.A.**

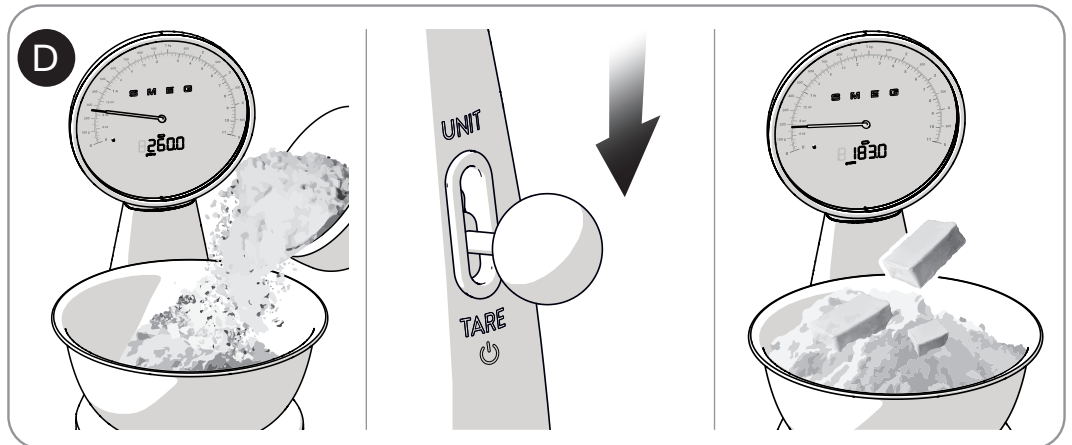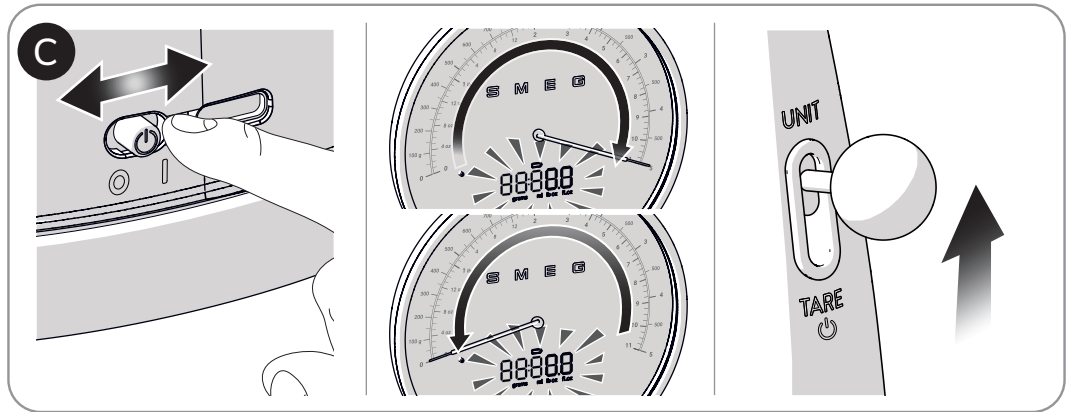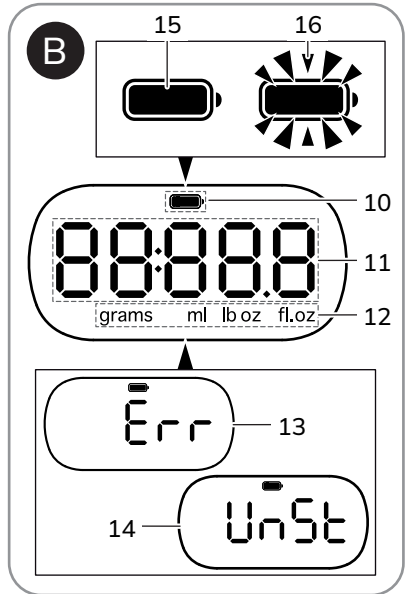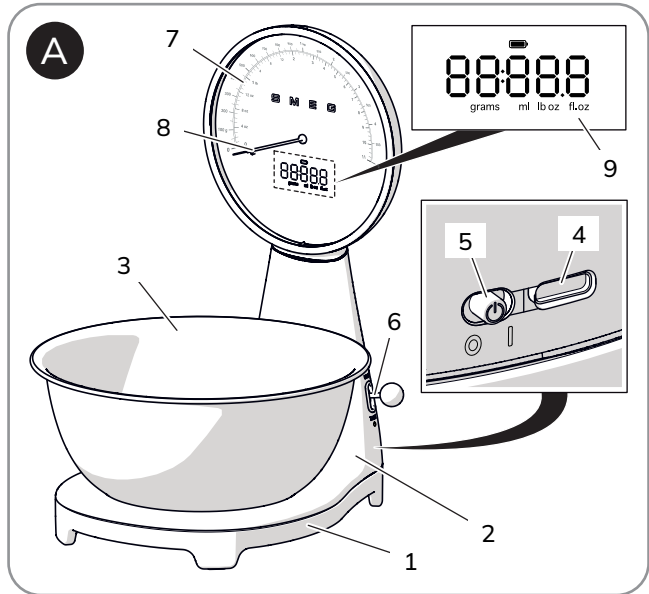

# IMPORTANT SAFEGUARDS



**WARNING:** If the instructions contained in this manual are not followed precisely, a fire or explosion may result causing property damage, personal injury or death.



## READ AND SAVE THESE INSTRUCTIONS

Your safety and the safety of others are very important. We have provided many important safety messages throughout this manual and on the appliance. Read all the instructions before using the appliance and always obey all safety messages.



## RECOGNIZE SAFETY INFORMATION

This is the safety alert symbol. This symbol alerts you to potential hazards that can result in severe personal injury or death.

### UNDERSTAND SIGNAL WORDS

A signal word – DANGER, WARNING, or CAUTION – is used with the safety alert symbol. DANGER denotes the most serious hazards. It means you could be killed or seriously injured if you do not immediately follow the instructions. WARNING means you could be killed or seriously injured if the instructions are not followed. CAUTION indicates a potentially hazardous situation, which, if not avoided, could result in minor to moderate injury.

## WARNING



- This appliance is intended for residential use only.
- Use this appliance only for its intended purpose. The manufacturer cannot be held liable for damage caused by improper use of this appliance.
- This appliance complies with current safety regulations. Improper use can result in personal injury and material damage.
- Read all the instructions before installing or using the appliance for the first time.
- Keep these operating instructions in a safe place and pass them on to any future user.



## IMPORTANT SAFEGUARDS

The safety messages will inform you of potential hazards, on how to avoid the risk of injury and what can occur if the instructions are not followed.

**IMPORTANT: Observe all codes and ordinances in force.**

**WARNING:** For your safety, the instructions contained in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors, liquids or materials near this or any other appliance.



**NOTE:** This appliance is NOT designed for installation in manufactured (mobile) homes or in recreational vehicles (RVs).

**DO NOT** install this appliance outdoors.

# IMPORTANT SAFEGUARDS



## WARNING



To reduce the risk of fire, electrical shock, personal injury, or damage when using the appliance, follow basic safety precautions, including the following:

EN

## 1 Instructions

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

### 1.1 Intended use

- Use the appliance only indoors.
- This appliance is intended for household use and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - bed and breakfast facilities / farm accommodation
  - by guests in hotels, motels and other residential accommodations
- Any other use, for example in restaurants, coffee bars and coffee shops is considered improper.
- It must only be used for weighing solid and/or liquid food and cooking ingredients. Do not use the appliance for anything other than its intended use.
- This appliance may be used by people of reduced physical, sensory or mental abilities (including children over the age of 8), only if they are supervised by adults or have been trained on how to use the appliance safely and have understood the dangers associated with its use.
- Children must never play with the appliance.
- Keep the appliance out of the reach of children younger than 8.
- Cleaning and maintenance may be carried out by children who are at least 8 years old only if they are supervised by an adult.



# IMPORTANT SAFEGUARDS

## 1.2 General safety instructions

- Read this user manual carefully before using the appliance.
- Do not immerse the appliance, power cable or base in water or any other liquid.
- Do not use the appliance if it has been dropped or damaged.
- Do not recharge the appliance if the power cable is damaged.
- Never wash the appliance in the dishwasher.
- Do not position the appliance above hot surfaces, hob burners, or inside a hot oven. Keep the appliance away from heat sources or steam.
- In the event of a fault, or if the power cable is damaged, the appliance must be repaired only by a qualified technician or an authorised technical support centre.
- Any modifications to the appliance will make the warranty invalid.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- This appliance contains batteries that are only replaceable by an authorised Service Centre.

### 1.2.1 Battery safety

The supply terminals are not to be short-circuited.

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

- Keep batteries out of the reach of children.
- Do not crush, puncture, dismantle or otherwise damage batteries.
- Do not store above 60 °C.
- Do not dispose of exhausted batteries in household waste.
- Do not expose the batteries to heat or fire as they may explode.
- Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

This product is fitted with a 3.7V 1200 mAh lithium ion rechargeable battery (non-removable).



## 1.3 Caution

- Do not touch or handle the appliance with wet hands.
- Store the appliance in a dry place. Avoid exposing the appliance to harmful weather conditions such as rain, humidity, freezing temperatures etc.
- Place the appliance on a flat, stable surface to ensure correct weighing.
- Place the ingredients to be weighed into the bowl. Place the bowl gently on the scale to avoid damaging it. Failure to follow the above instructions may void the warranty.
- Do not subject the product to strong impacts, which could damage it.
- Empty the bowl after weighing the ingredients. Do not use the appliance as a surface to place things on.
- Do not leave the product in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas from the battery.
- Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## 1.4 Manufacturer liability

The manufacturer declines any liability for damage to persons or property caused by:

- Use of the appliance other than the one envisaged
- Not having read the user manual
- Tampering with any part of the appliance
- Use of non-original spare parts
- Failure to comply with the safety instructions



These instructions must be kept in a safe place. If the appliance is assigned to another user, it must always be accompanied by these instructions.

These instructions can also be downloaded from the Smeg website at “[www.smeg.com](http://www.smeg.com)”.



# IMPORTANT SAFEGUARDS

## 1.5 Disposal



This appliance must be disposed of separately from other waste (Directive 2012/19/EU).

- The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.
- Old electrical appliances must not be disposed of together with household waste! To comply with current legislation, old appliances, on reaching the end of their useful lives, should be taken to a disposal facility where they can be sorted. The relevant local authorities or their waste disposal operators can provide further information.
- Take these packing materials to the appropriate recycling centre.

To help protect the environment, please dispose of this product carefully at the end of its useful life and do not dispose of it together with household waste. Contact your local authority for information on disposal / recycling centres and opening hours.

Faulty or used batteries/rechargeable batteries must be recycled in accordance with Directive EU 2023/1542 and its amendments. Please return the batteries/rechargeable batteries and/or the product to the available collection points.

# IMPORTANT SAFEGUARDS



Environmental damage through incorrect disposal of the batteries/rechargeable batteries!

Batteries/rechargeable batteries may not be disposed of with the usual domestic waste.

They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metals are as follows:

Cd = cadmium,

Hg = mercury,

Pb = lead.

That is why you should dispose of used batteries/rechargeable batteries as a local collection point.



## Fire hazard:

- Do not position the appliance above hot surfaces, hob burners, or inside a hot oven.



## Danger of suffocation:

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the packaging bags.



## Risk of injury:

- Improper use of the appliance can cause injury.



## Danger of electrocution:

- Use only approved USB chargers.
- Do not use an adapter.
- Avoid spilling liquids onto the power plug and base.
- Failure to follow these instructions could cause damage, injury or electrical shock.
- Disconnect the power cable from the electrical system.

## SAVE THESE INSTRUCTIONS



# Description

## 2 Description of the product

### 2.1 Description of the scales (Fig. A)

- 1) Weighing pan
- 2) Body
- 3) Stainless steel bowl
- 4) USB port
- 5) ON/OFF selector
- 6) Activation and unit of measurement / TARE weight lever
- 7) Dial
- 8) Pointer
- 9) Display

### 2.2 Description of the display (Fig. B)

- 10) Battery charge status indicator.
- 11) Displays the weight.
- 12) Displays the unit of measurement set.
- 13) Overload indicator. "Err" appears on the display when the maximum weighing capacity of the scale has been exceeded.
- 14) Unstable indicator. "UnSt" appears on the display when the scale is turned on and the load cell detects an unstable weight.
- 15) Low battery indicator. The icon is steady on the display when the battery charge is less than 30%.
- 16) Flat battery indicator. The icon flashes on the display when the battery charge is less than 10%. Charge the battery.

### Charging the battery

The battery can be charged by connecting the USB cable to a USB charger or a USB wall adapter.

- Insert the charging cable into the USB-C port on the rear.
- Insert the other end into an approved USB charger.

The battery icon flashes on the display during charging and turns to a steady icon when charging is complete. The scale also recharges when the selector (5) is set to OFF.

The scale can be used even when charging the battery.

If the scale is in stand-by mode, move the lever (6) to "TARE": 0 will appear on the display and the battery icon will start flashing.

Once the battery is full charged ensure to disconnect it from the power supply to avoid over-charging and also in order to prolong the battery life.



We recommend using a standard USB charger - 5V/2A.

The time for a full battery charge is approximately four hours.

# Description



## Display view

### Display view

Grams



 
Capacity: 2 - 5000 g  
Resolution: 1 g

Millilitres




Capacity: 2 - 5000 ml  
Resolution: 1 ml

lb oz



Capacity: 0.1 - 11 lb  
Resolution: 0.1 oz

 Fl. oz



Capacity: 0.1 - 176 fl. oz  
Resolution: 0.1 fl. oz



The factory setting for the unit of measurement is grams.



# Use

## 3 Use

### 3.1 Before first use

- The scale should not be subjected to strong impacts: handle with care.
- In order to work correctly, the scale should be placed on a flat, stable surface.
- Clean the scale with a damp cloth, avoiding the use of solvents and abrasives. Do not immerse in water.



Parts that may come into contact with food are made of materials that comply with the provisions of the laws in force.

### 3.2 Operation (Fig. C-D)

- Switch the scale on using the ON/OFF selector on the rear.
- The pointer makes a full revolution and the display lights up. Wait until the pointer and the display indicate 0: the scale is now ready for use.
- Move the lever to "UNIT" to select the required unit of measure.



The selected unit of measure is saved in stand-by mode.

#### General weighing

- Place the ingredient to be weighed into the bowl.
- Wait until the value indicated by the pointer and shown on the display has stabilized.
- The weight displayed increases or decreases according to the amount of the ingredients added or removed.
- To switch off the scale, move the lever to "TARE" and hold it there for a few seconds.



## Tare function

- Move the lever to “TARE” to reset the display.
- Add the ingredients to be weighed.
- Move the lever to “TARE” again to zero the scale each time you wish to add an ingredient.
- When you remove the ingredients, including the bowl, a negative value will appear on the display. Move the lever to “TARE” to reset the scale again.



When weighing, it is normal for the pointer to show the weight with a slight delay compared to the weight shown on the display.



During the weighing process, the scale switches automatically to stand-by mode after 3 minutes of inactivity. If 0 is displayed, the scale will turn off automatically after 1 minute of inactivity.



To wake up the scale from stand-by mode, move the lever to either “UNIT” or “TARE”.

## 4 Cleaning and maintenance

### 4.1 Cleaning the surfaces

Clean the surfaces on a regular basis to keep the appliance in good condition.

Wipe the surfaces with a damp cloth and then dry thoroughly with a soft tea towel or microfibre cloth.

The stainless steel bowl can be washed in a dishwasher.

### Improper use: Risk of damage to surfaces

- Do not use steam jets to clean the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach.
- Do not use abrasive or corrosive detergents (e.g. powder products, stain removers and metallic scourers).
- Do not use rough or abrasive materials or sharp metal scrapers.

# What to do if...

Problem	Cause	Solution
The display does not light up / the pointer does not move	The power selector is in the OFF position	Switch the device on Move the lever up or down
	The product is discharged	Connect the charging cable to a charger and wait for the device to charge fully
	The product is faulty	Contact a Service Centre
The product does not charge	The charging cable is not plugged in correctly	Remove the cable and insert it into the USB-C port
	The battery charger is faulty	Only use certified 5V 2A battery chargers
	The charging cable is faulty	Contact a Service Centre
The tare cannot be set	The product is not on a flat surface	Always use the scale on a flat, level surface
	The weighing pan is not stable	Make sure that the scale is stationary and level when setting the tare
It is not possible to read the measurement on the display	Low battery	Charge scale
	Faulty backlighting	Contact a Service Centre

# What to do if...

Problem	Cause	Solution
The scale is not stable	The rubber feet are incorrectly positioned	Make sure that the rubber feet have been mounted correctly
The pointer does not point zero	Pointer stuck	Lever turn on & turn off the scale for several times until the pointer goes back to zero
	The initial tare weight has not been set	Press the "TARE" button again
"Err" appears on the display when the device is switched on	The scale is not level	Make sure that the scale is on a level surface
	Maximum out of range weight 5000 g	Do not put weight over scale maximum capacity 5000 g to avoid damage the scale sensor



If the problem persists, contact your local Service Centre.

The manufacturer reserves the right to make any changes deemed necessary for the improvement of its products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

Le fabricant se réserve la faculté d'apporter, sans préavis, toutes les modifications qu'il jugera utiles pour l'amélioration de ses produits. Les illustrations et les descriptions figurant dans ce manuel ne sont pas contraignantes et n'ont qu'une valeur indicative.

El fabricante se reserva el derecho a aportar sin aviso previo todas las modificaciones que considere útiles para la mejora de sus propios productos. Las ilustraciones y las descripciones contenidas en este manual no son vinculantes y tienen solo valor indicativo.