


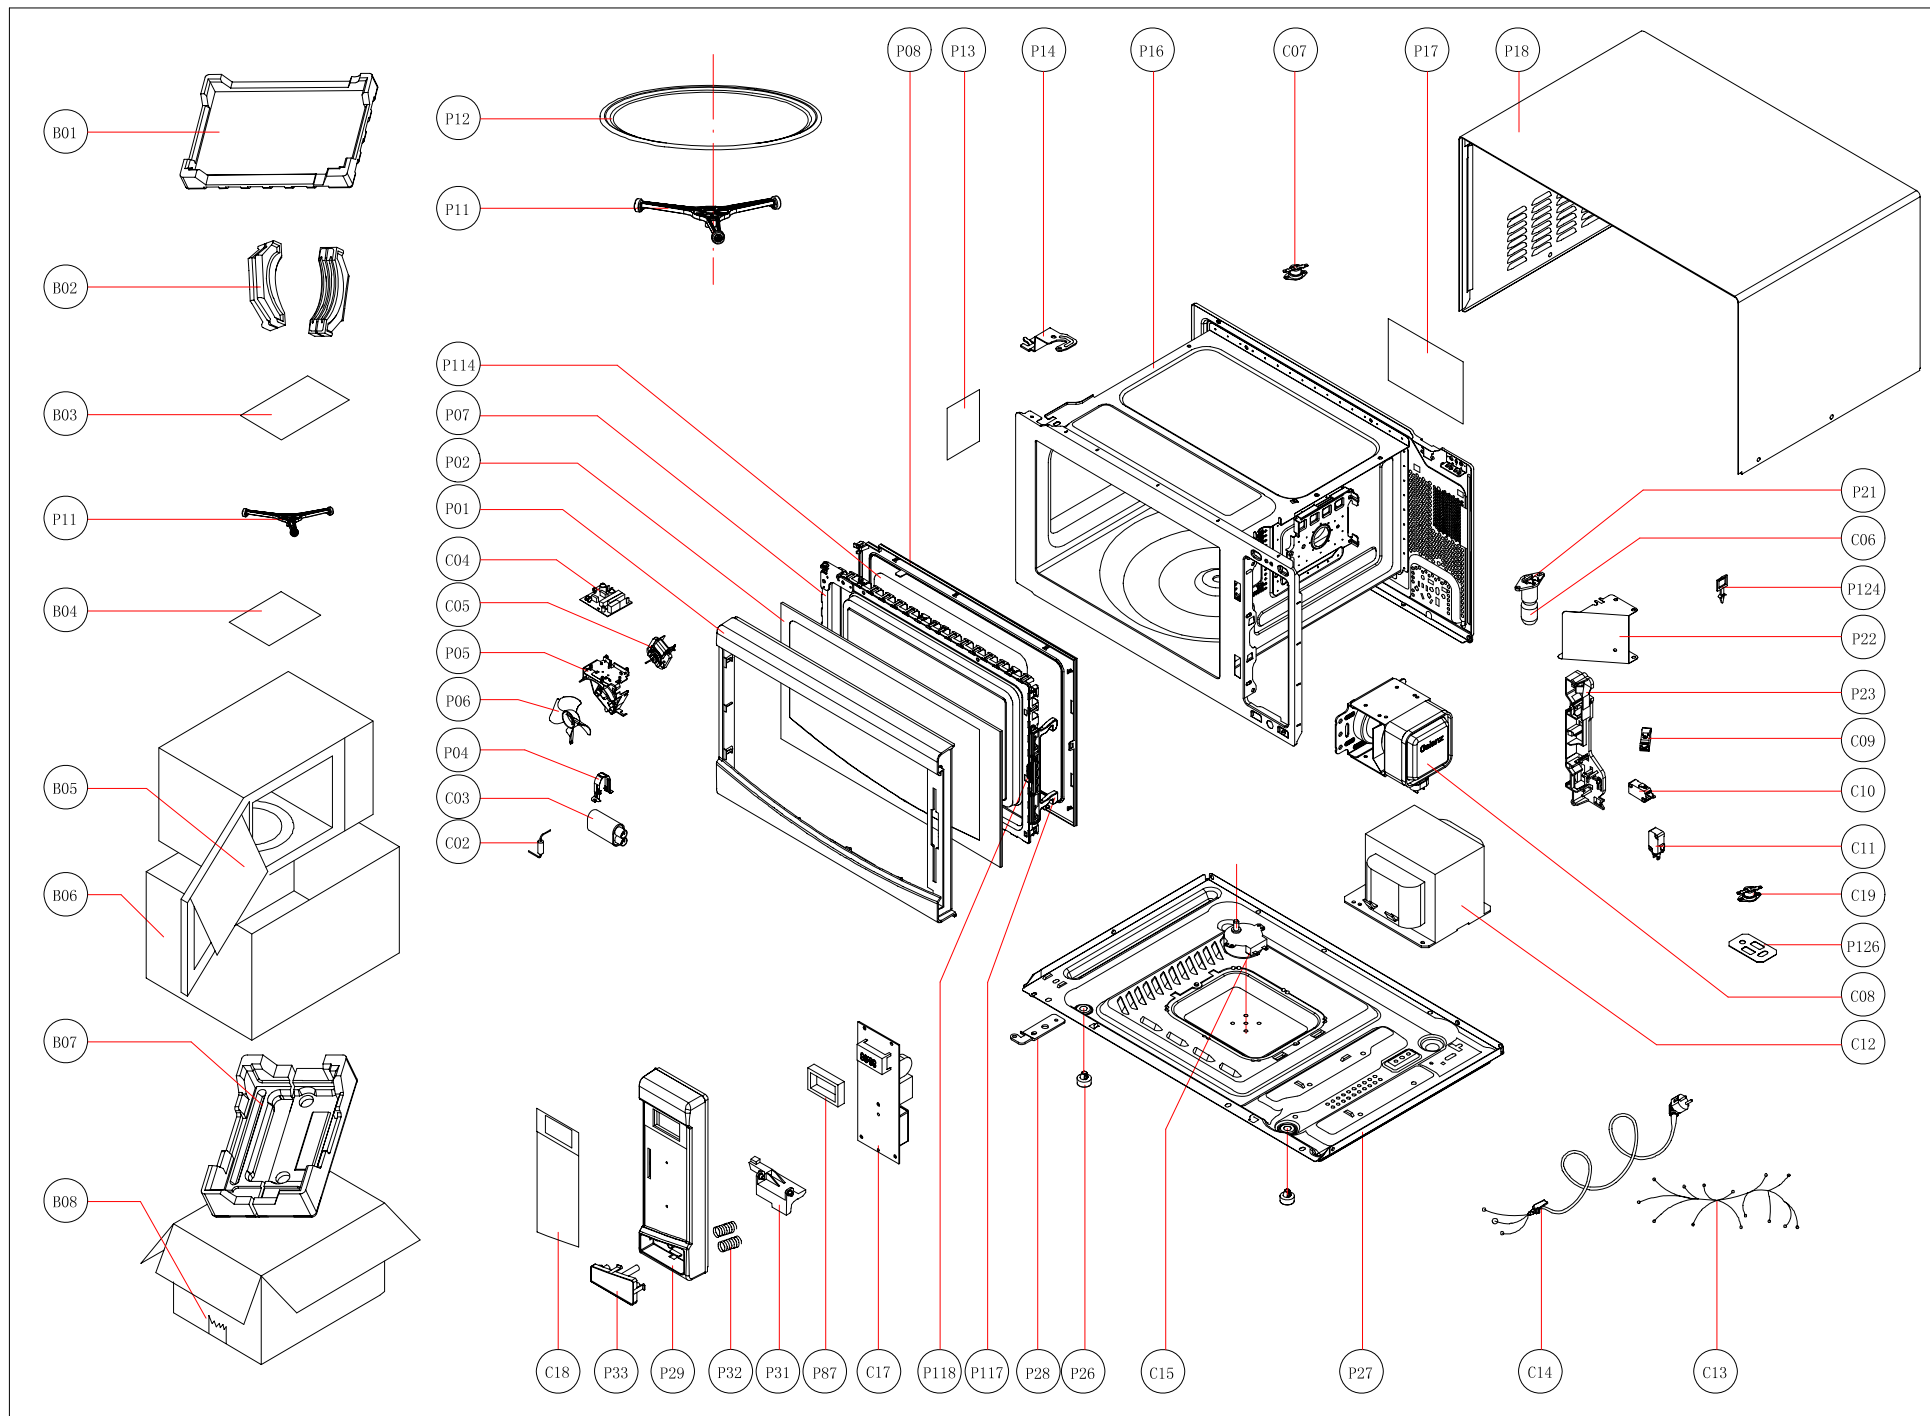

SEB177KEB-PA0C0A(P70B17AP-KE2) Parts and Components List

Art.	Name	Count	Art.	Name	Count	Art.	Name	Count
P01	door (with inlaids)	1	C02	h.v.diode	1	B01	upper foam cushion	1
P02	door window	1	C03	h.v. capacitor	1	B02	turntable cushion	1
P04	capacitor holder	1	C04	wave filter	1	B03	plastic bag	1
P05	fan bracket	1	C05	fan motor	1	B04	manual	1
P06	fan blade	1	C06	lamp	1	B05	protection film	1
P07	door frame	1	C07	thermostat 1	1	B06	plastic bag	1
P08	shielding board	1	C08	magnetron	1	B07	lower cushion	1
P11	roller ring	1	C09	microswitch	1	B08	carton	1
P12	glass turntable	1	C10	microswitch	1			
P13	splash shield mica sheer	1	C11	microswitch	1			
P14	upper hinge	1	C12	transformer	1			
P16	cavity	1	C13	wiring harness	1			
P17	label	1	C14	power cord	1			
P18	outer enclosure	1	C15	turntable motor	1			
P21	lamp socket	1	C17	P.C board	1			
P22	air duct bracket	1	C18	thin film swith	1			
P23	switch mount	1	C19	thermostat	1			
P26	foot	2						
P27	base plate	1						
P28	lower hinge	1						
P29	face board	1						
P31	prop	1						
P32	button spring	2						
P33	button	1						
P87	board seal	1						
P114	flake(in door frame)	1						
P117	door hook	1						
P118	door hook spring	1						
P124	clamp holder	1						
P126	mica flake	1						