


RNF1020C QUIETQUBE HEAD SECTION

Refer to Nameplate for Voltage Rating

Connections

- A, B, & C connect to a remote panel when used - Jumper must be removed when remote panel is used
- 1 & 2 connect to line voltage
- 3 & 4 energizes remote condensing unit (RCU) refrigeration - 2 Amp max
- 5 terminal or junction block located on top of the junction box.
- 6 junction box at rear of ice machine

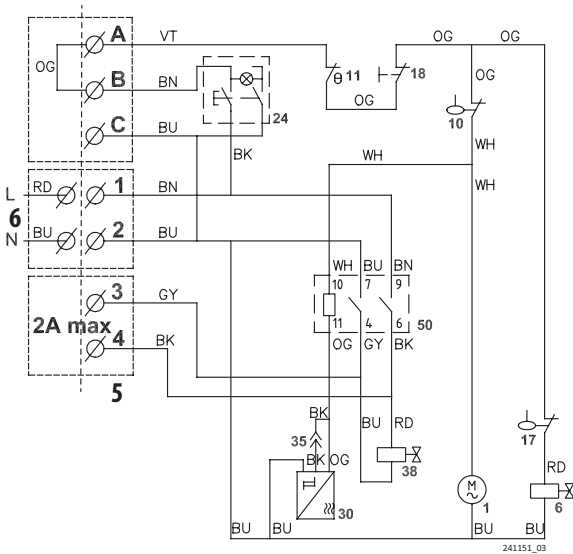

See page 146 for condensing unit wiring diagram.

Wiring Diagram Legend RNF1020C Head Section

1	Gear Motor
6	Water inlet valve
10	Low water level safety
11	Bin thermostat
17	Water level switch
18	Ice chute safety switch
24	On/Off switch
30	Rotation sensor
35	Compressor time delay by-pass
38	Solenoid Valve
50	Relay
Wire Color Designation	
WH	White
BU	Blue
GY	Grey
BN	Brown
BK	Black
RD	Red
OG	Orange
VT	Violet