



Compressor Start Component Wiring


UFK0200/UNK0200

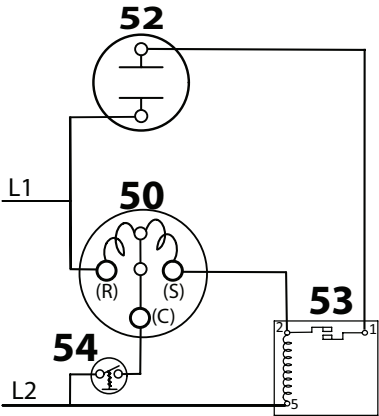

UNK0300/RFK0320/UFK0350/UNK0350/RFK0620

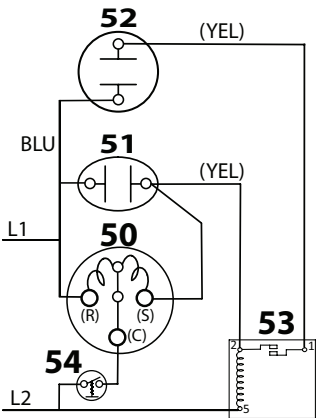

RFK1300/RFK2500

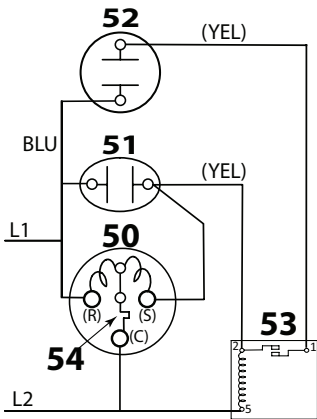

Compressor Wiring Legend	
50	Compressor
51	Run Capacitor
52	Start Capacitor
53	Relay
54	Overload

RFK0620/RNK0620/RNK1100

