


RFF0620/RNF0620/RNF1100

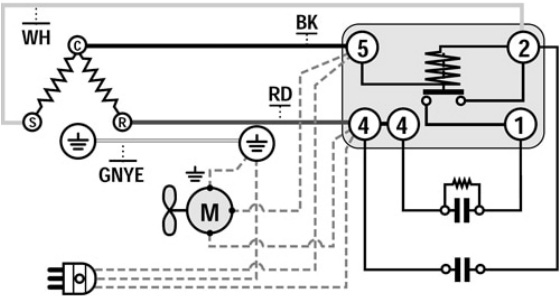

Compressor Wiring Legend	
50	Compressor
51	Run Capacitor
52	Start Capacitor
53	Relay
54	Overload