


Compressor Start Component Wiring

UFP0200/UNP0200

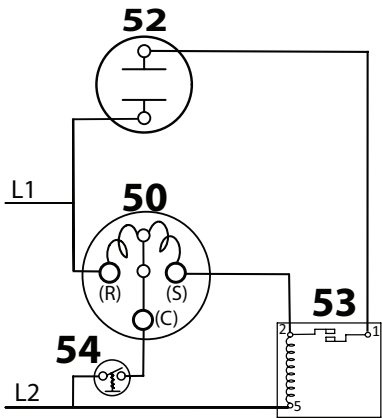

UNP0300/RFP0320/UFP0350/UNP0350/RFP0620

