

Instruction Sheet

Subject: K00517 - Left Hand Door Swing Installation

USE0050 MODELS

REMOVAL AND INSTALLATION OF DOOR

1. Remove top and bottom covers from door to access to hinge fasteners. Replacement top and bottom covers are supplied with the door in this kit.
2. Release door from top hinge - Remove two allen screws from the top of the door and lift door panel off of the two bottom allen screws.

NOTE: There are nylon washers for each bottom allen screw and one plastic bushing for the outside screw, do not misplace these parts they help the door swing smoothly.

3. Remove plastic covers from top and bottom hinges and remove screws securing the hinges. Reinstall screws in holes after hinges are removed.
4. Remove existing screws from the left side of the cabinet to reinstall hinges on opposite side.
5. Install top and bottom hinges in new location.
6. Install the bottom allen screws, nylon washers, and plastic screw cover (to the outside screw).
7. Before installing the new door, remove the plastic bushing for the top outside allen screw from the top of the old door and reinstall on the top of new door.
8. Place door on the two bottom screws.
9. Secure top of door with allen screws removed in step 2.
10. Install the supplied top and bottom covers on the replacement door.

