

A warning label with a black background. At the top, the word "WARNING" is written in large, white, bold, sans-serif capital letters, preceded by a white exclamation mark inside a triangle. Below this, there is a large, black silhouette of a fire flame. Underneath the flame, the words "Fire Hazard" are written in white, bold, sans-serif capital letters. Below that, there are three lines of white, sans-serif text: "Never place items in the washer that are dampened with gasoline or other flammable fluids.", "No washer can completely remove oil.", and "Do not dry anything that has ever had any type of oil on it (including cooking oils).". At the bottom, the sentence "Doing so can result in death, explosion, or fire." is written in white, sans-serif text.

NOTES:

- Not all features and cycles are on all models, and control panel appearance may vary.
- If your model has a touch interface, the control panel features a sensitive surface that responds to a light touch of your finger. To ensure your selections are registered, touch the control panel with your fingertip, not your fingernail. When selecting a setting or option, simply touch its name.
- If your model has physical buttons, make sure to press the button firmly.
- At cycle completion, your setting and option choices will be remembered for the next cycle. However, if power to the washer is lost, the settings and options will go back to the factory defaults.

NOTES:

- On some models and cycles, warm and hot water may be cooler than your previous washer.
- Even in a cold- or cool-water wash, some warm water may be added to the washer to maintain a minimum temperature. All rinses are cold.

WATER LEVEL

Set the Water Level knob to the Auto Sensing setting and the washer

	Adding HE detergent to basket: Add a measured amount of HE detergent or single-dose laundry packets into the basket. If using Oxi-type boosters, color-safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes. NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.
	Adding liquid chlorine bleach: Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or Oxi products in the same cycle with liquid chlorine bleach.
	IMPORTANT: The RINSE OPTIONS knob must be set to either 1 Rinse with softener or 2 Rinses with softener when using fabric softener. This ensures that fabric softener is added at the correct time in the rinse phase and is evenly distributed.

Adding liquid fabric softener manually to wash load:
During the final rinse, wait until the washer has completed filling and press the START/PAUSE button to pause the washer. Lift the lid and add the measured, recommended amount of liquid fabric softener. Do not use more than the recommended amount. Close the lid and press the START/PAUSE button again to start the washer. Always follow manufacturer's directions for correct amount of fabric softener based on your load size.

Wash

During the first stage of the sensing/wash cycle, water will partially fill the washer and begin to move the load. It is normal to have the sensing light on during this stage. You will hear the agitator rotate followed by a several second pause. This process will repeat for several minutes, allowing the entire load to become saturated. The lower water level

Canada:
1-800-807-6777
Whirlpool Brand Home Appliances
Customer eXperience Centre
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

WARNING: Do not wash water-resistant or water repellant-type clothing. Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

