



Liberty Furniture


LIBERTY FURNITURE

ASSEMBLY INSTRUCTIONS

DESCRIPTION: X BACK SIDE CHAIR-WHITE

ITEM#: 519WH-C3000S

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have some loose inside the carton during shipment. Identify and count all parts and compare with the parts list below:

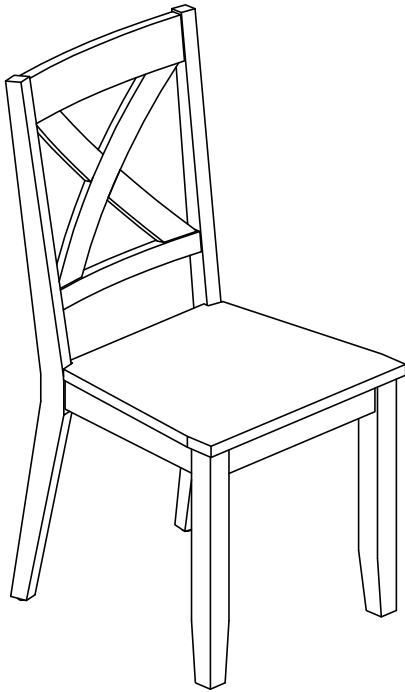

PARTS LITS



NO.	SKETCH	PARTS	Q'TY
1		CHAIR BACK	1PC
2		SEAT FRAME	1PC
3		LEG	2PCS

4


ASSEMBLY HARDWARE PACK

NO.	SKETCH	HARWARE	Q'TY
A	$\frac{1}{4}$ " x 75mm	LONG BOLT	4PCS
B	$\frac{1}{4}$ " x 40mm	SHORT BOLT	2PCS
C	$\frac{5}{16}$ " x 13mm	LOCK WASHER	10PCS
D	$\frac{5}{16}$ " x 19mm	FLAT WASHER	10PCS
E	4mm	ALLEN KEY	1PC
F	$\frac{5}{16}$ " x 6mm	NUT	4PCS
G	$\frac{5}{16}$ " x 90mm	WRECH	1PC


STEP 1:

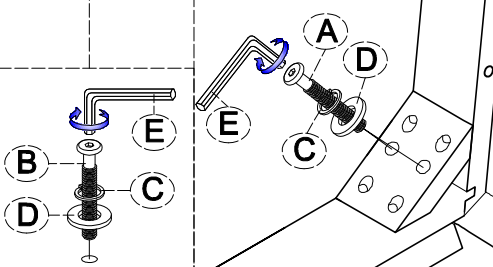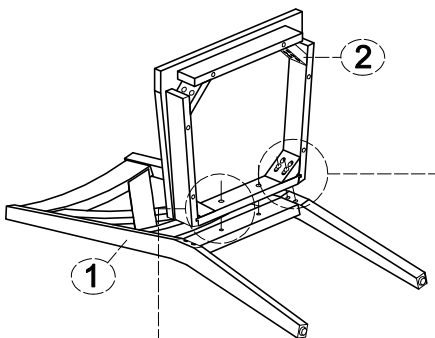

STEP 2:

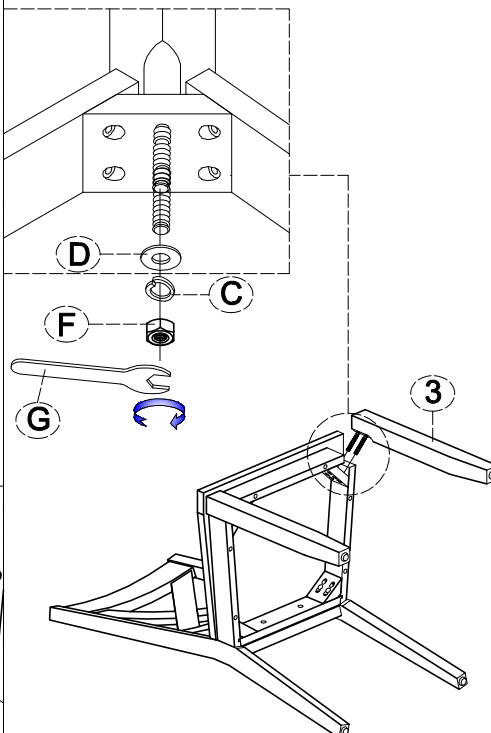

COMPLETE

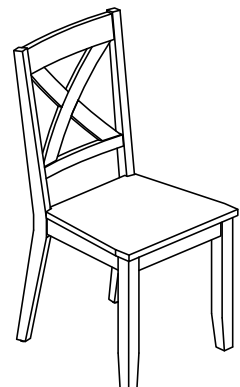

Chair Assembly Tips

Having some trouble putting together your new furniture? we can help! The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:


ISSUE: CHAIR IS UNLEVELED

Cause:

- Chairs can be wobbly or unlevelled if one or more bolts are fully tightened before all bolts are attached and/or tightened.

Solution:

- Loosen each bolt in the seat box (front legs, back corner- blocks, and back apron) until they're finger tight. Place the chair upright on the floor. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.

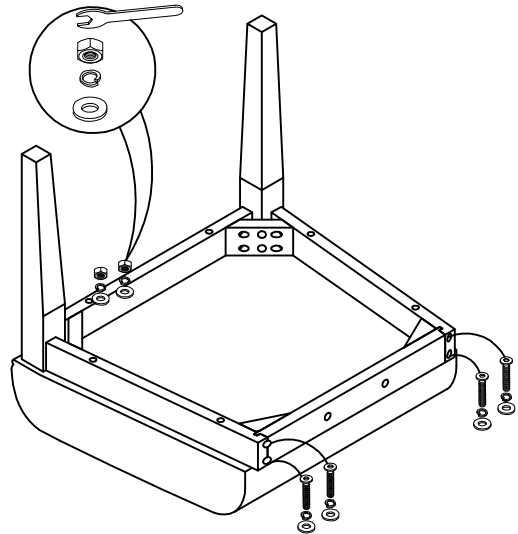

Cause:

- Chair can be wobbly or unlevelled if assembly is completed in a different room or surface than where the product is intended to primarily reside.

Solution:

- When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

ISSUE: HOLES ARE MISALIGNED

Cause:

- This issue can occur when some bolts are tightened fully before all other bolts are tightened or attached.

Solution:

- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.