

ASSEMBLY INSTRUCTION

ITEM# : 502-BR62

DESCRIPTION: BEDSIDE CHEST



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PARTS LIST

NO.	SKETCH	DESCRIPTION	QTY
A		Bedside chest	1
B		Bun foot	4


HARDWARE LIST

NO	DRAWING	DESCRIPTION	QTY
1		Bolt Ø5/16"*100mm	4
2		Spring Washer Ø5/16"*12mm	4
3		Flat Washer Ø5/16"x19mm	4
4		Allen Key 4mm	1
5		Wood Dowel Ø8*30mm	4
6		Tipping Restraint Kit	1Set

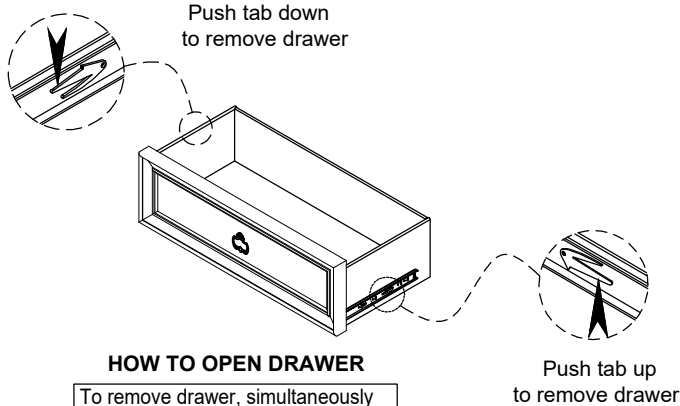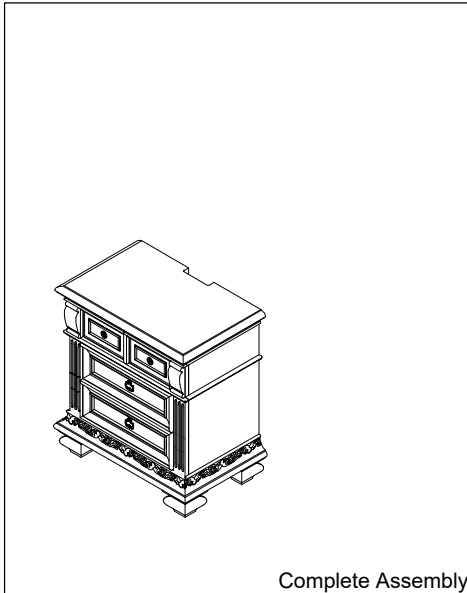


CLEANING INSTRUCTION

Clean the item surface with a furniture polish and a soft cloth.

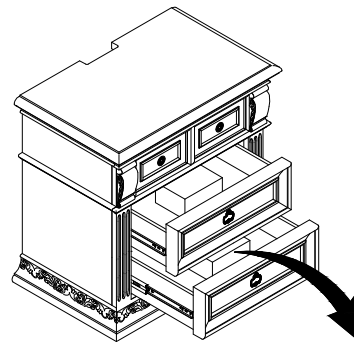


Note:
Remove bun foot inside

Step 1

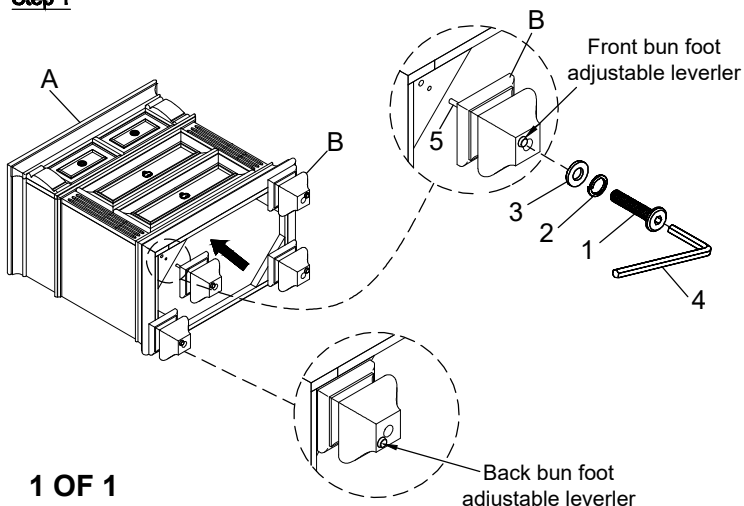

Step 2

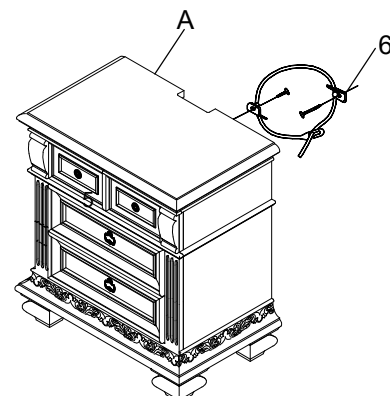

MADE IN VIETNAM