

ITEM# : 502-BR01HU

DESCRIPTION: QUEEN UPHOLSTERED POSTER HEADBOARD


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PARTS LIST


NO	DRAWING	DESCRIPTION	QTY
A		Headboard	1
B		Finials	2
C		Left Leg	1
D		Right Leg	1
E		Stretchers	1

HARDWARE LIST


NO	DRAWING	DESCRIPTION	QTY
1		Bolt Ø5/16"*45mm	6
2		Spring Washer Ø5/16"	6
3		Flat Washer Ø5/16"x19mm	6
4		Bolt Ø1/4"*35mm	2
5		Spring Washer Ø1/4"	2
6		Flat Washer Ø1/4"x16mm	2
7		Allen Key 4mm	1

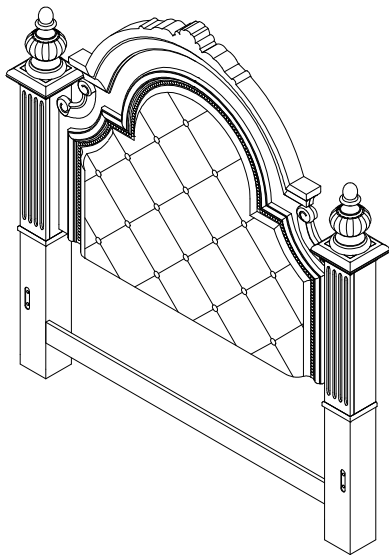


Step 1

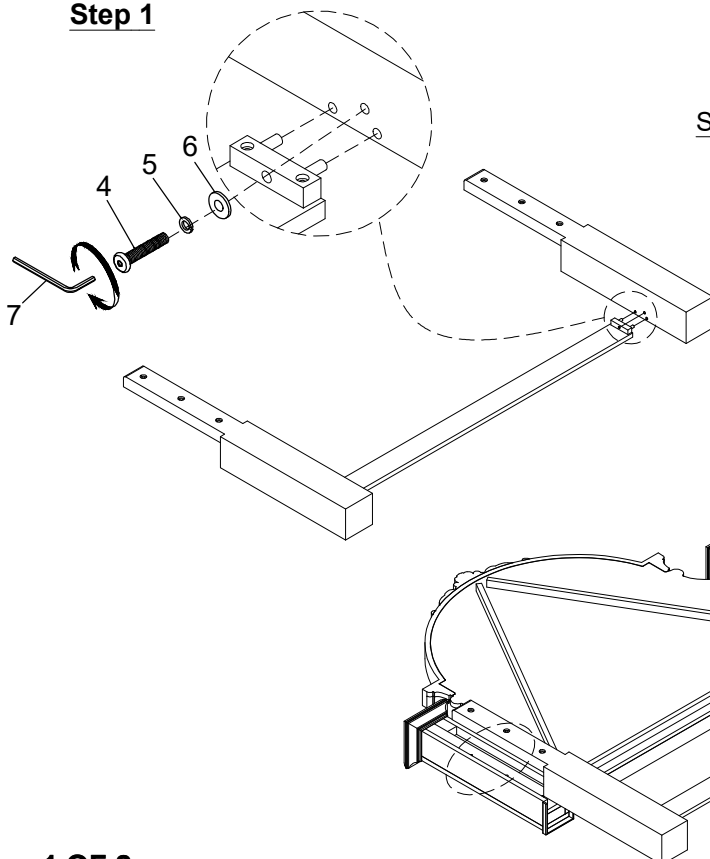


Step 2

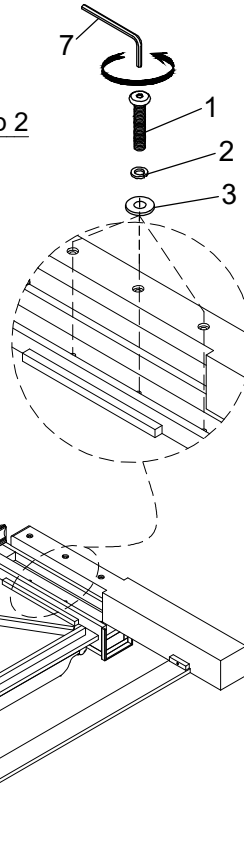

Step 3

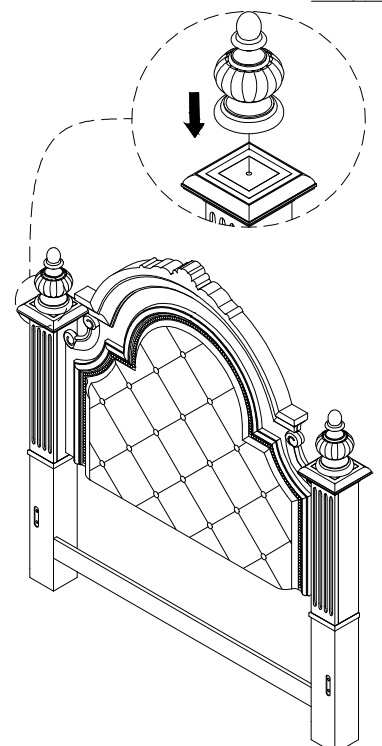

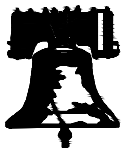


ASSEMBLY INSTRUCTION

502-BR01HU
ITEM# : 502-BR02
502-BR90

DESCRIPTION:

QUEEN UPHOLSTERED POSTER HEADBOARD
QUEEN POSTER FOOTBOARD
QUEEN/ KING RAILS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

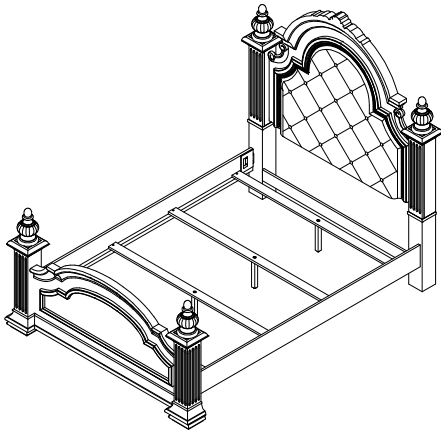


PARTS LIST

NO.	SKETCH	DESCRIPTION	QTY
A		Headboard	1
B		Footboard	1
C		Footboard Finial	2
D		Bun foot	2
E		Side rails	2
F		Slats	4
G		Slats support	4


HARDWARE LIST

NO.	SKETCH	HARDWARE	QTY
1		Bolt Ø5/16"×75mm	2
2		Spring Washer Ø51/16"	2
3		Flat Washer Ø5/16"×19mm	2
4		Allen Key 4mm	1
5		Wood Dowel Ø12*50mm	4
6		Screw #8*25mm	8
7		Hanger Bolt Ø5/16" x 90mm	8
8		Hexagon nut Ø5/16"×12mm	8
9		Flat Washer Ø5/16"×13mm	8
10		Spring Washer Ø51/16"	8
11		Allen wrench 12mm	1


Step 2

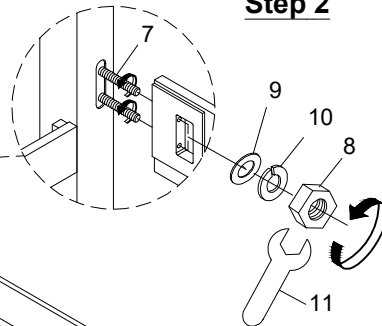


Step 4

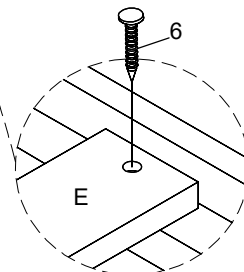

Step 3

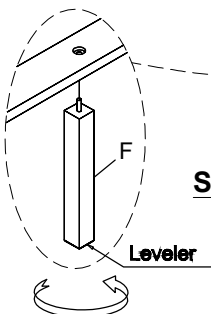

Step 1

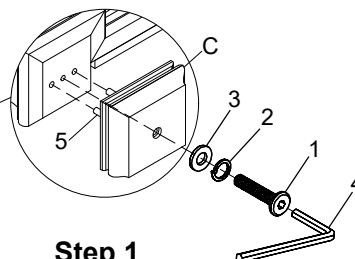

Step 5

