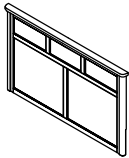

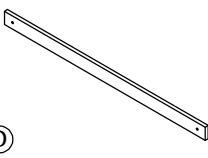






Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.





Hardware and Parts packed with the Headboard

Queen Panel Headboard 79470  (H-A) 1 pc.	Headboard Post (Left)  (H-B) 1 pc.	Headboard Post (Right)  (H-C) 1 pc.	Headboard Stretcher  (H-D) 1 pc.
Allen Head Bolt $\phi 5/16"$ -18 x 1-3/4"  (H-E) 8 pcs.	Spring Washer $\phi 5/16"$  (H-F) 8 pcs.	Flat Washer $\phi 5/16"$ x 19*2mm  (H-G) 8 pcs.	Allen Key 5mm  (H-H) 1 pc.




Hardware and Parts packed with the Footboard

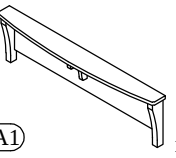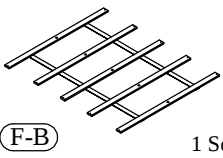Queen Panel Footboard 79471  (F-A1) 1 pc.	Wood Slat 61" long  (F-B) 1 Set.	Slat Support Leg 7-3/4" x 1-1/4" x 1-1/4"  (F-C) 5 pcs.	Wood Screw #8 x 1"  (F-D) 10 pcs.	Screw Driver not included 
--	---	---	--	--

Hardware and Parts packed with the Storage Footboard

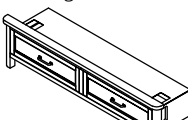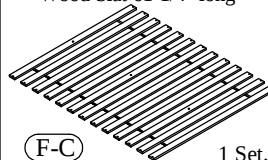Storage Footboard 79473  (F-A2) 1 pc.	Footboard Support Leg 8-1/4"x 1-1/4" x 1-1/4"  (F-B) 2 pcs.	Wood Slat 61-1/4" long  (F-C) 1 Set.	Center Support Rail 61"x 2-3/4" x 3/4"  (F-D) 1 pc.	Slat Support Leg 12-3/4" x 1-1/4" x 1-1/4"  (F-E) 3 pcs.	
Allen Head Bolt ϕ5/16"-18 x 1-1/2"  (F-F) 4 pcs.	Spring Washer ϕ5/16"  (F-G) 4 pcs.	Flat Washer ϕ5/16" x 19*2mm  (F-H) 4 pcs.	Allen Key 5mm  (F-I) 1 pc.	Wood Screw #8 x 1"  (F-J) 26 pcs.	Screw Driver not included 

Hardware and Parts packed with the Bed Rail

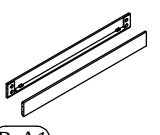Panel Side Rails 79472  (R-A1) 2 pcs.	All-Thread Bolt $\phi 5/16"$ -18 x 3-1/2"  (R-B) 8 pcs.	Curved Washer $\phi 5/16"$  (R-C) 8 pcs.	Flat Washer $\phi 5/16"$ x 16*2mm  (R-D) 8 pcs.	Spring Washer $\phi 5/16"$  (R-E) 8 pcs.	Hex Nut $\phi 5/16"$ x L17  (R-F) 8 pcs.	Open Wrench 13mm  (R-G) 1 pc.
Storage Bed Rails 79474  (R-A2) 2 pcs.	All-Thread Bolt $\phi 5/16"$ -18 x 3-1/2"  (R-B) 8 pcs.	Curved Washer $\phi 5/16"$  (R-C) 8 pcs.	Flat Washer $\phi 5/16"$ x 16*2mm  (R-D) 8 pcs.	Spring Washer $\phi 5/16"$  (R-E) 8 pcs.	Hex Nut $\phi 5/16"$ x L17  (R-F) 8 pcs.	Open Wrench 13mm  (R-G) 1 pc.

5/0 Queen Bed

79470 -- 5/0 Panel Headboard

79471 -- 5/0 Panel Footboard

79472 -- 5/0-6/6 Panel Side Rails

5/0 Queen Storage Bed

79470 -- 5/0 Panel Headboard


79473 -- 5/0 Storage Footboard

79474 -- 5/0-6/6 Storage Bed Rails


5/0 Queen Bed

79470 --5/0 Panel Headboard

STEP 1

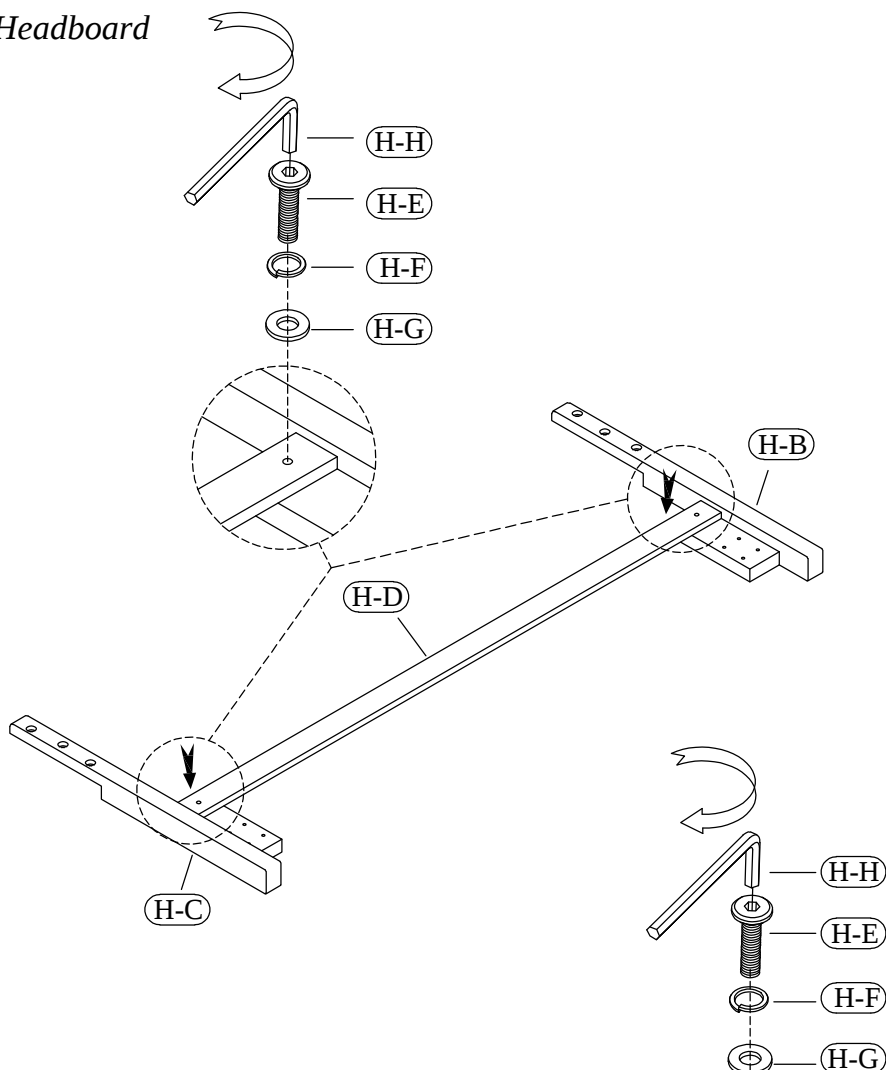

STEP 2

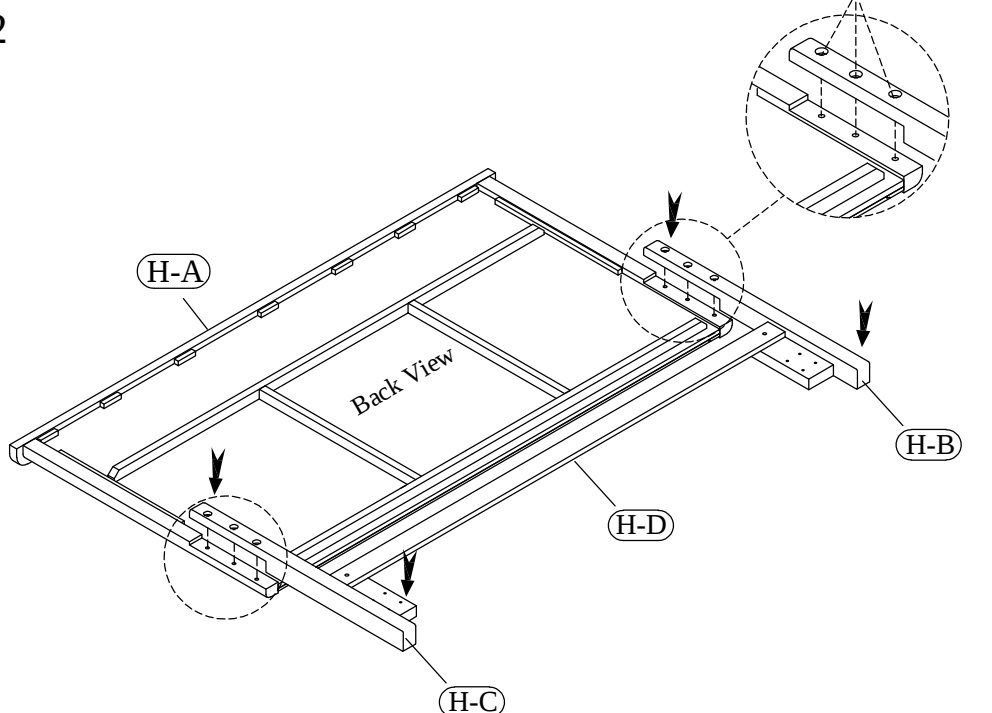


5/0 Queen Bed


79470 --5/0 Panel Headboard

79471 -- 5/0 Panel Footboard


STEP 3

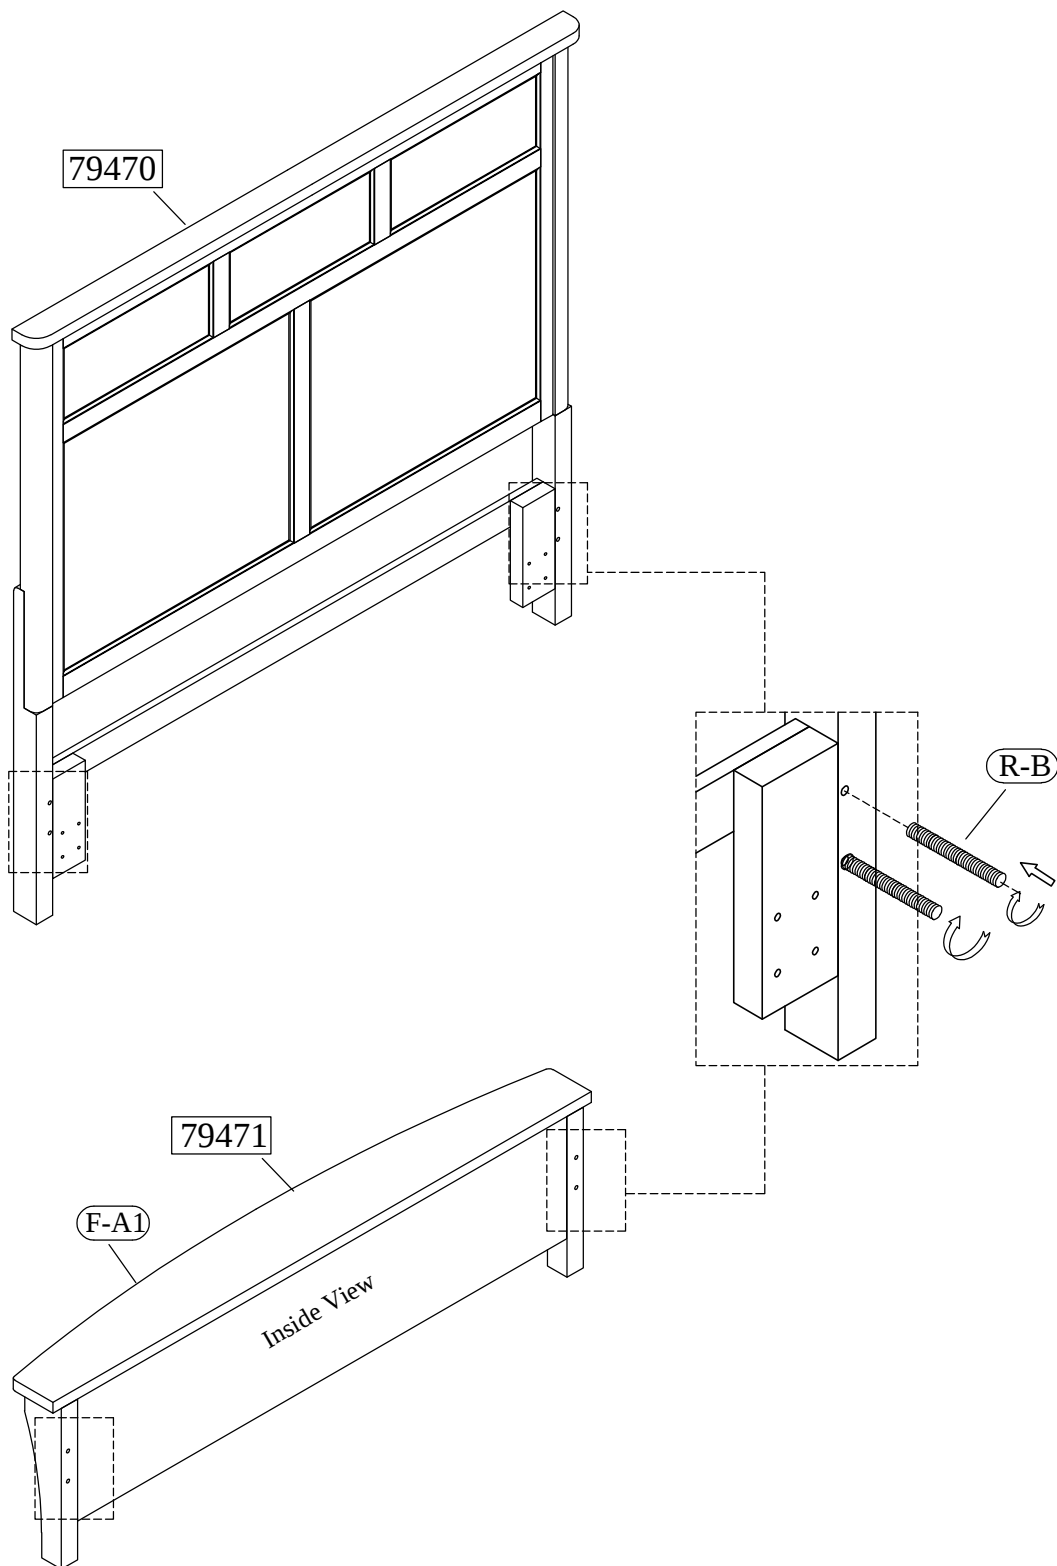


STEP 4

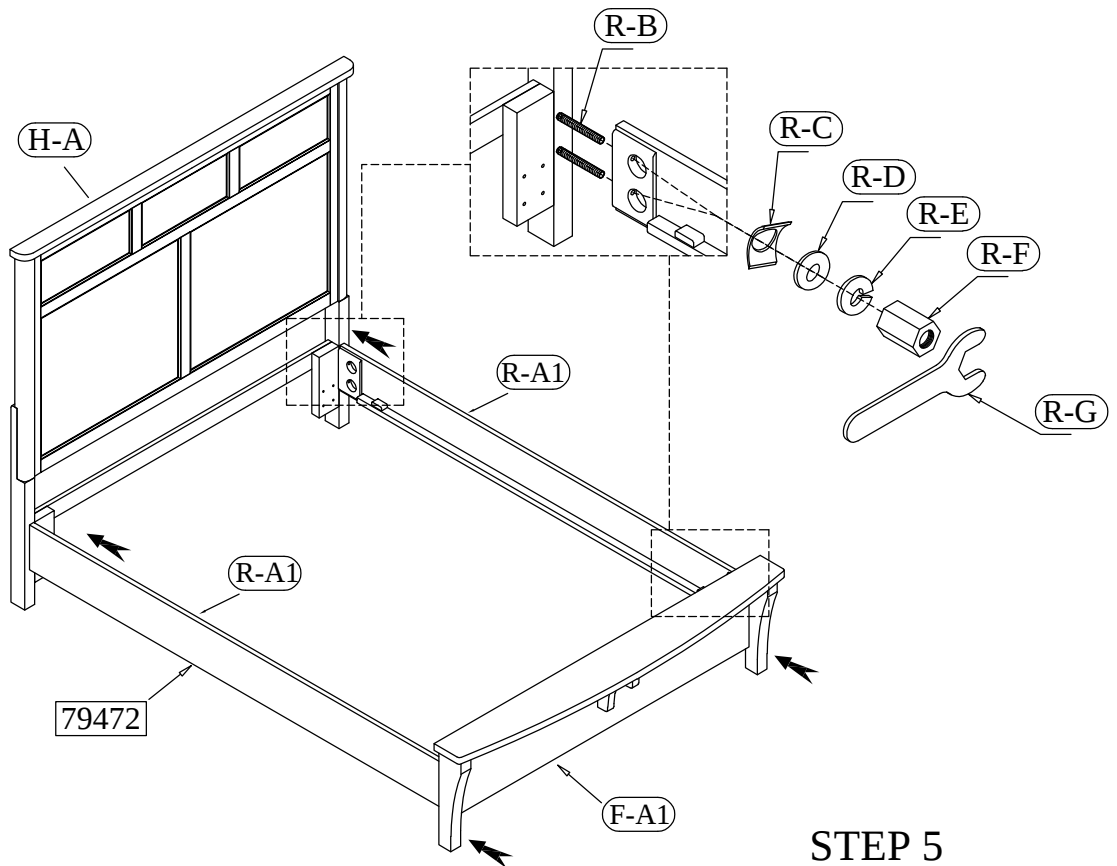

STEP 5


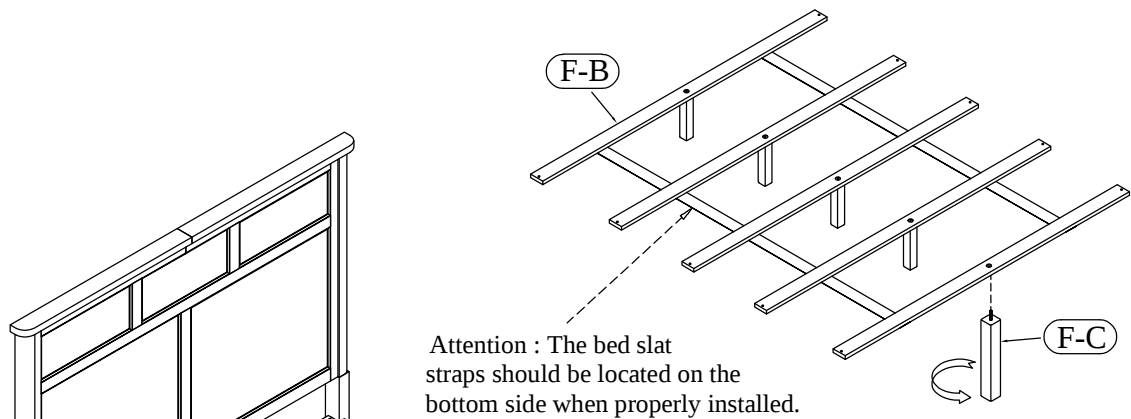


STEP 6

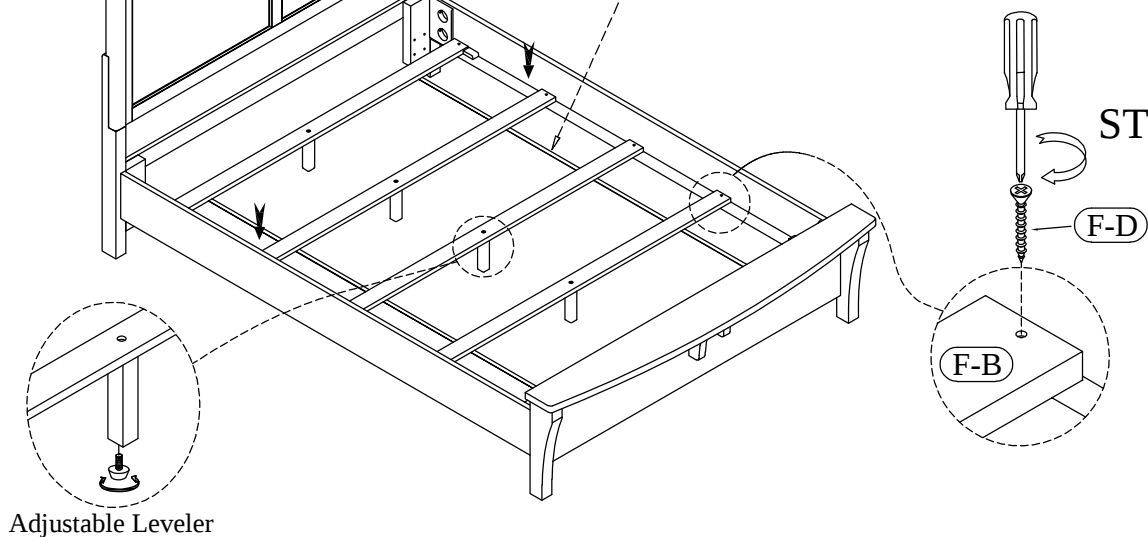

5/0 Queen Storage Bed
79470 -- 5/0 Panel Headboard
79473 -- 5/0 Storage Footboard

STEP 3

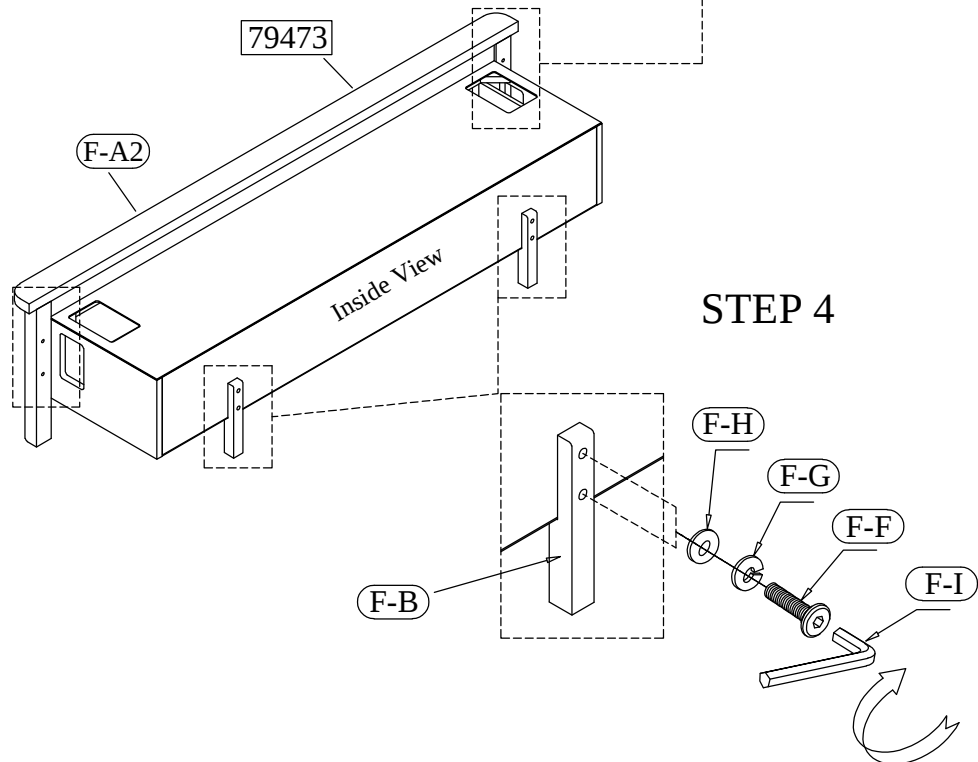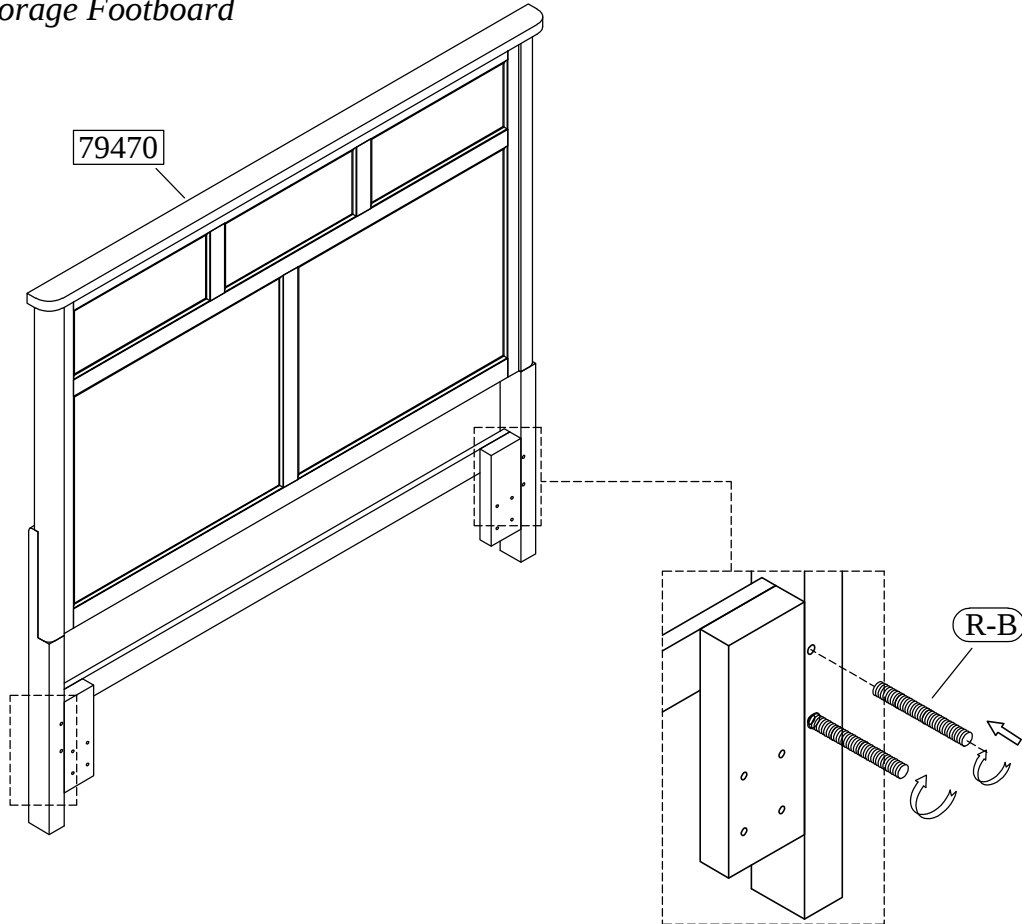

STEP 4

5/0 Queen Storage Bed


79470 -- 5/0 Panel Headboard

79473 -- 5/0 Storage Footboard


79474 -- 5/0-6/6 Storage Bed Rails

STEP 5


Remove both drawers

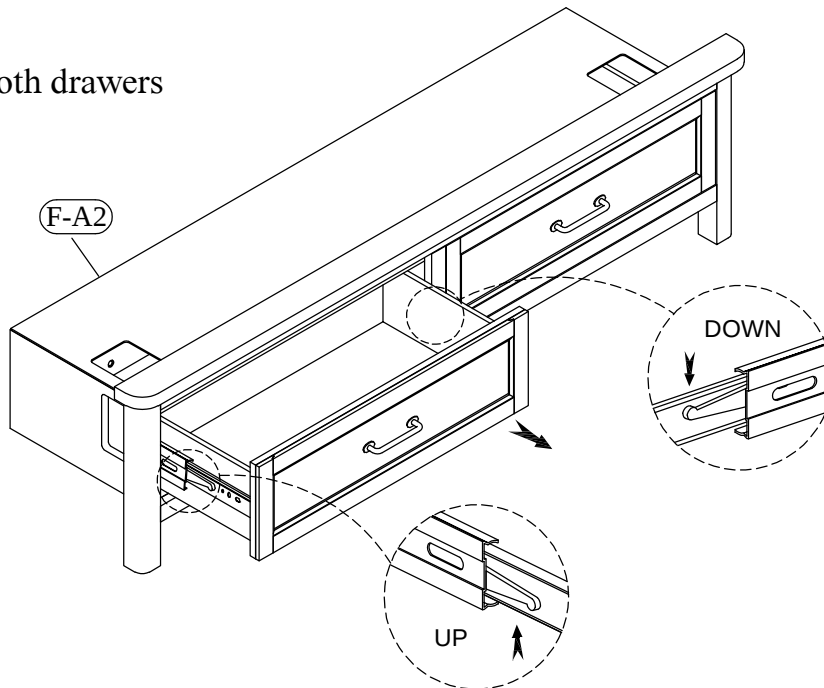


STEP 6

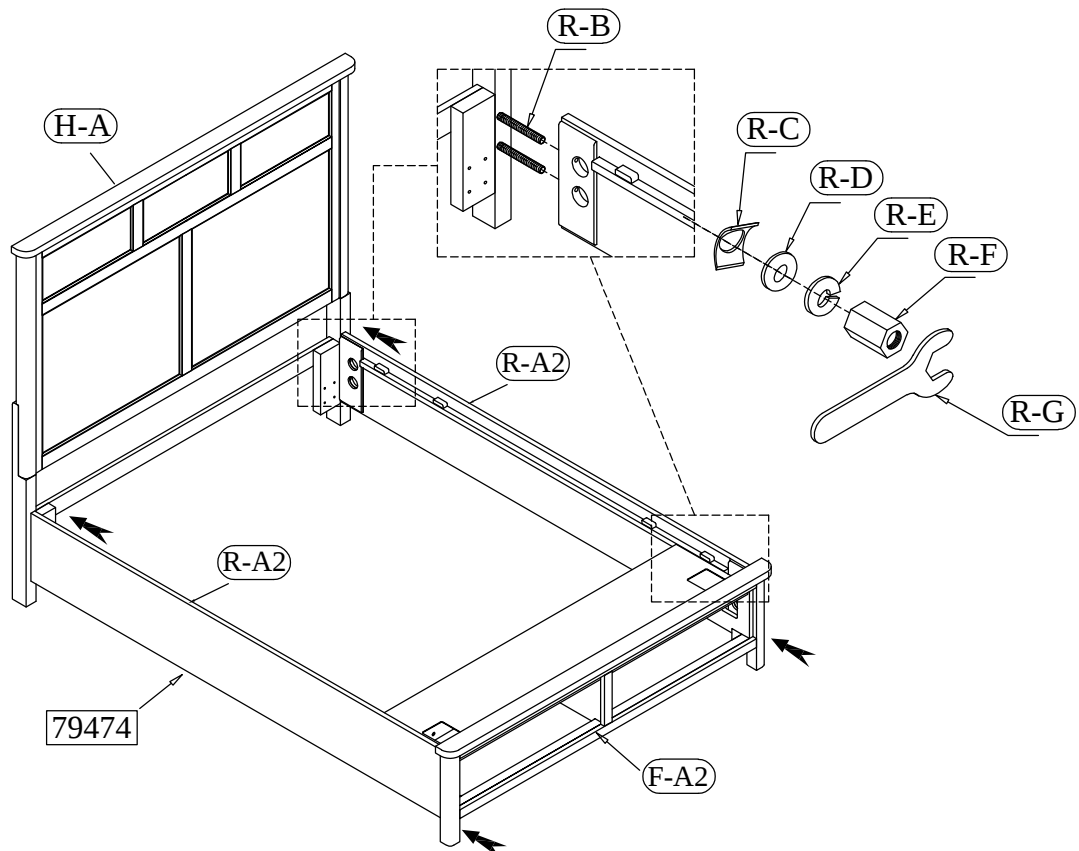

STEP 7

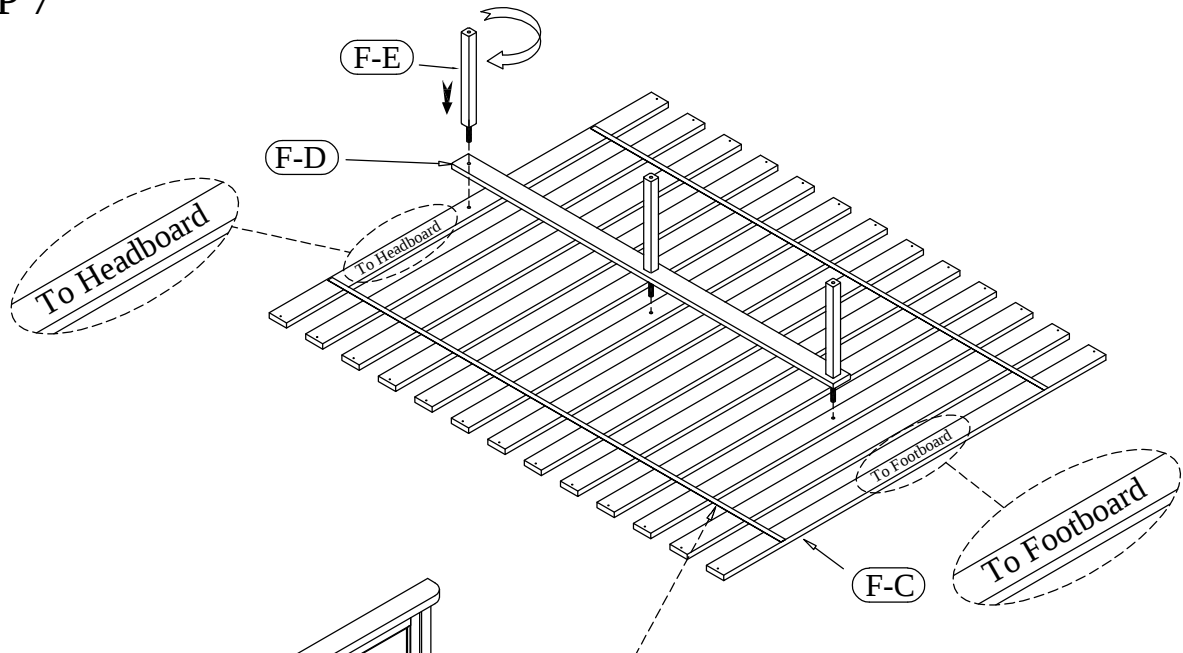

Attention : The bed slat straps should be located on the bottom side when properly installed.

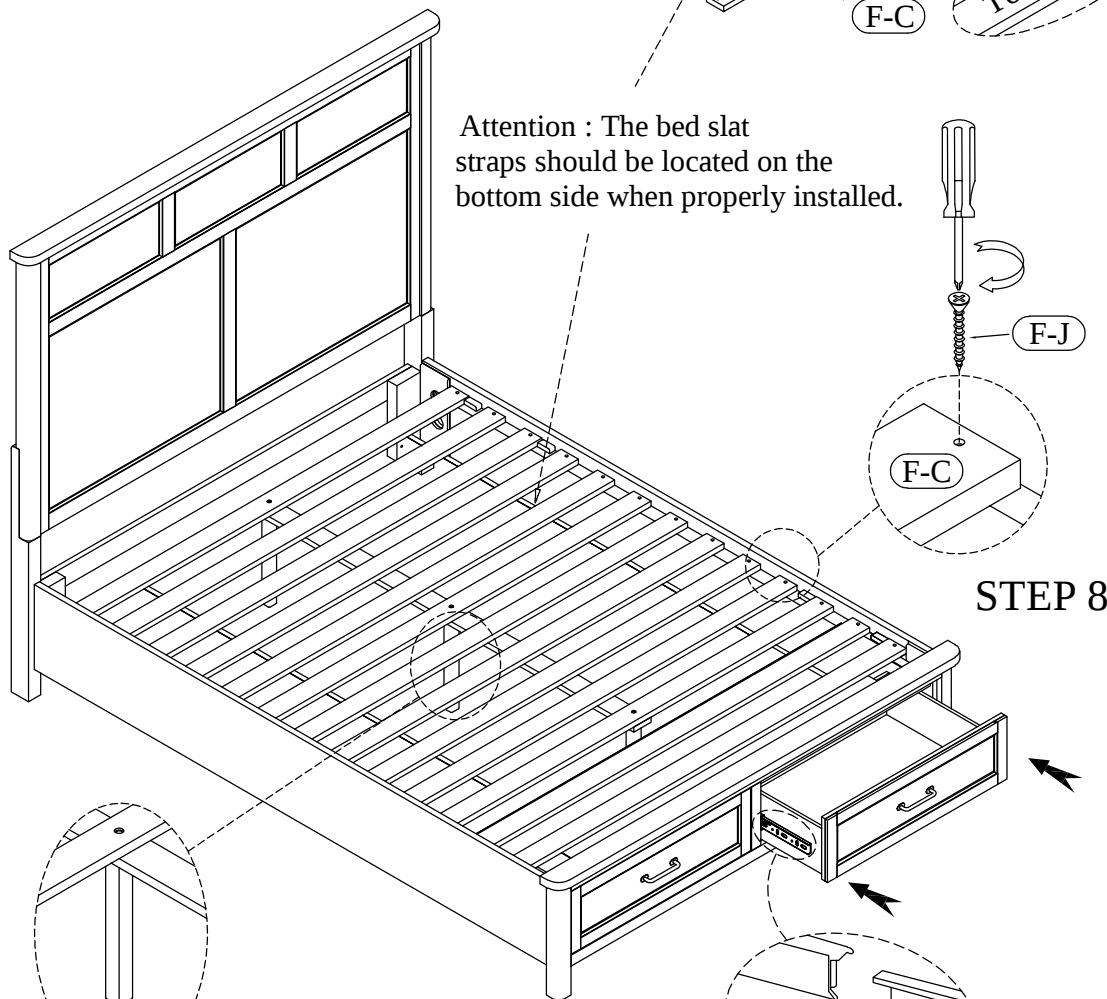

STEP 8


Adjustable Leveler

STEP 9

Attach both drawers

5/0 Queen Bed

79470 --5/0 Panel Headboard

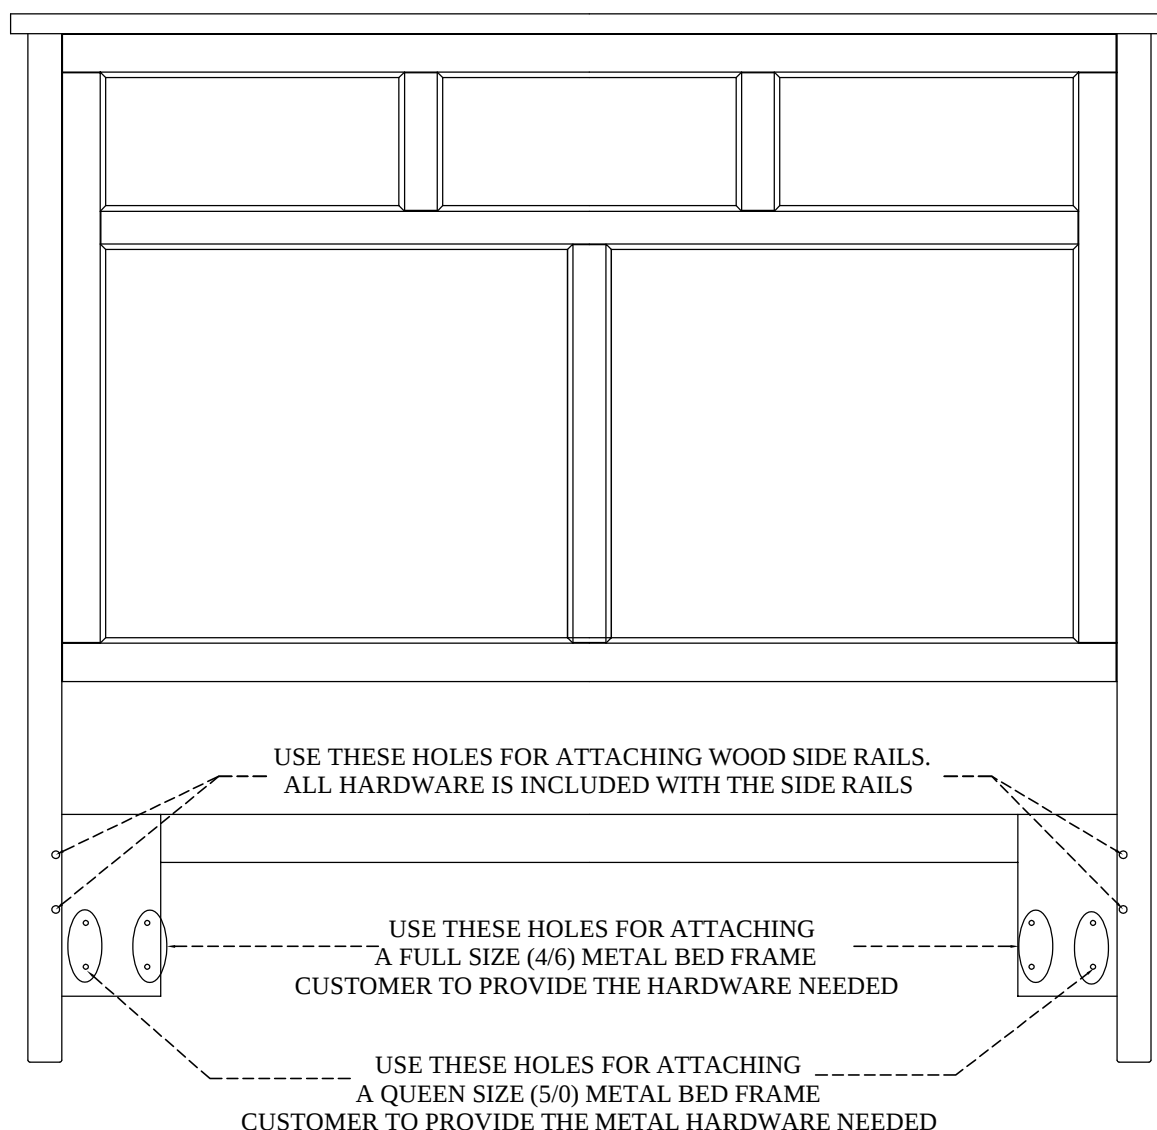

4/6 & 5/0 Bed

**THE HEADBOARD MAY BE USED ALONE WITH
A QUEEN OR FULL SIZE METAL BED FRAME.**