

Instruction Sheet

Subject: CNF, RNS or SN Model Countertop Ice Machine Front Panel Replacement

K00514 & K00515

CNF RNS or SN Model Front Panel


1. Remove (2) thumbscrews retaining the top panel to the ice maker.




2. Remove existing front panel by grasping the panel and lifting up, then pulling forward.
3. Verify that the current selection on the selector switch is set to the desired selection - Access to the selector switch will not be available with the replacement panel installed.



4. Install the correct clean label/wiring diagram label as follows:
 - CNF models that have a low temperature thermostat (see below) use label 000016262

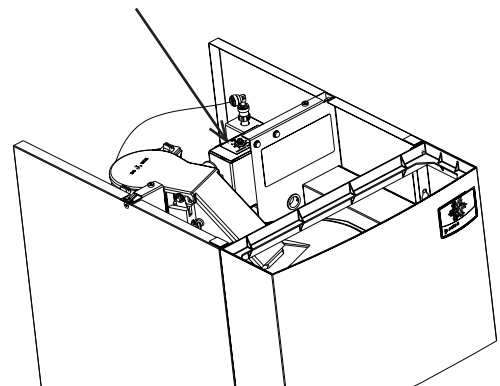

- CNF models without a low temperature thermostat use label 000015163
 - RNS Models use label 000010757
 - SN Models use label 000005543
5. Peel off backing and affix label to interior of front panel.

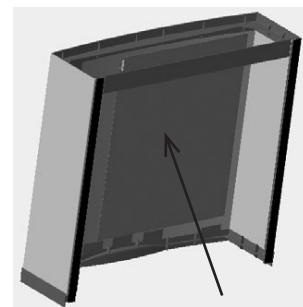

6. Align replacement front panel keyhole slots with shoulder bolts on side panels, lower the front panel to engage the keyhole slots.
7. Reinstall top panel and secure with (2) thumbscrews.