

Operating and Installation Instructions ProLine Tepan Yaki



To prevent accidents and machine damage, read these instructions **before** installation or use.

Contents

IMPORTANT SAFETY INSTRUCTIONS	3
Caring for the environment	13
Overview	14
Tepan Yaki	14
Indicators.....	14
Before first use	15
Cleaning the ProLine element for the first time	15
Switching on the ProLine element for the first time	15
Operation	16
Knobs	16
Switching on.....	16
Switching off.....	16
Residual-heat indicator	16
Tips for cooking.....	17
Cleaning and care	18
Cleaning the stainless-steel frame/control panel	19
Cleaning the knob(s).....	19
Cleaning the cooking surface.....	20
Frequently Asked Questions	21
Optional accessories	22
Customer Service	23
Contact in the event of a fault	23
Data plate	23
Appliance warranty and product registration	23
Installation	24
IMPORTANT SAFETY INSTRUCTIONS - INSTALLATION	24
Safety distances	25
Installation notes	28
Installation dimensions	29
Countertop cut-out for several ProLine elements	30
Installation	32
Electrical connection	36

IMPORTANT SAFETY INSTRUCTIONS

This Tepan Yaki complies with all current local and national safety requirements. Inappropriate use can, however, lead to personal injury and material damage.

Read the operating and installation instructions carefully before using the Tepan Yaki. They contain important information on safety, installation, use, and maintenance. This prevents both personal injury and damage to the Tepan Yaki.

Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the Tepan Yaki as well as in the “IMPORTANT SAFETY INSTRUCTIONS”.

Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and pass them on to any future owner.

SAVE THESE INSTRUCTIONS AND REVIEW THEM PERIODICALLY

IMPORTANT SAFETY INSTRUCTIONS

Appropriate use

- ▶ This Tepan Yaki is designed for domestic use and for use in similar environments.
- ▶ This Tepan Yaki is not intended for outdoor use.
- ▶ This Tepan Yaki is intended for domestic use only to cook food and keep it warm. All other types of use are not permitted.
- ▶ This Tepan Yaki can only be used by people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they are supervised while using it. They may only use it unsupervised if they have been shown how to do so in a safe manner. They must be able to understand and recognize the possible dangers caused by incorrect operation.

IMPORTANT SAFETY INSTRUCTIONS

Safety with children

- ▶ Do not leave children unattended: Children should not be alone or unsupervised in the area where the appliance is installed. Do not allow them to sit or stand on the appliance.
- ▶ Children should be supervised in the vicinity of the Tepan Yaki. Never allow children to play with the Tepan Yaki.
- ▶ The Tepan Yaki gets hot when in use and remains hot for quite a while after being switched off. Keep children well away from the Tepan Yaki until it has cooled down and there is no danger of burning.
- ▶ Danger of burning. Do not store anything which might arouse a child's interest in storage areas above or behind the Tepan Yaki. Otherwise they could be tempted to climb onto the Tepan Yaki.
- ▶ Danger of suffocation. While playing, children may become entangled in packaging material (such as plastic wrapping) or pull it over their head, presenting the risk of suffocation. Keep packaging material away from children.

IMPORTANT SAFETY INSTRUCTIONS

Technical safety

- ▶ Proper installation: Make sure that your appliance has been installed correctly and that it has been grounded by a qualified technician.
- ▶ Maintenance by the user: Never repair or replace any part of the appliance unless the instructions specifically recommend doing so. Service work should only be performed by a qualified technician.
- ▶ Unauthorized installation, maintenance, and repairs can cause considerable danger for the user. Installation, maintenance, and repairs must only be carried out by a Miele authorized technician.
- ▶ Damage to the Tepan Yaki can compromise your safety. Check the appliance for visible signs of damage. Do not use a damaged Tepan Yaki.
- ▶ Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronized with the grid power supply (e.g., island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with national and local codes.
The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronized with the grid power supply, or these measures must be replaced by equivalent measures in the installation.
- ▶ The electrical safety of this appliance can only be guaranteed when correctly grounded. It is essential that this basic safety requirement is fulfilled. If in doubt, the electrical installation should be checked by a qualified electrician.
- ▶ The connection data (voltage and frequency) on the data plate of the Tepan Yaki must match the domestic electrical supply in order to avoid the risk of damage to the Tepan Yaki.
Compare this data before connecting the appliance. If in any doubt, consult a qualified electrician.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ Power bars and extension cords do not guarantee the required safety of the appliance (risk of fire). Do not use these to connect the Tepan Yaki to the domestic electrical supply.
- ▶ For safety reasons, this Tepan Yaki may only be used after it has been installed.
- ▶ This Tepan Yaki must not be used in a non-stationary location (e.g., on a ship).
- ▶ Any contact with live connections or tampering with the electrical or mechanical components of the Tepan Yaki will endanger your safety and may lead to appliance malfunctions. Do not open the Tepan Yaki housing under any circumstances.
- ▶ While the appliance is under warranty, repairs should only be undertaken by a service technician authorized by Miele Customer Service. Otherwise the warranty will be invalidated.
- ▶ Defective components should be replaced by Miele original parts only. Only with these parts can safety of the appliance be assured as intended by the manufacturer.
- ▶ The Tepan Yaki is not intended for use with an external timer switch or a remote-control system.
- ▶ If the electrical plug has been removed or the power cord is not supplied with an electrical plug, the Tepan Yaki must be connected to the domestic electrical supply by a qualified electrician.
- ▶ If the power cord is damaged, it must only be replaced by a qualified service technician (see “Installation – Electrical connection”).

IMPORTANT SAFETY INSTRUCTIONS

▶ During installation, maintenance, and repair work, the Tepan Yaki must be completely disconnected from the domestic electrical supply. It is only completely isolated from the supply when:

- The breakers have been switched off.
- The screw-out breakers have been completely removed.
- The electrical plug (if present) is removed from the socket. To do this, pull the plug, not the power cord.

▶ Danger of electric shock.

Do not use the Tepan Yaki if it is damaged or if it suffers damage during use. Switch it off immediately. Disconnect the Tepan Yaki from the domestic electrical supply. Contact Customer Service.

▶ If the Tepan Yaki is built in behind a cabinet front (e.g., a door), do not close the door while the Tepan Yaki is in use. Heat and moisture can build up behind the cabinet front when closed. This can result in damage to the Tepan Yaki, the housing unit, and the floor. Do not close the cabinet front until the residual-heat indicators go out.

IMPORTANT SAFETY INSTRUCTIONS

Correct use

- ▶ **DO NOT TOUCH THE APPLIANCE OR AREAS NEAR THE APPLIANCE** – The appliance may be hot even though it is dark in color. Areas near the appliance may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact the appliance or areas near it until they have had sufficient time to cool.
- ▶ **Storage in or on the appliance:** Flammable materials should not be stored in an oven or in the vicinity of the appliance.
- ▶ **Never leave the appliance unattended at high heat settings** – Boilover causes smoking and greasy spillovers that may ignite.
- ▶ **Do Not Use Water on Grease Fires** – Smother fire or flame or use dry chemical or foam-type extinguisher.
- ▶ **Wear Proper Apparel** – Loose-fitting or hanging garments should never be worn while using the appliance.
- ▶ **Use Only Dry Potholders** – Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or other bulky cloth.
- ▶ **Wet sponges or cloths can cause burns due to hot steam** if they are used to wipe spilled food off a hot appliance. Some cleaning agents can emit hazardous vapors if they are applied to a hot surface. Be careful when cleaning the appliance.
- ▶ **The Tepan Yaki gets hot when in use and remains hot for quite a while after being switched off.** There is a danger of burning until the residual-heat indicators go out.
- ▶ **Due to the high temperatures radiated, objects left near the Tepan Yaki could catch fire.**
Do not use the Tepan Yaki to heat up the room.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ Oils and fats are a fire hazard if allowed to overheat. Never leave the Tepan Yaki unattended when cooking with oil or fats. Never attempt to put out oil or grease fires with water. Switch the Tepan Yaki off.
Extinguish the flames carefully with a lid or fire blanket.
- ▶ Do not leave the Tepan Yaki unattended while it is being used. It should be continually monitored while flash frying.
- ▶ The flames could set the grease filters of a ventilation hood on fire. Do not flambé under a ventilation hood.
- ▶ Spray canisters, aerosols, and other inflammable substances can ignite when heated. Therefore do not store such items or substances in a drawer under the Tepan Yaki. Utensil inserts must be heat-resistant.
- ▶ Canning food and heating it up in closed containers results in an increase in pressure which can cause them to explode. Do not use the Tepan Yaki for canning food or for heating up food in cans.
- ▶ If the Tepan Yaki is covered, there is a risk that the material of the cover will ignite, explode, or melt if the Tepan Yaki is still hot or if it is turned on inadvertently. Never cover the Tepan Yaki with a cover, cloth, or protective film.
- ▶ When the Tepan Yaki is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of metal items placed on the Tepan Yaki heating up. Other materials can melt or catch fire when the appliance is switched on. Do not use the Tepan Yaki as a resting place for anything. Always switch the Tepan Yaki off after use.
- ▶ When using an electrical appliance (e.g., a hand mixer) near the Tepan Yaki, make sure that the power cord does not come into contact with the hot Tepan Yaki. This could damage the cord's insulation.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ The Tepan Yaki gets hot. Do not use plastic utensils. Even heat-resistant plastic utensils are unsuitable.
- ▶ Where several ProLine elements are installed side by side: Hot objects can damage the seal of the spacer bar. Do not place hot pans near or on the spacer bar.

IMPORTANT SAFETY INSTRUCTIONS

Cleaning and maintenance

▶ The steam from a steam cleaner could reach live electrical components and cause a short circuit.

Do not use a steam cleaner to clean the Tepan Yaki.

▶ Miele will guarantee to supply functional parts for a minimum of 10 years and up to 15 years following the discontinuation of your ProLine element.

Disposal of the packing material

The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation!

Disposal of your old appliance


Electrical and electronic appliances contain valuable materials. They also contain certain substances, compounds and components which were essential for the proper functioning and safe use of the equipment. Handling these materials improperly by disposing of them in your household waste can be harmful to your health and the environment. Therefore, please do not dispose of your old appliance with regular household waste and follow local regulations on proper disposal.



Consult with local authorities, dealers or Miele in order to dispose of and recycle electrical and electronic appliances. Miele assumes no responsibility for deleting any personal data left on the appliance being disposed. Please ensure that your old appliance is kept away from children until removal. Observe safety requirements for appliances that may tip over or pose an entrapment hazard.


Overview

Tepan Yaki

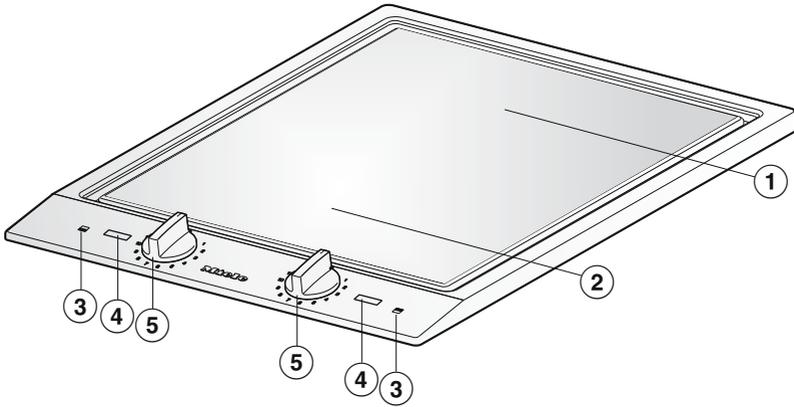

- ① Rear Tepan Yaki zone
- ② Front Tepan Yaki zone
- ③ Symbols for allocation of knobs
- ④ Indicators
- ⑤ Knobs

Indicators

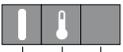

- ①
- ②
- ③

- ① In operation
- ② Temperature
- ③ Residual heat

- Please adhere the extra appliance data plate (supplied) in the space provided in the “After sales service” section of this manual.
- Remove any protective foil and stickers.

Cleaning the ProLine element for the first time

- Clean all surfaces with a damp cloth, and then wipe dry.

Switching on the ProLine element for the first time

The metal components have a protective coating. When the ProLine element is used for the first time, this causes a smell and possibly also vapor.

The smell and any vapors do not indicate a faulty connection or a defective appliance and are not harmful to your health.

Operation

The Tepan Yaki has 2 cooking zones which can be switched on and regulated independently. The entire area can be used when cooking large quantities of food. For smaller quantities, the front zone can be used for cooking while the rear zone can be used to keep food warm at a lower power level.

 Fire hazard due to overheated food.
Unattended food can overheat and ignite.
Do not leave the Tepan Yaki unattended while it is being used.

Residual-heat indicator

If the Tepan Yaki is still hot, the residual-heat indicator will light up after it has been switched off.

The residual-heat indicator only goes out when the Tepan Yaki is safe to touch.

 Danger of burning due to hot surfaces.
The surfaces will be hot after cooking.
Do not touch the surfaces while the residual-heat indicators are on.

Knobs

The knobs have a stop and must not be turned to the **0** position past the **12** position.

Switching on

- Turn the knob **clockwise** to the required power level.

The in-operation indicator and the temperature indicator will light up. The residual-heat indicator will light up after a certain temperature has been reached.

The temperature indicator light will switch on and off intermittently in conjunction with the heating element of the Tepan Yaki, i.e., it only lights up when the heating is operating.

Switching off

- Turn the knob **counterclockwise** to **0**.

Tips for cooking

Wipe the surface of the Tepan Yaki before each use with a damp cloth to remove any dust or other residue.

- Always preheat the Tepan Yaki for 8–10 minutes before use. To do this, set the power level that you are going to be using for cooking. Preheat at power level 12 if you are going to be cooking at levels 9 to 12.
- It is important to get the Tepan Yaki sufficiently hot before use, particularly with meat. If it is not hot enough, the meat will lose too much juice.
- Very little fat is required for cooking on the Tepan Yaki and no fat is required for marinated food. Wait until the temperature indicator light has gone out before adding cooking fat to the Tepan Yaki.
- Use only fats and oils that can withstand high temperatures.
- It is recommended to marinate food for cooking. This will improve the flavor of the food.
- Pat wet food dry with kitchen paper before cooking to prevent it spitting.
- To prevent meat drying out, do not season with salt until after it has been cooked.

Cleaning and care

 Danger of burning due to hot surfaces.

The surfaces will be hot after cooking.

Switch the Tepan Yaki off.

Allow the surfaces to cool down before cleaning the Tepan Yaki.

 Risk of damage due to moisture ingress.

The steam from a steam cleaner could reach live electrical components and cause a short circuit.

Do not use a steam cleaner to clean the Tepan Yaki.

All surfaces could become discolored or damaged if unsuitable cleaning agents are used. All surfaces are susceptible to scratching.

Remove any residual cleaning agent immediately.

Do not clean with any abrasive cleaning agents or sharp pointed objects.

Allow the ProLine element to cool down before cleaning.

- Clean the ProLine element and accessories after each use.
- Dry the ProLine element thoroughly after cleaning it with water to avoid limescale residue.

Unsuitable cleaning agents

To avoid damaging the surfaces of the appliance, do not use:

- cleaning agents containing soda, alkalines, ammonia, acids, or chlorides,
- cleaning agents containing lime scale remover
- stain or rust removers
- abrasive cleaning agents, such as scouring powder, scouring liquid, or pumice stones
- cleaning agents containing solvents
- dishwasher cleaner
- grill and oven sprays
- glass cleaners
- hard, abrasive brushes or sponges (e.g., pot scourers), or sponges which have been previously used and still contain abrasive cleaning agents
- eraser sponges

Cleaning the stainless-steel frame/control panel

 Risk of damage caused by pointed objects.

The seal between the frame and the countertop could be damaged.

Do not use pointed objects for cleaning.

 Damage due to soiling.

Soiling, particularly salty food or liquid and olive oil, can cause damage if left on the printed surfaces for a long time.

Remove such soiling immediately.

 Damage due to incorrect cleaning.

Stainless-steel cleaners rub off the printed symbols.

Do not use stainless-steel cleaners on printed symbols.

- Clean the frame and the control panel using a solution of warm water and a small amount of liquid dish soap applied with a soft sponge. Soften any stubborn soiling beforehand. If necessary, the rough side of a kitchen sponge can be used.

Tip: You can also use a ceramic and stainless-steel cleaner to clean the appliance. It is recommended to use a stainless-steel care product after cleaning to help keep your appliance looking good. (See “Optional accessories”.)

Cleaning the knob(s)

- Use a soft sponge, warm water, and a small amount of liquid dish soap to clean the knob(s). Soften any stubborn soiling beforehand.
- Dry the knob(s) with a clean cloth.

Cleaning and care

Cleaning the cooking surface

- Remove coarse soiling immediately using a spatula.
- Then let the cooking surface cool until it is safe to the touch, add some soapy dishwater, and let the grime soak. Clean the cooking surface with the rough side of a dish sponge and a few drops of Miele Ceramic and Stainless-steel Cleaner (see “Optional accessories”). Finally wipe off the cooking surface with clean water and dry it with a clean, dry cloth.

Always wipe with clean water afterwards. This is to ensure that every trace of cleaning agent has been removed. Any remaining traces could affect food the next time you use the appliance.

Do not use a stainless-steel care product for the cooking surface.

Frequently Asked Questions

With the help of the following guide minor faults in the performance of the machine, some of which may result from incorrect operation, can be remedied without contacting the Service Department.

This guide may help you to find the reason for the fault, and how to correct it.

Problem	Possible cause and solution
The Tepan Yaki does not heat up.	There is no power to the Tepan Yaki. ■ Check if the breaker has tripped. Contact a qualified electrician or Miele Customer Service (for the minimum fuse rating, see data plate).

Optional accessories

Miele offers a range of useful accessories, as well as cleaning and conditioning products for your appliance.

These products can be easily ordered from the Miele webshop.

These products can also be ordered from Miele Technical Service (see the end of these operating instructions) or your Miele dealer.

Ceramic and stainless steel cleaner 250 mL

Removes heavy soiling, lime scale, and aluminum residue.

Stainless-steel care product 250 ml

Easily removes water marks, stains, and fingerprints. Also prevents re-soiling.

Contact in the event of a fault

In the event of a fault which you cannot remedy yourself, please contact your Miele dealer or Miele Customer Service.

You can book a Miele Service Call online at www.miele.com/service.

Contact information for Miele Customer Service can be found at the end of this document.

Please quote the model identifier and serial number of your appliance (SN) when contacting Miele Customer Service. Both pieces of information can be found on the data plate.

Data plate

Adhere the extra data plate supplied with the appliance in the space below. Make sure that the model number matches the one specified on the back cover of this document.

Appliance warranty and product registration

You can register your product and/or view the manufacturer's warranty terms and conditions for Miele appliances and vacuum cleaners at www.mieleusa.com.

Installation

IMPORTANT SAFETY INSTRUCTIONS - INSTALLATION


 Risk of damage caused by incorrect installation.
Incorrect installation can cause damage to the ProLine element.
The ProLine element must only be installed by a qualified person.

 Damage from falling objects.
Take care not to damage the ProLine element when installing upper cabinets or a ventilation hood above it.
Install the upper cabinets and ventilation hood before installing the ProLine element.

- ▶ Reaching over a hot appliance to access the cabinets can result in burns. You can reduce the risk of burns by installing a ventilation hood that extends at least 5" (12 cm) past the bottom of the cabinets.
- ▶ The countertop must be heat-resistant (up to 212°F / 100°C), so that it does not become deformed or the veneer detached. The wall strips must be heat-resistant as well.
- ▶ The Tepan Yaki must not be installed right next to an electric barbecue (CS 1421). It is essential to maintain a minimum safety distance of 6" (150 mm) between the Tepan Yaki and the electric barbecue.
- ▶ The ProLine element must not be installed above refrigerators/freezers, dishwashers, or washers/dryers.
- ▶ When installing the ProLine element, make sure that the power cord cannot come into contact with hot appliance parts.
- ▶ When installing the ProLine element, make sure that the power cord cannot come into contact with any moving kitchen parts (e.g., a drawer), and cannot become trapped.
- ▶ Observe carefully the safety clearances listed on the following pages.

Safety distances

Safety distance above the ProLine element

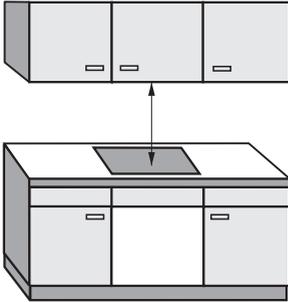

The safety distance specified by the manufacturer of the ventilation hood must be maintained between the ProLine element and the ventilation hood above it. If the ventilation hood manufacturer's instructions are not available or if combustible objects are installed above the ProLine element (e.g., cabinets, utensil rail), a minimum safety distance of at least 29 15/16" (760 mm) must be maintained.

If there is more than one ProLine element installed below the ventilation hood, each with a different safety distance, the largest distance must be used.

Installation

Safety clearances to the sides and back of the cooktop

Ideally the ProLine element should be installed with plenty of space on either side.


The minimum safety distance ① shown below must be maintained between the back of the ProLine element and a tall unit or wall.

The minimum safety distance ②, ③ shown below must be maintained between a tall unit or a wall to the left or right of the ProLine element with a minimum safety distance of 11 3/4" (300 mm) on the opposite side.



① minimum distance between the **back** of the counter cut-out and the rear edge of the counter:
2" (50 mm)

② minimum distance to the **right** of the counter cut-out to the closest adjacent piece of cabinetry (for instance, a high cabinet) or a room wall:
2" (50 mm)


③ minimum distance to the **left** of the counter cut-out to the closest adjacent piece of cabinetry (for instance, a high cabinet) or a room wall:
2" (50 mm)

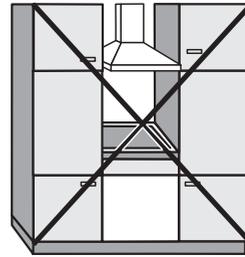


Not allowed

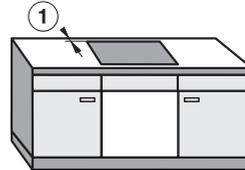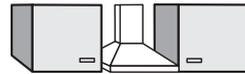

Highly recommended

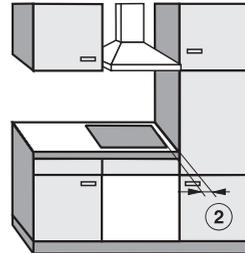

Not recommended

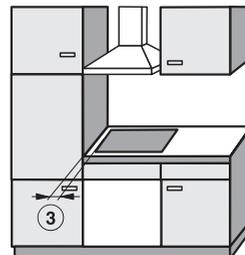

Not recommended

Safety distance from the wall covering


If a wall covering is installed, a minimum safety distance must be maintained between the countertop cut-out and the covering, since high temperatures can damage these materials.

If the covering is made of a combustible material (such as wood), the minimum safety distance ⑤ between the countertop cut-out and the wall covering must be 2" (50 mm).

For coverings made of non-combustible materials (such as metal, marble, granite, ceramic tiles) the minimum safety distance ⑤ between the countertop cut-out and the wall covering must be 2" (50 mm) minus the thickness of the covering.

For example: thickness of wall covering 9/16" (15 mm)

2" (50 mm) - 9/16" (15 mm) = minimum safety distance 1 3/8" (35 mm)

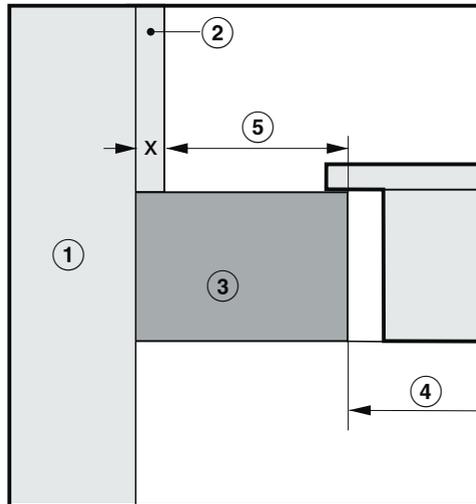


- ① Wall frame
- ② Wall covering dimension x = thickness of the wall covering
- ③ Countertop
- ④ Countertop cut-out
- ⑤ Minimum safety distance to
combustible materials 2" (50 mm)
non-combustible materials 2" (50 mm) – dimension x

Installation

Installation notes

Sealing strip between the ProLine element and the countertop

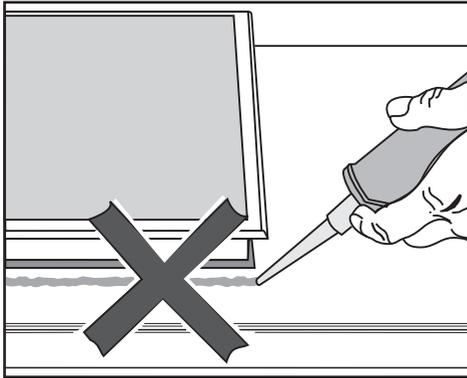

! Damage caused by incorrect installation.

Using sealant under the ProLine element could result in damage to the ProLine element and the countertop if the ProLine element ever needs to be removed for servicing.

Do not use sealant between the ProLine element and the countertop.


The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the countertop.

Sealing strip

Dismantling the ProLine element for service purposes may damage the sealing strip underneath the edge of the ProLine element.

Always replace the sealing strip before reinstalling the ProLine element.


Tiled countertop

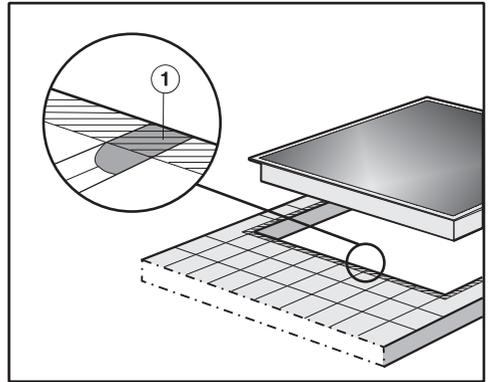

The grouting ① and the shaded area under the frame of the ProLine element must be smooth and flat so that the frame will sit evenly on the countertop and so that the sealing strip under the top edge of the ProLine element can provide an adequate seal with the countertop.

Installation

Countertop cut-out for several ProLine elements

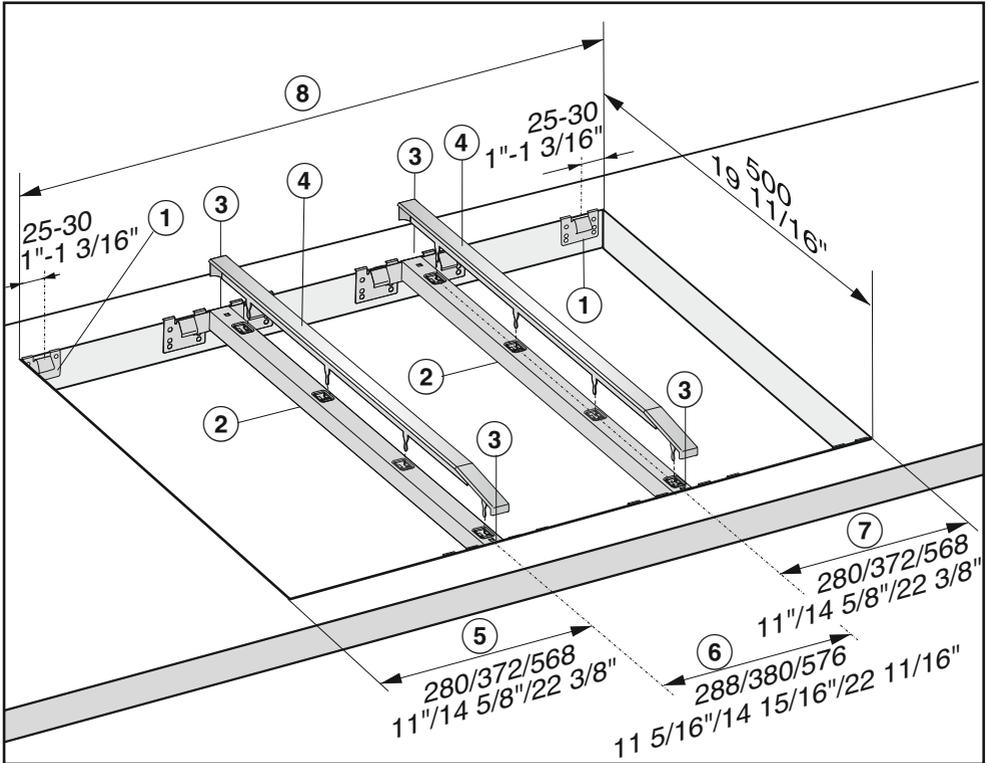

Example: 3 ProLine elements

- ① Spring clips
- ② Spacer bars
- ③ Gap between spacer bar and countertop
- ④ Cover
- ⑤ ProLine element width minus 5/16" (8 mm)
- ⑥ ProLine element width
- ⑦ ProLine element width minus 5/16" (8 mm)
- ⑧ Countertop cut-out

Calculating the countertop cut-out

The frames of the ProLine elements overlap the countertop at the outside right and left by $5/16"$ (8 mm) on each side.

- Add up the widths of the ProLine elements and subtract $5/8"$ (16 mm) from this sum.

Example:

$$11 \frac{5}{16}'' + 11 \frac{5}{16}'' + 14 \frac{15}{16}'' = 37 \frac{5}{8}'' - 5/8'' = 37''$$

$$(288 \text{ mm} + 288 \text{ mm} + 380 \text{ mm} = 956 \text{ mm} - 16 \text{ mm} = 940 \text{ mm})$$

The ProLine elements are $11 \frac{5}{16}''$, $14 \frac{15}{16}''$ or $22 \frac{11}{16}''$ (288 mm, 380 mm or 576 mm) wide depending on the model (see "Installation" – "Installation dimensions").

Spacer bars

When installing several ProLine elements, a spacer bar must be installed between the individual appliances. The position for securing the spacer bar will depend on the width of the ProLine element.

Installation with a countertop extractor

Please refer to the "Countertop extractor with ProLine elements" operating and installation instructions for details about countertop cut-out dimensions and installing spacer bars.

Installation

Installation



Preparing the countertop

- Make the countertop cut-out as shown in the illustration in “Installation dimensions” or as calculated (see “Installation” – “Installing several ProLine elements”). Remember to maintain the minimum safety distances (see “Installation” – “Safety distances”).
- Seal any cut surfaces on **wooden countertops** with a special varnish, silicone rubber, or resin to prevent the wood from swelling as a result of moisture. The sealant must be temperature-resistant.

Ensure that the sealant does not get on the top surface of the countertop.

The sealing strip ensures that the cooktop will sit securely in the cut-out without slipping. Any gap between the frame and countertop will become smaller over time.





Securing the spring clamps and spacer bars – wooden countertops

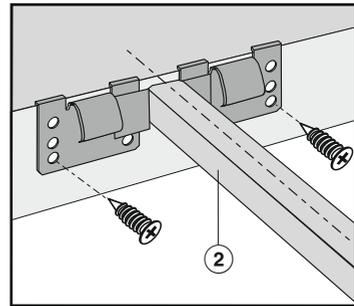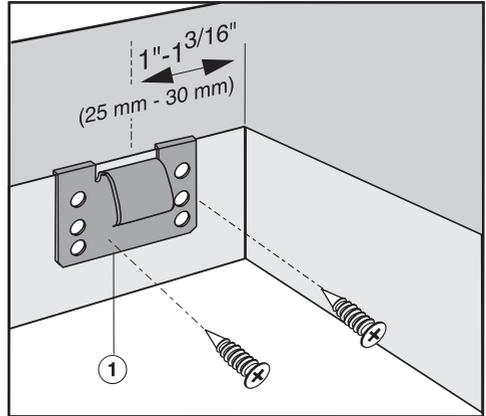

- Position the spring clips ① or spacer bars ② at the top edge of the cut-out in the positions shown in the illustrations.
- Secure the spring clips ① or spacer bars ② with the 1/8" x 1" (3.5 x 25 mm) wood screws supplied.

Securing the spring clamps and spacer bars – granite and marble countertops

You will need heavy-duty double-sided adhesive tape (not supplied with the appliance) to fasten the spring clips or spacer bars.

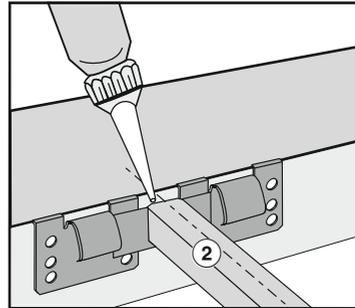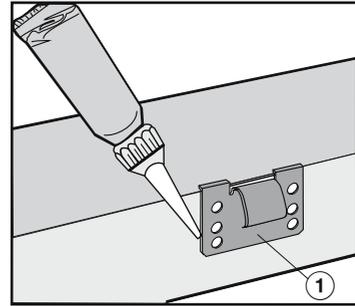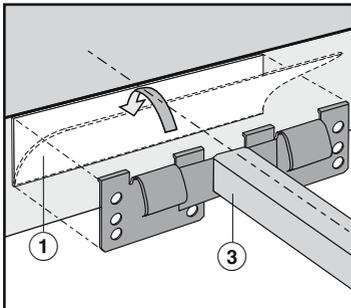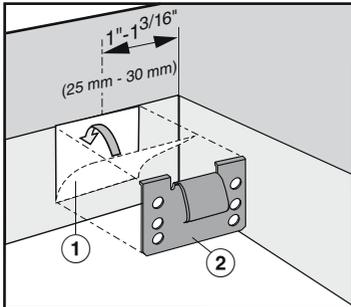

- Attach the adhesive tape (1) along the top edge of the cut-out in the positions shown in the cooktop illustration.
- Position the spring clips (2) or spacer bars (3) on the top edge of the cut-out and press them firmly into place.

- Apply silicone adhesive to the side edges and bottom edge of the spring clips (1) or spacer bars (2).
- Then fill the gap (5) between the spacer bars (2) and the countertop with silicone.

Installation

Installation with a countertop extractor

Please refer to the “Countertop extractor with ProLine elements” operating and installation instructions for details about installing the countertop extractor and the ProLine elements.

Installing the ProLine element


- Feed the power cord down through the cut-out in the countertop.
- Starting at the front, position the ProLine element in the cut-out.
- Using both hands, press down evenly on the sides of the ProLine element until it clicks into position. When doing this make sure that the seal of the appliance sits flush with the countertop on all sides. This is important to ensure an effective seal all round.

Do not use any additional sealant (e.g., silicone) on the ProLine element.

If during installation the seal around the frame does not sit flush with the countertop in the corners, the corner radius ($\leq R4$) can be carefully filed down to fit.

Installing several ProLine elements

- Push the built-in ProLine element to the side until the holes in the spacer bar can be seen.

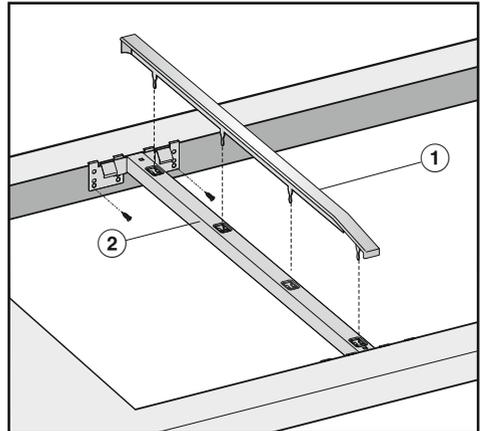

- Push the cover ① into the designated holes in the spacer bar ②.
- Starting at the front, position the next ProLine element in the countertop cut-out.
- Proceed as described previously.

Connecting the ProLine element

- Connect the ProLine element/elements to the domestic electrical supply.
- Check that each ProLine element is working.

Removing a ProLine element

If the ProLine element is not accessible from below, you will need a special tool to remove it.

- If the ProLine element is accessible from below, push it up to remove it. Push the back of the appliance out first.

Installation

Electrical connection

 Damage through improper work. Installation, repair, and maintenance work performed by unqualified persons can cause considerable danger to users.

Miele cannot be held liable for any damage arising as a result of such work.

Installation, repair and maintenance work should only be performed by a Miele-authorized qualified electrician in compliance with local regulations and the ANSI National Electrical Code/NFPA 70 in the United States or the Canadian Electric Code, CSA C22.1-02. in Canada.

 Danger of electric shock.

There is a risk of electric shock when performing installation, repair, and service work .

Before performing installation, repair, and service work, disconnect the power supply by either removing the fuse, shutting off the main power or manually “tripping” the circuit breaker.

 Danger of electric shock by missing or interrupted grounding. The appliance may be energized.

To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician.

 Damage by incorrect connection. If the household electrical supply is not suitable for the appliance, it can be damaged.

The voltage and frequency listed on the data plate must correspond with the household electrical supply to prevent damage to the appliance. Ensure that the connection data on the data plate match those of your electrical supply. Consult an electrician if in doubt.

For safety reasons, the cooktop may only be used when it has been fully installed into the countertop.

- Important – Save these instructions for the local electrical inspector’s use.

Connection

- Ensure that the connection data on the data plate (voltage, frequency, and fuse rating) match those of your electrical supply.

The data plate is located underneath the appliance.

The appliance is approved and ready for connection to a grounded connector with three connecting wires, sheathed by a flexible metal hose.

It must be connected to an assigned line in an approved connecting socket.

The appliance must be able to be disconnected from the power supply on all poles by disconnecting devices. When turned off, a contact distance of at least $\frac{1}{8}$ " (3 mm) must be present. The disconnecting devices are overcurrent protection elements and protective circuit breakers.

Black: Connect to L1 (hot)

Red: Connect to L2 (hot)

Green: Connect to GND (ground)

240 V, 60 Hz, 15 A

Make sure that the power outlet is accessible after the installation of the appliance.

Further information can be found on the included data plate.



WARNING:
THIS APPLIANCE MUST BE
GROUNDED

**Please have the model and serial number
of your appliance available when
contacting Customer Service.**

U.S.A.

Miele, Inc.

National Headquarters

9 Independence Way
Princeton, NJ 08540
www.mieleusa.com

Customer Support

Phone: 888-99-MIELE (64353)
info@mieleusa.com

International Headquarters

Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh
Germany

Canada

**Importer
Miele Limited**

Headquarters and Miele Centre

161 Four Valley Drive
Vaughan, ON L4K 4V8
www.miele.ca

Customer Care Centre

Phone: 1-800-565-6435
905-532-2272
customercare@miele.ca

CS 1327

en-US

M.-Nr. 09 054 720 / 01